
VS-1616D VGA Card Installation Sheet

 
The **VS-1616D** VGA I/O Card mounts in one of the 16 slots on the rear of the **VS-1616D** chassis. Slots are numbered from left to right.

<u>WARNING</u>: An input card must only be mounted in a slot designated for input cards (slots 1 to 4 and 9 to 12) and an output card must only be mounted in a slot designated for output cards (slots 5 to 8 and 13 to 16).

To install an I/O card:

- 1. Power off the **VS-1616D** and all devices connected to it.
- 2. Using a Phillips screwdriver, loosen the screws at the top and bottom of the blanking plate.
- 3. Remove the blanking plate from the slot and store it for possible future use.
- 4. Remove the new card from its shipping box and anti-ESD bag.
- 5. Holding the card by the lower handle,

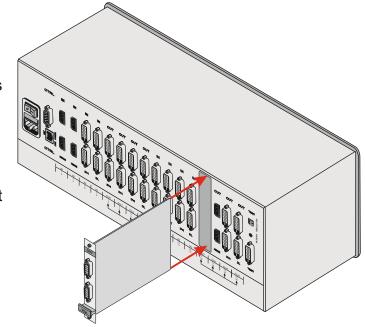



- 6. Slide the card into the chassis until the front of the card makes contact with the connector inside the chassis.
- Press the card firmly into the slot until the connector plate is flush with the rear panel of the chassis and the connector is fully seated.
- 8. Using a Phillips screwdriver, tighten the retaining screws at the top and bottom of the card to secure it to the chassis.
- Power on the VS-1616D and follow the procedure in the V1616D User Manual (see Section 9) to configure the new card.
- 10. Power on the peripheral devices.

