

Kramer Electronics, Ltd.



USER MANUAL

Models:

TP-41, Component – S/PDIF Line Transmitter

TP-42, Component – S/PDIF Line Receiver

Contents

1	Introduction	1
2	Getting Started	1
2.1	Quick Start	1
3	Overview	3
3.1	About the TP-41 / TP-42	3
3.2	Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)	3
3.3	Recommendations for Achieving the Best Performance	4
4	Your Component – S/PDIF Line Transmitter and Line Receiver	4
4.1	Your TP-41 Component – S/PDIF Line Transmitter	4
4.1.1	Your TP-41 Component – S/PDIF Line Transmitter Topside	5
4.1.2	Your TP-41 Component – S/PDIF Line Transmitter Underside	6
4.2	Your TP-42 Component – S/PDIF Line Receiver	7
4.2.1	Your TP-42 Component – S/PDIF Line Receiver Topside	7
4.2.2	Your TP-42 Component – S/PDIF Line Receiver Underside	8
5	Connecting a Component – S/PDIF Distribution System	9
5.1	Wiring the CAT 5 LINE IN / LINE OUT RJ-45 Connectors	10
6	Technical Specifications	11

Figures

Figure 1:	TP-41 Component – S/PDIF Line Transmitter	5
Figure 2:	TP-41 Component – S/PDIF Line Transmitter (Top Side Panel)	5
Figure 3:	TP-41 Component – S/PDIF Line Transmitter (Lower Side Panel)	5
Figure 4:	TP-41 Component – S/PDIF Line Transmitter Underside	6
Figure 5:	TP-42 Component – S/PDIF Line Receiver	7
Figure 6:	TP-42 Component – S/PDIF Line Receiver (Top Side Panel)	7
Figure 7:	TP-42 Component – S/PDIF Line Receiver (Lower Side Panel)	7
Figure 8:	TP-42 Component – S/PDIF Line Receiver Underside	8
Figure 9:	Component – S/PDIF Distribution System up to 300ft (100m) UTP Cable	9
Figure 10:	CAT 5 PINOUT	10

Tables

Table 1:	TP-41 Component – S/PDIF Line Transmitter Features	5
Table 2:	TP-41 Component – S/PDIF Line Transmitter Underside Features	6
Table 3:	TP-42 Component – S/PDIF Line Receiver Topside Features	8
Table 4:	TP-42 Component – S/PDIF Line Receiver Underside Features	8
Table 5:	CAT 5 PINOUT	10
Table 6:	Technical Specifications of the TP-41 / TP-42	11

1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront the video, audio, presentation, and broadcasting professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 1,000-plus different models now appear in 11 groups¹ that are clearly defined by function.

Congratulations on purchasing your Kramer TOOLS **TP-41 Component – SPDIF Line Transmitter** and Kramer TOOLS **TP-42 Component – SPDIF Line Receiver**, which are particularly ideal for high quality home cinema.

The **TP-41** and **TP-42** are also suitable for utilizing existing UTP cabling that results in an efficient, fast and uncluttered environment for:

- Studios, airports, offices and hospitals
- Security and military applications

The package includes the following items:

- **TP-41** and/or **TP-42**
- Power supply², and this user manual³

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables⁴

2.1 Quick Start

This quick start chart summarizes the basic setup and operation steps.

1 GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Matrix Switchers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Twisted-Pair Solutions; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters; GROUP 11: Sierra Products


2 A separate power supply is included with each product. As an option, you can purchase the Kramer VA-50P 6 Port Universal 12-Volt Power Supply, enabling you to supply power to up to 6 Kramer devices that require 12VDC

3 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com>

4 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

Step 1: Connect the input and the outputs - see section 5

- 1 Connect the component video and audio sources to the transmitter.
- 2 Connect the receiver to the component video and audio acceptors.
- 3 Connect the transmitter to the receiver via a long CAT 5 cable.

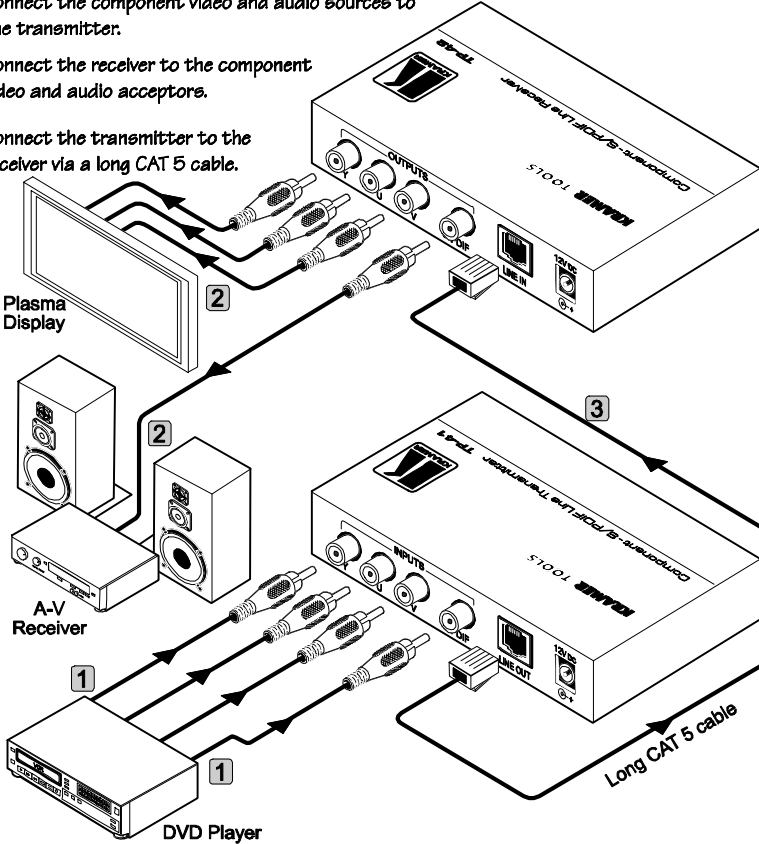

Step 2: Connect the power

Step 3: Adjust the levels on the machine underside - see section 5

<p>TP-41</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>LEVELS V U Y</p> </div> <div style="text-align: center;"> <p>AUDIO LEVEL</p> </div> </div>	<p>TP-42</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>V LEVEL</p> </div> <div style="text-align: center;"> <p>V EQ</p> </div> <div style="text-align: center;"> <p>U LEVEL</p> </div> <div style="text-align: center;"> <p>U EQ</p> </div> <div style="text-align: center;"> <p>Y LEVEL</p> </div> <div style="text-align: center;"> <p>Y EQ</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> <p>AUDIO</p> <p>EQ LEVEL</p> </div>
--	--

To trim the level or EQ, insert a screwdriver into the appropriate hole and carefully rotate it

3 Overview

This section describes:

- A summary of the TP-41 / TP-42, see section 3.1
- Using shielded twisted pair (STP) / unshielded twisted pair (UTP), see section 3.2
- Recommendations for achieving the best performance, see section 3.3

3.1 About the TP-41 / TP-42

Using the **TP-41 Component – S/PDIF Line Transmitter** with the **TP-42 Component – S/PDIF Line Receiver** constitutes a *Component – S/PDIF Line transmitter / receiver system*. The **TP-42** receives the CAT 5 signal, decodes it and simultaneously distributes it to the YUV output.

The **TP-41 Component – S/PDIF Line Transmitter** includes:

- A YUV¹ input on three RCA connectors
- A digital audio input (S/PDIF) on an RCA connector
- A CAT 5 output for signal transmission to the **TP-42**
- Individual level controls for the Y, U, and V signals
- Audio level control

The **TP-42 Component – S/PDIF Line Receiver** includes:

- A YUV¹ output on three RCA connectors
- A digital audio output (S/PDIF) on an RCA connector
- A CAT 5 input for signal reception from the **TP-41**
- Individual level and EQ. controls for the Y, U, and V signals
- Audio level and EQ. controls

Kramer twisted pair adapters are an excellent way to solve remote monitoring requirements without using more costly coaxial cable or fiber, or wireless transmission systems.

3.2 Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)

The decision whether to use shielded twisted pair (STP) cable or unshielded twisted pair (UTP) cable depends on the nature of the application.

It is recommended that in applications with high interference, shielded twisted pair (STP) cable is used. However, the shield itself does create a capacitance that degrades the frequency response of the machines. For shorter

¹ Also known as Y, B-Y, R-Y, or Y, Pb, Pr

distances, of 50m or so, shielded twisted pair (STP) cable is preferred because it provides protection from interference (degradation is not apparent).

For long range applications, unshielded twisted pair (UTP) cable is preferred. However, the unshielded twisted pair (UTP) cable should be installed far away from electric cables, motors and so on, which are prone to create electrical interference.

In general, it is recommended to use shielded twisted pair (STP) skew-free Kramer cable **BC-SXTP** for transmitting VGA signals, and shielded twisted pair (STP) non-skew-free Kramer **BC-STP** cable for digital signals.

3.3 Recommendations for Achieving the Best Performance

Achieving the best performance means:

- Connecting only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoiding interference from neighboring electrical appliances that may adversely influence signal quality and positioning your **TP-41** and/or **TP-42** in a location free from moisture and away from excessive sunlight and dust



Caution – No operator-serviceable parts inside unit.

Warning – Use only the Kramer Electronics input power wall adapter that is provided with this unit¹.

Warning – Disconnect power and unplug unit from wall before installing or removing device or servicing unit.

4 Your Component – S/PDIF Line Transmitter and Line Receiver

This section describes the:

- **TP-41 Component – S/PDIF Line Transmitter**, see section 4.1
- **TP-42 Component – S/PDIF Line Receiver**, see section 4.2

4.1 Your TP-41 Component – S/PDIF Line Transmitter

For a description of the **TP-41**:

- Topside, see section 4.1.1
- Underside, see section 4.1.2

¹ For example: model number AD2512C, part number 2535-000251

4.1.1 Your TP-41 Component – S/PDIF Line Transmitter Topside

Figure 1, Figure 2, Figure 3 and Table 1 define the **TP-41**:

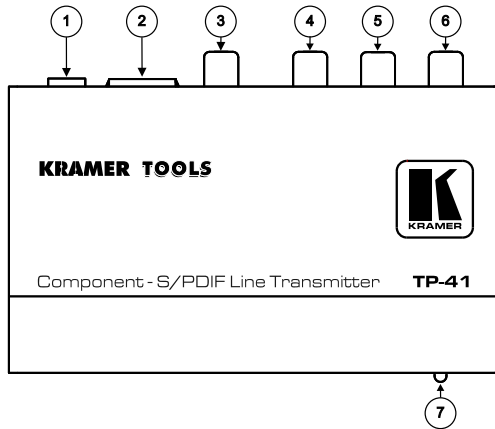


Figure 1: TP-41 Component – S/PDIF Line Transmitter

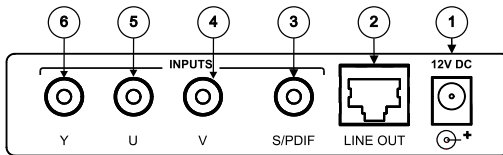


Figure 2: TP-41 Component – S/PDIF Line Transmitter (Top Side Panel)

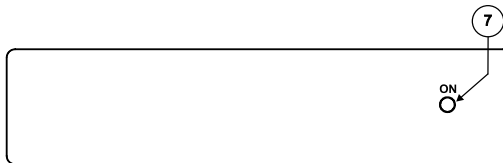


Figure 3: TP-41 Component – S/PDIF Line Transmitter (Lower Side Panel)

Table 1: TP-41 Component – S/PDIF Line Transmitter Features

#	Feature	Function	
1	12V DC	+12V DC connector for powering the unit	
2	LINE OUT RJ-45 Connector	Connects to the LINE IN connector on the TP-42 ¹	
3	INPUTS	S/PDIF RCA Connector	Connects to the digital audio source
4		V RCA Connector	
5		U RCA Connector	
6	Y RCA Connector	Connects to the component video source	
7	ON LED		Illuminates when receiving power

¹ Using a straight pin to pin UTP cable with RJ-45 connectors at both ends (the PINOUT is defined in Table 5 and Figure 10)

4.1.2 Your TP-41 Component – S/PDIF Line Transmitter Underside

Figure 4 and Table 2 define the underside of the **TP-41**:

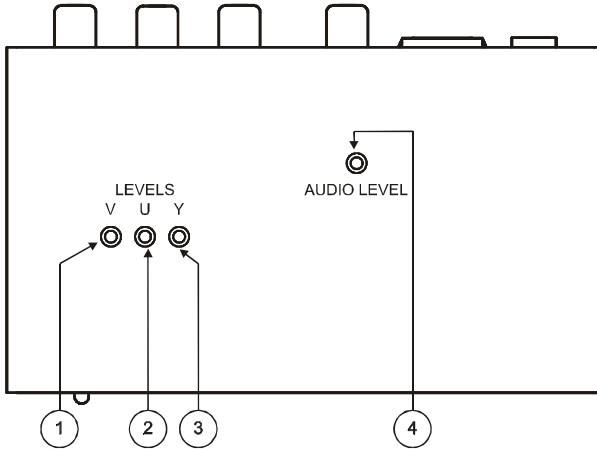


Figure 4: TP-41 Component – S/PDIF Line Transmitter Underside

Table 2: TP-41 Component – S/PDIF Line Transmitter Underside Features

#	Feature	Function
1	V LEVEL Trimmer	Adjusts ¹ the V output signal level
2	U LEVEL Trimmer	Adjusts ¹ the U output signal level
3	Y LEVEL Trimmer	Adjusts ¹ the Y output signal level
4	AUDIO LEVEL Trimmer	Adjusts ¹ the volume

¹ Insert a screwdriver into the small hole and carefully rotate it, trimming the level

4.2 Your TP-42 Component – S/PDIF Line Receiver

For a description of the **TP-42**:

- Topside, see section 4.2.1
- Underside, see section 4.2.2

4.2.1 Your TP-42 Component – S/PDIF Line Receiver Topside

Figure 5, Figure 6, Figure 7 and Table 3 define the **TP-42**:

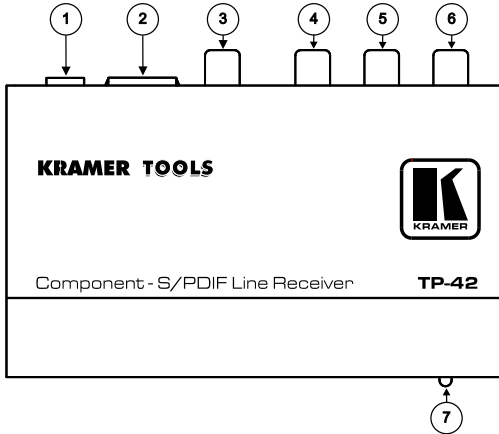


Figure 5: TP-42 Component – S/PDIF Line Receiver

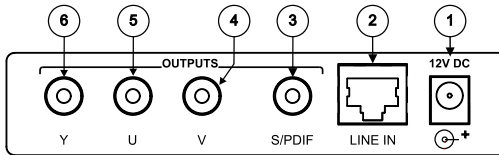


Figure 6: TP-42 Component – S/PDIF Line Receiver (Top Side Panel)

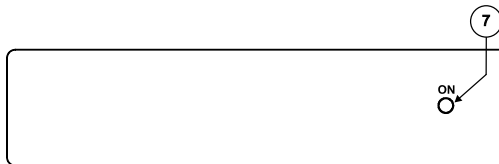


Figure 7: TP-42 Component – S/PDIF Line Receiver (Lower Side Panel)

Table 3: TP-42 Component – S/PDIF Line Receiver Topside Features

#	Feature	Function	
1	12V DC	+12V DC connector for powering the unit	
2	LINE IN RJ-45 Connector	Connects to the LINE OUT connector on the TP-41 ¹	
3	OUTPUTS	S/PDIF RCA Connector	Connects to the digital audio acceptor
4		V RCA Connector	
5		U RCA Connector	
6		Y RCA Connector	
7	ON LED	Illuminates when receiving power	

4.2.2 Your TP-42 Component – S/PDIF Line Receiver Underside

Figure 8 and Table 4 define the underside of the TP-42:

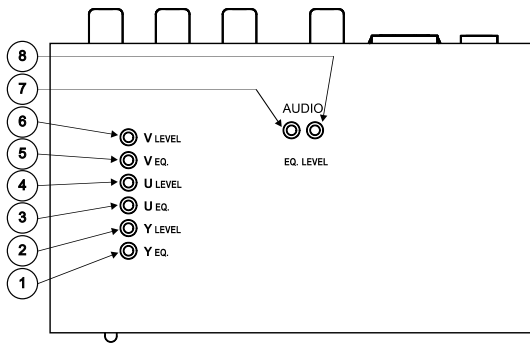


Figure 8: TP-42 Component – S/PDIF Line Receiver Underside

Table 4: TP-42 Component – S/PDIF Line Receiver Underside Features

#	Feature	Function
1	Y EQ. Trimmer	Adjusts ² the cable compensation equalization level for output Y
2	Y LEVEL Trimmer	Adjusts ² the Y output signal level
3	U EQ. Trimmer	Adjusts ² the cable compensation equalization level for output U
4	U LEVEL Trimmer	Adjusts ² the U output signal level
5	V EQ. Trimmer	Adjusts ² the cable compensation equalization level for output V
6	V LEVEL Trimmer	Adjusts ² the V output signal level
7	AUDIO EQ. Trimmer	Adjusts ² the audio equalization level
8	AUDIO LEVEL Trimmer	Adjusts ² the volume

1 Using a straight pin to pin UTP cable with RJ-45 connectors at both ends (the PINOUT is defined in Table 5 and Figure 10)

2 Insert a screwdriver into the small hole and carefully rotate it, trimming the level

5 Connecting a Component – S/PDIF Distribution System

To configure a **TP-41 / TP-42** Component – S/PDIF distribution system (for example, for high quality home cinema), as Figure 9 illustrates, do the following:

1. On the **TP-41**, connect a component video source (for example, a DVD player) to the:
 - Y, U, and V RCA (component video) INPUT connectors
 - S/PDIF (digital audio) RCA INPUT connector
2. On the **TP-42**, connect the:
 - Y, U, and V RCA (component video) OUTPUT connectors to a component acceptor (for example, a plasma monitor)
 - S/PDIF (digital audio) RCA OUTPUT connector to an AV-Receiver
3. Connect the *LINE OUT* connector of the **TP-41** to the *LINE IN* connector of the **TP-42**, via UTP cabling (maximum range of up to 300ft (100m)).
4. On each **TP-41 / TP-42** unit:
 - Connect a 12V DC power adapter to the power socket and connect the adapter to the mains electricity¹
 - If necessary, adjust² the appropriate level(s), by inserting a screwdriver into the small hole and carefully rotating it

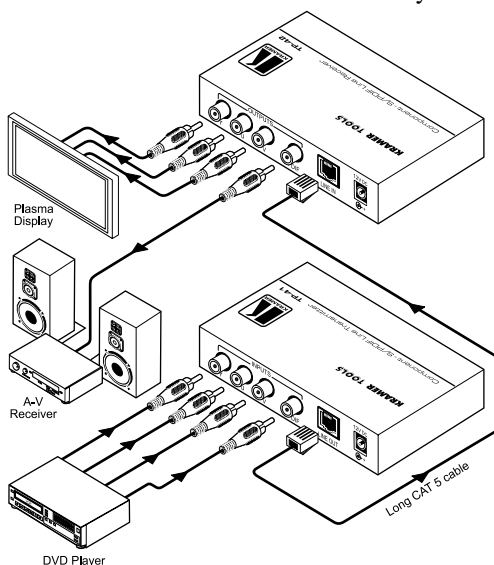


Figure 9: Component – S/PDIF Distribution System up to 300ft (100m) UTP Cable

¹ Note, the TP-41, TP-42 does not have the power connect feature

² On the TP-41, adjust the audio level and/or the Y, U, and V levels. On the TP-42, adjust the audio level, the audio EQ., the Y, U, and V levels, and/or the Y, U, and V EQ.


5.1 Wiring the CAT 5 LINE IN / LINE OUT RJ-45 Connectors

Table 5 and Figure 10 define the CAT 5 PINOUT, using a straight pin to pin cable with RJ-45 connectors:

Table 5: CAT 5 PINOUT

EIA /TIA 568A		EIA /TIA 568B	
PIN	Wire Color	PIN	Wire Color
1	Green / White	1	Orange / White
2	Green	2	Orange
3	Orange / White	3	Green / White
4	Blue	4	Blue
5	Blue / White	5	Blue / White
6	Orange	6	Green
7	Brown / White	7	Brown / White
8	Brown	8	Brown
Pair 1		Pair 1	
Pair 1	4 and 5	Pair 1	4 and 5
Pair 2		Pair 2	
Pair 2	3 and 6	Pair 2	1 and 2
Pair 3		Pair 3	
Pair 3	1 and 2	Pair 3	3 and 6
Pair 4		Pair 4	
Pair 4	7 and 8	Pair 4	7 and 8

Figure 10: CAT 5 PINOUT

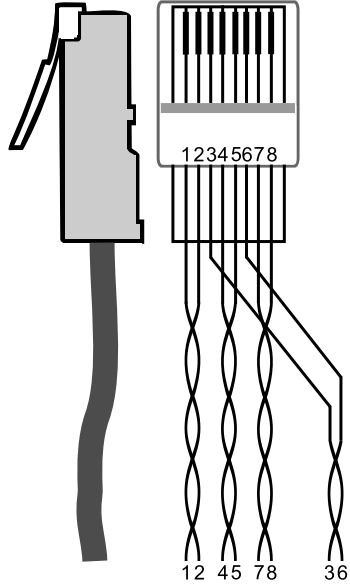

6 Technical Specifications

Table 6 defines the technical specifications¹:

Table 6: Technical Specifications² of the TP-41 / TP-42

INPUTS:	TP-41: 1 set of component video (Y, U, V) on RCA connectors 1 S/PDIF (digital audio) on an RCA connector	
	TP-42: 1 RJ-45 CAT 5 shielded connector (Line In)	
OUTPUTS:	TP-41: 1 RJ-45 CAT 5 shielded connector (Line Out)	
	TP-42: 1 set of component video (Y, U, V) on RCA connectors 1 S/PDIF (digital audio) on an RCA connector	
MAX. OUTPUT LEVEL:	VIDEO: 2.1Vpp	AUDIO: 2.1Vpp (S/PDIF)
BANDWIDTH (-3dB):	VIDEO: 57MHz ³ , Fully Loaded	AUDIO: 53.4MHz ³
DIFF. GAIN:	0.15%	
DIFF. PHASE:	0.68 Deg	
K-FACTOR:	0.8%	
S/N RATIO:	VIDEO: 78.1dB	AUDIO: 78.4dB
CROSSTALK (all hostile):	VIDEO: -55.5dB	AUDIO: -50.5dB
CONTROLS:	TP-41: YUV Level: -1.7dB to +0.7dB S/PDIF Level: -1.9dB to +0.4dB	
	TP-42: YUV Level: -0.7dB to +0.8dB YUV Equalization: 0 to +7.5dB S/PDIF Level: -0.5dB to +1.2dB S/PDIF Equalization: 0 to +7.8dB	
COUPLING:	VIDEO: DC	AUDIO: DC
POWER SOURCE:	TP-41: 12V DC, 95mA	
	TP-42: 12V DC, 82mA	
DIMENSIONS:	TP-41 / TP-42: 12cm x 7.5cm x 2.5cm (4.7" x 2.95" 0.98", W, D, H)	
WEIGHT:	TP-41 / TP-42: 0.3kg (0.67lbs) approx.	
ACCESSORIES:	Power Supply	

1 Specifications for 100m of CAT5 UTP cable, unless otherwise specified

2 Specifications are subject to change without notice

3 At 30m

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the Web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed, or on which the WARRANTY VOID IF TAMPERED sticker has been torn, reattached, removed or otherwise interfered with.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on your product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B Unintentional radiators"

CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☒ Use the supplied DC power supply to feed power to the machine.
- ☒ Please use recommended interconnection cables to connect the machine to other components.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.



Caution

Safety Warning:

Disconnect the unit from the power supply before opening/servicing.



Kramer Electronics, Ltd.

Web site: www.kramerelectronics.com

E-mail: info@kramerelectronics.com

P/N: 2900-000041 REV 4