


# DXE-CAT-RX3 Series

HDMI HDBaseT CAT Extender with Audio De-embedding, Relays, 2x35W Amplifier, & IP Control

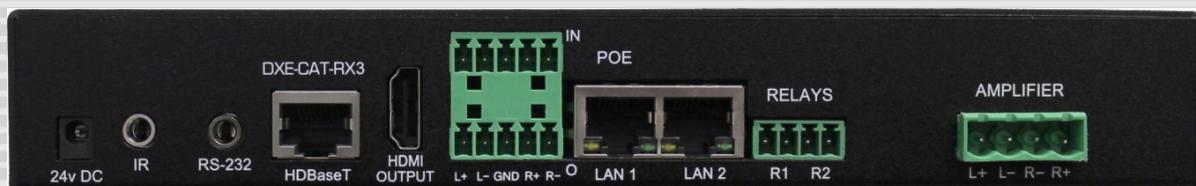

## SAFETY INSTRUCTIONS

Please review the following safety precautions. If this is the first time using this model, then read this manual before installing or using the product. If the product is not functioning properly, please contact your local dealer or Aurora for further instructions.



The lightning symbol in the triangle is used to alert you to the presence of dangerous voltage inside the product that may be sufficient to constitute a risk of electric shock to anyone opening the case. It is also used to indicate improper installation or handling of the product that could damage the electrical system in the product or in other equipment attached to the product.



The exclamation point in the triangle is used to alert you to important operating and maintenance instructions. Failure to follow these instructions could result in injury to you or damage to the product.



Be careful with electricity:

- **Power outlet:** To prevent electric shock, be sure the electrical plug used on the product power cord matches the electrical outlet used to supply power to the Aurora product. Use only the power adapter and power connection cables designed for this unit.
- **Power cord:** Be sure the power cord is routed so that it will not be stepped on or pinched by heavy items.
- **Lightning:** For protection from lightning or when the product is left unattended for a long period, disconnect it from the power source.



Also follow these precautions:

- **Ventilation:** Do not block the ventilation slots if applicable on the product or place any heavy object on top of it.  
Blocking the air flow could cause damage. Arrange components so that air can flow freely. Ensure that there is adequate ventilation if the product is placed in a stand or cabinet. Put the product in a properly ventilated area, away from direct sunlight or any source of heat.
- **Overheating:** Avoid stacking the Aurora product on top of a hot component such as a power amplifier.
- **Risk of Fire:** Do not place unit on top of any easily combustible material, such as carpet or fabric.
- **Proper Connections:** Be sure all cables and equipment are connected to the unit as described in this manual.
- **Object Entry:** To avoid electric shock, never stick anything in the slots on the case or remove the cover.
- **Water Exposure:** To reduce the risk of fire or electric shock, do not expose to rain or moisture.
- **Cleaning:** Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- **ESD:** Handle this unit with proper ESD care. Failure to do so can result in failure.

### FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interferences received, including interference that may cause undesired operation.

### Trademarks

*All trademarks in this document are the properties of their respective owners.*

## TABLE OF CONTENTS

<b>PACKAGE CONTENTS</b> .....	<b>2</b>
<b>INTRODUCTION</b> .....	<b>3</b>
About.....	3
Features.....	4
Front Panel DXE-CAT-RX3 SERIES .....	5
Rear Panel DXE-CAT-RX3 SERIES .....	6
<b>IR EXTENDERS</b> .....	<b>7</b>
IR Connections .....	7
IR Jack Pinout.....	7
<b>IP SETUP</b> .....	<b>8</b>
Introduction .....	8
Default IP .....	8
General Settings .....	9
Network Settings.....	10
Port Settings .....	11
Port Settings (Manual).....	13
Port Settings (Push to Variable).....	14
Port Settings (Telnet Server).....	15
Port Settings (Telnet Client).....	16
Port Settings (Push to Port).....	17
Port Settings (Pass-Through) .....	18
<b>SERIAL COMMANDS</b> .....	<b>19</b>
RS-232 Commands .....	19
<b>IP COMMANDS</b> .....	<b>21</b>
TCP/RPC Commands.....	21
TCP/RPC Command Usage.....	22
<b>WEB SERVER</b> .....	<b>23</b>
<b>CONNECTOR PIN DEFINITION</b> .....	<b>24</b>
HDMI.....	24
CAT5e/6/7 .....	24
<b>APPENDIX 1 Troubleshooting</b> .....	<b>25</b>
<b>APPENDIX 2 Firmware Update</b> .....	<b>26</b>
<b>APPENDIX 3 Technical Specifications</b> .....	<b>27</b>
<b>APPENDIX 4 Cabling</b> .....	<b>29</b>
<b>APPENDIX 5 Warranty</b> .....	<b>30</b>

## PACKAGE CONTENTS

Please make sure the following items are included within your package. Contact your dealer if any items are missing or damaged.

### **DXE-CAT-RX3 / DXE-CAT-RX3C**

- DXE-CAT-RX3 or DXE-CAT-RX3C x 1
- DXE-CAT-E1 Wall / Desk Mount Ears x 2

Note: Power supply sold separately unless ordered as a set with transmitter package.

### **DXE-CAT-RX3-A / DXE-CAT-RX3 SERIES**

- DXE-CAT-RX3-A or DXE-CAT-RX3C-A x 1
- DXE-CAT-E1 Wall / Desk Mount Ears x 2
- PS0077-1 24V DC 90 Watt Power Adapter x 1

### **Optional Accessories**

- PS0053-1 or PS0080-1 24v DC 15.5 Watt power Supply
- PS0062-1 24v DC 24 Watt power Supply
- IR Receiver CA0026-1



- IR Emitter CA0012-1



- IR Blaster CA0049-1
- RS-232 Adaptor (3.5mm TRS to FEMALE DB9 2-TX 3-RX) CA0052-F2T3R
- RS-232 Adaptor (3.5mm TRS to FEMALE DB9 3-TX 2-RX) CA0052-F3T2R
- RS-232 Adaptor (3.5mm TRS to MALE DB9 2-TX 3-RX) CA0052-M2T3R
- RS-232 Adaptor (3.5mm TRS to MALE DB9 3-TX 2-RX) CA0052-M3T2R



Note: Go to [www.aurorammm.com](http://www.aurorammm.com) for latest manual and firmware

# INTRODUCTION

## About

The DXE-CAT-RX3, DXE-CAT-RX3-A, DXE-CAT-RX3C, & DXE-CAT-RX3C-A are a part of the growing Digital Xtreme Series. This product is different than the typical CAT extender found on the market today as it not only breaks the price barrier but the feature and usability aspects as well. Rear mounted connectors provide for a clean professional installation.

The DXE-CAT-RX3 Series is designed to complement the Digital Xtreme Series of HDBaseT transmitters such as the DXW-2 Series HDBaseT wall plates, DXE-CAT-TX1, DXE-CAT-TX2, DXM Matrixes, etc. The built in relays are perfect for screen control and the audio amplifier versions will fill the room with sound when used with the Aurora SKR-22T 360° sound field ceiling tile speaker. A low cost, highly integrated solution for rolling carts, podiums, and credenzas is possible with the DXE-CAT family.

Being able to go the distance is important too, and HDBaseT technology helps achieve that. With a single CAT cable, the DXE-CAT can go up to 328ft 1080p 60Hz 48bit color depth, 500ft 1080p 60Hz 24bit (CAT 6), or 600ft 1080p 60Hz 24bit (CAT 6A Shielded) depending on model and cable. In addition, the RS-232, IR, & LAN can be sent over the same cable bi-directionally.

Another industry first is the ability to serve up web control pages via LAN to any browser-enabled device (ex. iPad®, iPhone®, PC, Android®) to take control of the RS-232, IR, and LAN. This is done with the Aurora LXC control system engine inside, so not only is the DXE-CAT an HDMI extender receiver unit, but a fully functional autonomous control system that can operate stand-alone or as a port-expansion for any control system on the market.

Aurora once again is setting the bar for form and functionality at a competitive price.

## Features

- ◆ Receives HDMI up to 1080p 60Hz 48bit 330ft over one CAT 5e/6/7 cable\*
- ◆ Receives HDMI up to 1080p 60Hz 24bit 500ft over one CAT 6 cable\*
- ◆ Receives HDMI up to 1080p 60Hz 24bit 600ft over one CAT 6A Shielded cable\*
- ◆ HDCP Compliant
- ◆ 2x35 Watt Amplifier (“-A“ Version)
- ◆ Differential Line Input / Output for Audio Mixing & HDMI Audio De-Embedding
- ◆ Volume Control
- ◆ Audio Functions Remotely Controlled via Transmitter Unit or Optional IP.
- ◆ IP Control Engine (C Version)
- ◆ Bi-directional RS-232, & IR & LAN
- ◆ Two Relays for Screen Control
- ◆ Rear Mounted Connectors for Clean Installation
- ◆ Status LED for All Connections on Front

*\* Refer to Technical Specifications Section.*

**Warning: Do not plug RJ-45 HDBaseT output to non-HDBaseT complaint devices or damage may occur to either product.**

## Front Panel DXE-CAT-RX3 SERIES




### Front LED Indicators

- IR Out – Blinks when emitting IR to device from IR Port. It is normal to be lit if nothing is plug into IR port.
- IR In – Blinks when receiving IR from IR port. It is normal to be lit if nothing is plug into IR port.
- TX – RS-232 Transmit. Blinking rate and intensity will vary with baud rate.
- RX – RS-232 Receive. Blinking rate and intensity will vary with baud rate.
- HDBT – Lights when HDBaseT RJ-45 has proper connection between an RX/TX pair. Blinks when in sleep mode.
- HDMI – Will light solid if HDMI is plugged in on both RX/TX and HDCP is present. If no HDCP LED will blink.
- POWER – Lights green when power is present.
- STATUS – Will blink steady if unit is working properly.

### Front Pin-hole buttons

- Reset – Use paper clip or similar object to reset unit by pushing into hole.
- Setup – For DXE-CAT-RX3C & DXE-CAT-RX3C-A models only.

## Rear Panel DXE-CAT-RX3 SERIES

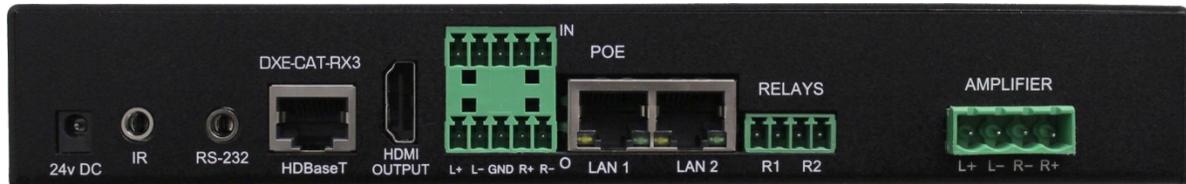

### Rear Connections

- 24V DC – Power connector for 15 / 24 / 90watt 24VDC power supply. Note only 1 supply is required to power both units. Either side can send power to the other unit. Note if LAN POE is utilized for the non-amplifier models the 24VDC supply is not required.
- IR – Plug IR receiver or emitter into this port. It will auto detect the mode of operation required.
- RS-232 – Connect RS-232 device up to 115k baud.
- HDBaseT – Connect CAT 5e/6/7 cable. Shield cable is not necessary unless the environment has a lot of electrically noise.
- HDMI Output – Plug HDMI cable from destination device like an LCD display. Note the HDMI cable should be rated for the bandwidth you are using.
- Line In/Out – Line level input left and right on the top and line level output from the HDMI on the bottom. The input and output are balanced capable. The line input can be mixed with the line output for applications like wireless microphone receiver or paging. Using RS-232 commands locally or remotely the volume and mixing can be controlled. For the “L” models IP commands can be utilized.
- LAN1/2 – 10/100 LAN connections. LAN1 can use POE from a POE switch to power both the RX and TX units. These ports are a switch. Only 1 LAN port should be connected to another switch. Note on the Amplifier versions POE will not work. External 60W 24V DC supply must be used.
- Relays – 2 Normally Open Relays capable of handling up to 24V DC at 2A.
- Amplifier – Left (L+, L-) and Right (R+, R-) 4/8 Ohm Outputs capable of 35 Watts per channel. Amplifier version must use the 90 Watt desktop 24V DC power Supply.

*Note: Some POE switch do not supply the full 15.4watts per port. Verify the total power rating of the switch. It should be at least 15.4W x (number of ports).*

## IR EXTENDERS

IR Blaster



IR Receiver



### IR Connections

The DXE-CAT Series has the ability to auto detect on the IR port if a receiver or a blaster / emitter is connected.


**IR Blaster / Emitter:** Plug in an IR blaster to emit all IR command signals received from the IR receiver to control the associated devices with built-in IR sensor

**IR Receiver:** Plug in an IR receiver to receive all IR command signals from the IR remote controls of the associated devices. Note if you are not using an approved Aurora branded receiver make certain you do not exceed the 5v signal level limitation as some devices use 12v. Failure to do so will result in damage.

When the DXE-CAT-TX2L is set for manual the only way to send IR commands is using IR files loaded on the ftp of the unit in the IR directory. Aurora IR files (.wir) are available for download on the Aurora website. In addition, IR files learned from NX or QX control devices can be utilized.

### IR Jack Pinout

IR Blaster

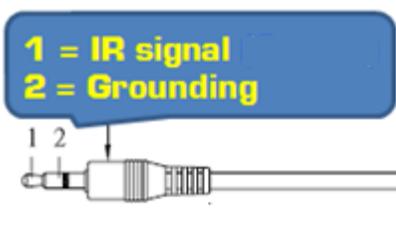

IR Receiver



**Emitters must be mono plug or have ring and sleeve tied to ground. Receivers must be stereo plug. Ring is 5v power. If using another brand receiver, note carrier frequency must be stripped and IR signal cannot exceed 5v or damage to port may occur.**

# IP SETUP

## Introduction

The IP function allows the DXE-CAT-RX3C and DXE-CAT-RX3C-A to be controlled via LAN. In addition, the units can be set up with built in setup pages and even serve up web pages to remote devices on the network for control.

## Default IP

The default IP out of the box is 192.168.1.10 static. Make certain to change the IP on the unit at a time or you will get collisions on the network. Each device must have a unique IP address. DHCP can be used but it is recommended to issue IP address based on the MAC address. This assures the DHCP does not reassign the IP address at a later time causing issues. Keep in mind the processor is on the TX unit so only the TX needs to be connected when you are doing the initial setup although having the RX will not affect the process and may be necessary only if the LAN is connected at the RX side.

To access the settings via web browser use the units IP address/setup (ex. 192.168.1.10/setup) The default user name is admin and the default password is admin.

In the event you lose your settings press and hold the setup button on the DXE-CAT-RX3C / RX3C-A for 3 seconds. This will restore the unit back to factory default.

## Usage

Only serial port 1 will be used to communicate to the RX3 at a baud rate of 115200. This baud rate will be fixed but the ports for the RX3 must still be set up accordingly to the correct baud rate to match the device they are connected to.

The `!30PTL,x<cr>` command must be sent first to pick which port (1 = HDBaseT or 2 = Local RS-232) before sending a serial command out a port.

## General Settings

DXE-LXC Current Settings	
<b>Status:</b>	IP Address : <b>192.168.1.10</b> Hostname : <b>DXELXC</b> MAC Address : <b>00:11:02:b0:00:00</b>  Serial Number : <b>00000000</b> Firmware Revision : <b>99.08</b>
<b>Change Password:</b>	<input type="password"/> Enter new password <input type="password"/> Verify new password <input type="button" value="Change Password"/>
<b>Reset Factory Defaults:</b>	<input type="button" value="Restore Defaults"/>
<b>Firmware Update Mode:</b>	<input type="button" value="Force Update"/>
<b>Restart DXE-LXC:</b>	<input type="button" value="Reboot"/>

**Status** - Shows the current IP Address, Hostname, Mac Address, Serial number, and the firmware revision.

**Change Password** – The default password is admin. It is recommend to change the password for better security on the network especially if it is not private.

**Reset Factory Defaults** – Once pressed a confirm screen will appear. Once confirmed the unit will restore the default IP address and password.

**Firmware Update Mode** – This but forces the unit into an update mode. It is recommended to use the firmware update tool LXupdate which is available on the Aurora website.

**Restart DXE-LXC** – Remotely reboots the unit.

## Network Settings

**DXE-LXC** by **Aurora Multimedia**

GENERAL SETTINGS NETWORK SETTINGS PORT SETTINGS

### DXE-LXC Network Setup

**Current Network Settings:** IP Address : **192.168.1.10**  
 Subnet Mask : **255.255.0.0**  
 Gateway : **192.168.1.1**  
 Hostname : **DXELXC**  
 MAC Address : **00:11:02:b0:00:00**

**Network Configuration:** DHCP  ON  OFF

Static IP Address 192 . 168 . 1 . 10

Subnet Mask 255 . 255 . 0 . 0

Gateway 192 . 168 . 1 . 1

Hostname DXELXC

Extra RPC Server TCP Port 49901

Apply Changes

**Current Network Settings** - Shows the current IP Address, Subnet Mask, Gateway, Hostname, and Mac Address.

**Network Configuration** – This section allows the turning on/off of the DHCP and allowing the entry of static IP settings if DHCP is not utilized. If you use DHCP it is always recommended to use a switch that can map the MAC address to a defined IP address otherwise the IP address may change inadvertently at a later time making it difficult to target the device. Hostname can only be utilized on a NETBIOS system. If TCP commands are used there is a setting for the TCP server port number. Make certain once done making changes to press apply changes.

## Port Settings

**DXE-LXC** by **Aurora Multimedia**

GENERAL SETTINGS NETWORK SETTINGS PORT SETTINGS

### DXE-LXC Port Setup

**Master Remote IP:** 0 . 0 . 0 . 0

**Local Serial Port 1 Settings:**

Baud Rate: 115200

Data Size: 8

Parity: None

Stop bits: 1

**Port Processing Session:** Manual

**Test Serial Transmit:** [ ] **Serial Test**

**Remote Serial Port 2 Settings:**

Baud Rate: 115200

Data Size: 8

Parity: None

Stop bits: 1

**Port Processing Session:** Manual

**Test Serial Transmit:** [ ] **Serial Test**

**IR Ports:** Activate IR repeater mode

**Apply Changes**

**Master Remote IP** – Enter the Aurora control system IP the DXE-LXC is going to push information to.

Note: If an Aurora control system is not used RPC, Telnet, or TCP is available.

**Local Serial Port 1 Settings** – Baud Rate, Date Size, Parity, and Stop bits are selected for the TX RS-232 port.

**Remote Serial Port 2 Settings** – Baud Rate, Date Size, Parity, and Stop bits are selected for the RX RS-232 port.

**Port Processing Session** – Choose between the following modes of operation.

**Manual** - Ports are just serial ports manipulated via RPC / Telnet / TCP commands.

**Push to Variable** - RX data is pushed via Aurora RPC to given Master Remote IP.

**Push to Port** - RX data is pushed to given IP remote serial port via Aurora RPC.

**Telnet Client** - Unit will attempt to connect to given server IP and pass and receive serial port data.

**Telnet Server** - Unit will wait for external connection to pass and receive serial port data.

**Pass-Through** - Unit's (TX/RX) serial ports are linked so any serial RX data will come out the TX on the other serial port.

**Test Serial Transmit** – Enter a serial string to send out the RS-232 port for testing of connecting device.

**IR Ports** – Selecting the activate IR repeater mode enables the transfer of the IR ports signals to and from the TX and RX units. If it is not selected only RPC / Telnet / TCP commands will trigger the IR ports locally or remotely. IR files are stored on the ftp of the DXE-CAT-RX3C / RX3C-A unit in the IR folder.

## Port Settings (Manual)

**DXE-LXC** by **Aurora Multimedia**

GENERAL SETTINGS NETWORK SETTINGS PORT SETTINGS

### DXE-LXC Port Setup

**Master Remote IP:** 0 . 0 . 0 . 0

**Local Serial Port 1 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Manual ▾

**Test Serial Transmit:**

**Remote Serial Port 2 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Manual ▾

**Test Serial Transmit:**

**IR Ports:** Activate IR repeater mode

With port processing session set to manual there will be no additional selections as the system is set to trigger the functionality with IP commands. Ports will not pass data from the TX to RX and vice versa in this mode.

## Port Settings (Push to Variable)

DXE-LXC		by Aurora Multimedia	
		GENERAL SETTINGS	NETWORK SETTINGS
		PORT SETTINGS	
DXE-LXC Port Setup			
<b>Master Remote IP:</b>	0 . 0 . 0 . 0		
<b>Local Serial Port 1 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>	Push to Variable ▾		
	Remote Session IP Address	192 . 168 . 1 . 11	
	Target RPC Variable Name	ser1var	
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>Remote Serial Port 2 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>	Manual ▾		
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>IR Ports:</b>	Activate IR repeater mode <input type="checkbox"/>		

**Remote Session IP Address** – Enter the IP address the variable is to be sent to an Aurora control device. Note the IP address overrides the Master Remote IP address.

**Target RPC Variable Name** – Enter the variable utilized by the remote control processor.

## Port Settings (Telnet Server)

DXE-LXC		by Aurora Multimedia	
		GENERAL SETTINGS	NETWORK SETTINGS
			PORT SETTINGS
DXE-LXC Port Setup			
<b>Master Remote IP:</b>	0 . 0 . 0 . 0		
<b>Local Serial Port 1 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>	Telnet Server ▾		
	Telnet Local Port Number	23	
	Telnet Timeout Seconds	0	
	Telnet Protocol	Telnet ▾	
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>Remote Serial Port 2 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>	Manual ▾		
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>IR Ports:</b>	Activate IR repeater mode <input type="checkbox"/>		

**Telnet Local Port Number** – Defaulted to Port 23 but can be changed to other port numbers.

**Telnet Timeout Seconds** – Defaulted to no timeout but can be set to timeout and close the connection.

**Telnet Protocol** – Default is Telnet otherwise it can be set to none which is used for TCP.

## Port Settings (Telnet Client)

**DXE-LXC** by **Aurora Multimedia**

GENERAL SETTINGS NETWORK SETTINGS PORT SETTINGS

### DXE-LXC Port Setup

**Master Remote IP:** 0 . 0 . 0 . 0

**Local Serial Port 1 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Telnet Client ▾

Remote Session IP Address: 192 . 168 . 1 . 11  
 Telnet Remote Port Number: 23  
 Telnet Local Port Number: 23  
 Telnet Timeout Seconds: 0  
 Telnet Protocol: Telnet ▾

**Test Serial Transmit:**

**Remote Serial Port 2 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Manual ▾

**Test Serial Transmit:**

**Remote Session IP Address** – Enter Telnet Server IP Address.

**Telnet Remote Port Number** – Defaulted to Port 23 but can be changed to other port numbers.

**Telnet Local Port Number** – Defaulted to Port 23 but can be changed to other port numbers.

**Telnet Timeout Seconds** – Defaulted to no timeout but can be set to timeout and close the connection.

**Telnet Protocol** – Default is Telnet otherwise it can be set to none which is used for TCP.

## Port Settings (Push to Port)

DXE-LXC		by Aurora Multimedia	
GENERAL SETTINGS		NETWORK SETTINGS	
PORT SETTINGS			
DXE-LXC Port Setup			
<b>Master Remote IP:</b>		0 . 0 . 0 . 0	
<b>Local Serial Port 1 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>		Push to Port ▾	
Remote Session IP Address		192 . 168 . 1 . 11	
Target RPC Serial Port Number		1	
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>Remote Serial Port 2 Settings:</b>	Baud Rate	115200 ▾	
	Data Size	8 ▾	
	Parity	None ▾	
	Stop bits	1 ▾	
<b>Port Processing Session:</b>		Manual ▾	
<b>Test Serial Transmit:</b>	<input type="text"/>		Serial Test
<b>IR Ports:</b>		Activate IR repeater mode <input type="checkbox"/>	

**Remote Session IP Address** – Enter IP address of serial port on another Aurora control device to target. This will forward the serial data to any Aurora control system product. It overrides the master Remote IP.

**Target RPC Serial Port Number** – Enter the serial port number of the Aurora control device.

## Port Settings (Pass-Through)

**DXE-LXC** by **Aurora Multimedia**

GENERAL SETTINGS NETWORK SETTINGS PORT SETTINGS

### DXE-LXC Port Setup

**Master Remote IP:** 0 . 0 . 0 . 0

**Local Serial Port 1 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Pass-Through ▾

**Test Serial Transmit:**

**Remote Serial Port 2 Settings:**

Baud Rate: 115200 ▾  
 Data Size: 8 ▾  
 Parity: None ▾  
 Stop bits: 1 ▾

**Port Processing Session:** Pass-Through ▾

**Test Serial Transmit:**

**IR Ports:** Activate IR repeater mode

Pass-Through mode allows the serial ports on both the DXE-CAT-TX and DXE-CAT-RX to become a virtual cable link. The serial receive of one unit will be sent to the serial transmit of the other unit. IP commands will still force serial strings out the local or remote ports when necessary.

## SERIAL COMMANDS

### RS-232 Commands

! - Command, ? - Query, ~ Response

<cr> = 0x0D Hex / 13 Decimal

Command	String Format	Information
Baud Rate	!30BRx,b,dps<cr>	x = Port Number 1 or 2 (1 is far side over HDBT, 2 is local port) b = Baud Rate 1200 - 115200 d = 7 or 8 Data bits p = O, E, N Parity s = 1 or 2 Stop bits  Example: !30BR1,9600,8N1<cr> for 96008N1 on remote port.
Relay On/Off/Toggle	!30RLYx,y<cr>	x = Relay Number 1 or 2 y = 0,1,T (On = 1, Off = 0, Toggle = T)
Amplifier Mixer Volume for HDBaseT/HDMI	!30AMH,x <cr>	x = 0-120 (-78dB to 0dB) x = + or - (Vol increment or decrement in steps of 2)
Amplifier Mixer Volume for Line Input	!30AML,x <cr>	x = 0-120 (-78dB to 0dB) x = + or - (Vol increment or decrement in steps of 2)
Line Output Mixer Volume for HDBaseT/HDMI	!30LMH,x <cr>	x = 0-120 (-78dB to 0dB) x = + or - (Vol increment or decrement in steps of 2)
Line Output Mixer Volume for Line Input	!30LML,x <cr>	x = 0-120 (-78dB to 0dB) x = + or - (Vol increment or decrement in steps of 2)
Line Output Boost Volume	!30LVL,x <cr>	x = 0-9 (1dB steps 0dB to +9dB)
Amplifier Boost Volume	!30AVL,x <cr>	x = 0-9 (1dB steps 0dB to +9dB)
Mute All	!30MUT,x<cr>	x = 0,1,T (0 = Muted, 1 = Unmuted, T = Toggle)
LAN Serial Port Select	!30PTL,x<cr>	X = 1 or 2 (1 = HDBT, 2 = Local Serial Port) This command determines which port the LXC will be linked to when communicating LAN
Query Baud Rate	?30BRx<cr>	Response ~30BR x,b,dps<cr> x = Port Number 1 or 2 (1 is far side over HDBT, 2 is local port)
Query Firmware Revision	?30FM<cr>	Response: ~30FM-x<cr> x = any value comprised of 2 digits with a decimal separating the two. Example: ~FM-1.1<cr>

Query Relay On/Off	?30RLYx<cr>	Response: ~30RLYx,y<cr> x = Port Number 1 or 2 y = 0 or 1 (On = 1, Off = 0)
Query HDMI Amplifier Mixer Volume	?30AMH<cr>	Response: ~30AMHx<cr> x = 0-120 (-78dB to 0dB)
Query Line In Amplifier Mixer Volume	?30AML<cr>	Response: ~30AMLx<cr> x = 0-120 (-78dB to 0dB)
Query HDMI Line Out Mixer Volume	?30LMH<cr>	Response: ~30LMHx<cr> x = 0-120 (-78dB to 0dB)
Query Line In Line Out Mixer Volume	?30LML<cr>	Response: ~30LMLx<cr> x = 0-120 (-78dB to 0dB)
Query Line Out Volume	?30LVL<cr>	Response: ~30LVLx<cr> x = 0-9 (1dB steps 0dB to +9dB)
Query Amplifier Volume	?30AVL<cr>	Response: ~30AVLx<cr> x = 0-9 (1dB steps 0dB to +9dB)
Query LAN Serial Port Select	?30PTL<cr>	Response: ~30PTL,x<cr> X = 1 or 2(1 = HDBT, 2 = Local Serial Port)

Note: 30 after !,?, or \* is the product fixed address.

## IP COMMANDS

### TCP/RPC Commands

Remote procedure calls (RPCs) are used to control the DXE-CAT-RX3C / RX3C-A from any device with a web browser (PC, iPad, touch panel, etc.), an external control system, or another web-enabled device. RPCs can be used to send serial and IR commands, receive serial data, and retrieve system information.

RPCs can be sent in the form of an HTTP POST (used for web based control pages or control from an Aurora WACI series controller) or TCP commands (used for control from an external control system).

Calls to the RPC server using HTTP POST are done through the /rpc virtual directory, e.g.

http://ip-address/rpc. Use this directory as part of the URL when creating the address for the HTTP POST Transaction. TCP commands are structured the same way as the HTTP POST, but sent over a raw TCP connection without any HTTP headers.

Command	Description
GetFirmwareVersion ( )	Returns the firmware version
GetSerialNumber ( )	Returns the serial number
Net_GetIPAddress ( )	Returns the IP address
Net_GetSubnetMask ( )	Returns the subnet mask
Net_GetNetCardCount ( )	Returns the number of network ports on the unit
Serial_GetSettings ( Port )	Returns the settings of a specific serial port <sup>1</sup>
Serial_Send ( Port, Msg, MaxWaitMS )	Sends a serial command to a specific port <sup>1 2</sup> MaxWaitMS = The number of milliseconds allowed to complete the sending of the serial data before timing out
GetWebFileNames ( )	Returns the names of the web files
GetIRFileNames ( )	Returns the names of the IR files
Serial_Read ( Port )	Reads the serial buffer for a specific serial port <sup>1 2</sup>
Serial_ClearReadBuffer ( Port )	Clears the serial buffer for a specific port <sup>1</sup>
Serial_ReadBufferCount ( Port )	Reads the buffer count for a specific port <sup>1</sup>
Serial_GetPortCount ( )	Returns the total number of available serial ports (2) <sup>1</sup>
IR_GetPortCount ( )	Returns the total number of available IR ports (2) <sup>1</sup>
IR_SendCommand ( Port, Group, Command )	Sends an IR command from the specified port <sup>1</sup> Group = The IR file name Command = The IR command name
IR_ListAllGroups ( )	Returns all loaded IR groups (files)
IR_ListAllCommandsInGroup ( Group )	Returns all IR commands in a specific group
GetMachineType ( )	Returns the ID of the DXE-CAT-RX3 SERIES controller (used for communication with other Aurora controllers)
SetDefaultConfig ( )	Resets the DXE-CAT-RX3 SERIES settings to factory default

<sup>1</sup> Serial port 1 / IR port 1 is located on the DXE-CAT-RX3 SERIES RX unit, serial port 2 / IR port 2 is located on the TX unit

<sup>2</sup> Hexadecimal data is represented with a percent sign preceding the 2-byte hex code (e.g. %0D for carriage return)

## TCP/RPC Command Usage

### Sample Usage

**Send the serial command “PowerOn<0D>” out the RX serial port:**

```
method=Serial_Send&param1=2&param2=PowerOn%0D&param3=100
```

**Send the ‘Play’ command to a DVD player on the DXE-CAT-RX3 SERIES TX side:**

```
method=IR_SendCommand&param1=1&param2=DVD&param3=Play
```

**Retrieve a list of all IR file names:**

```
method=GetIRFileNames
```

### Response Tokens

**status** - 0 for Failure, 1 for Success

**faultCode** - If status is 0 (failure), faultCode will be an integer representing a specific error. This token is NOT returned if status is 1 (success).

**response[*i*]** - Returned value #*i*, where *i* is an integer. If status is 0 (fail), the value for response1 will be a string describing the failure, and the value for **b** will be a debug string giving more information about the failure.

**Example using the call for the Net\_GetSubnetMask method:**

```
method=Net_GetSubnetMask
```

**Sample response:**

```
status=1&response1=255.255.255.0
```


## WEB SERVER

The DXE-CAT-RX3C / RX3C-A has a built in web server that can hold up to 8MB of web pages (including firmware). Using FTP, webpage(s) can be uploaded to the wwwpub directory. Web pages utilizing HTML, Flash, AJAX, etc., can be served up using the units IP address or host name (if NetBIOS is used). Aurora has a free tool called YIPI available for download on the Aurora website to create webpages quick and easily. YIPI also has the ability to FTP to the unit as well.

Please note that only the YIPI HTML export will work with the DXE-CAT-RX3C / RX3C-A. The Flash export from YIPI will only work with NX or QX series at this time.

# CONNECTOR PIN DEFINITION

## HDMI

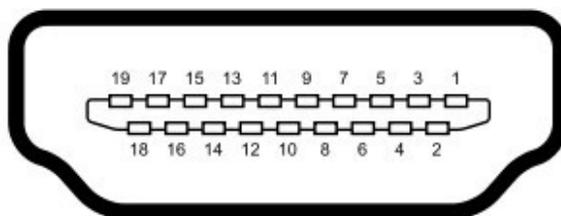

Type A (Receptacle) HDMI

Pin 1	TMDS Data2+	Pin 8	TMDS Data0 Shield	Pin 15	SCL
Pin 2	TMDS Data2 Shield	Pin 9	TMDS Data0-	Pin 16	SDA
Pin 3	TMDS Data2-	Pin 10	TMDS Clock+	Pin 17	DDC/CEC Ground
Pin 4	TMDS Data1+	Pin 11	TMDS Clock Shield	Pin 18	+5 V Power
Pin 5	TMDS Data1 Shield	Pin 12	TMDS Clock-	Pin 19	Hot Plug Detect
Pin 6	TMDS Data1-	Pin 13	CEC		
Pin 7	TMDS Data0+	Pin 14	Reserved (N.C. on device)		

## CAT5e/6/7

### T568A and T568B Wiring

Pin	T568A Pair	T568B Pair	Wire	T568A Color	T568B Color	Pins on plug face (socket is reversed)
1	3	2	tip	white/green stripe	white/orange stripe	<p>Pin Position</p> <p>8 7 6 5 4 3 2 1</p>
2	3	2	ring	green solid	orange solid	
3	2	3	tip	white/orange stripe	white/green stripe	
4	1	1	ring	blue solid	blue solid	
5	1	1	tip	white/blue stripe	white/blue stripe	
6	2	3	ring	orange solid	green solid	
7	4	4	tip	white/brown stripe	white/brown stripe	
8	4	4	ring	brown solid	brown solid	

## APPENDIX 1 Troubleshooting

Problem	Solution
1. No Video Signal.	<ul style="list-style-type: none"> <li>a. Check that the power plug is properly inserted into a functioning power outlet.</li> <li>b. Make certain source is on.</li> <li>c. Verify pin-out of connector at each end.</li> <li>d. If used in electrical noisy environment shielded CAT cable may be required.</li> <li>e. If run is longer than 330ft or unit is in long range mode the signal will be limited to 24bit color depth. Verify deep color is not turned on source equipment.</li> </ul>
2. LED is not lit	<ul style="list-style-type: none"> <li>a. Check 24v power supply is plugged in.</li> <li>b. Check to see if Wall supply is plugged into wall outlet.</li> <li>c. Make certain wall outlet has power.</li> </ul>
3. LAN POE not working	<ul style="list-style-type: none"> <li>a. Verify the POE switch total power is adequate. Some POE switch power ratings cannot supply the full 15.4 watts per port. Make certain to multiply the amount of ports by 15.4watts and compare to the switches total spec.</li> <li>b. POE from Transmitter will only work on the non-amplifier versions</li> <li>c. POE on receiver is not available for amplifier model.</li> </ul>
4. IR not working	<ul style="list-style-type: none"> <li>a. Verify using proper emitter or receiver to specifications outlined. Use Aurora branded accessories for best results.</li> </ul>
5. DXE-CAT-RX3 is very warm	<ul style="list-style-type: none"> <li>a. This is normal. HDBaseT receivers do run very warm when signal is applied. You will note the transmitter runs much cooler.</li> </ul>
6. Intermittent Noise in image	<ul style="list-style-type: none"> <li>a. Exceeding recommend distance relative to cable specification</li> <li>b. Use shielded cable. Sometimes external devices like radio transmitters can interfere with HDBT signals. Even though the DXE-CAT series will work with non-shielded cabling we recommend its usage for best performance.</li> </ul>
7. IR port on RX side does not work with some devices	<ul style="list-style-type: none"> <li>a. The IR on the RX side is limited to 38kHz so only remotes with 38kHz carrier will work. Keep in mind some remotes between 36kHz-40kHz may work. The TX side which is local to the processor will work with carrier frequencies from 30kHz to 100kHz.</li> </ul>
8. Need to update firmware	<ul style="list-style-type: none"> <li>a. Use LXupdate found on the Aurora website.</li> </ul>
9. Cannot ping IP address	<ul style="list-style-type: none"> <li>a. Make certain only 1 LAN port is connected to same switcher. The DXE-CAT LAN ports are a switch not a router.</li> <li>b. Make certain unit is an "C" version and has the IP option.</li> </ul>
10. RS-232 is not communicating	<ul style="list-style-type: none"> <li>a. Verify baud rate setup is correct on each port.</li> </ul>

1. All transmission distances are measured using West Penn cable as per Appendix 4. The transmission distance is defined as the distance between the video source and the display.
2. To reduce the interference among the unshielded twisted pairs of wires in UTP cable, you can use shielded STP cables to improve EMI problems, which is worsen in long transmission.

**Warning: Do not plug RJ-45 HDBaseT output to non-HDBaseT compliant devices or damage may occur to either product.**

## APPENDIX 2    Firmware Update

### **Main processor update**

Latest firmware and update tool for the main processor can be found at the Aurora website customer portal. Instructions are included in the .zip file.

### **Web server firmware update**

Latest firmware and update tool for the web server can be found at the Aurora website customer portal. Instructions are below.

LXupdate.exe is a Windows Command Line tool to field upgrade LX class products

usage: LXupdate filename targetIP

filename is the name of the file containing the image to upload

targetIP is IP address of target in ddd.ddd.ddd.ddd format

The tool uses UDP port 9 or port 49444 to force targeted devices into programming mode. When these are not available the force button on the main page of the LX device interface must be used.

UDP Ports 67, 68, and 69 are also required.

## APPENDIX 3 Technical Specifications

Model Name	DXE-CAT-RX3 Series			
Technical	DXE-CAT-RX3	DXE-CAT-RX3-A	DXE-CAT-RX3C	DXE-CAT-RX3C-A
Max Distance	600ft	600ft	600ft	600ft
Max Resolution	1080p 60Hz	1080p 60Hz	1080p 60Hz	1080p 60Hz
RS-232	Max 115kbps	Max 115kbps	Max 115kbps	Max 115kbps
Amplifier	No	2x35 Watt 4/8 Ohm	No	2x35Watt 4/8 Ohm
Line In/Out	Balanced	Balanced	Balanced	Balanced
Relays	2 Normally Open 24VDC 2A	2 Normally Open 24VDC 2A	2 Normally Open 24VDC 2A	2 Normally Open 24VDC 2A
IR Input & Output	30Hz-100kHz	30Hz-100kHz	30Hz-100kHz	30Hz-100kHz
LAN	2 - 10/100	2 - 10/100	2 - 10/100	2 - 10/100
LAN POE	Port 1	Amplifier Requires External Power	Port 1	Amplifier Requires External Power
IP Control System	No	No	Yes	Yes
Front LED Status	Power, Status, HDMI, HDBaseT, RS-232 TX/RX, IR In/Out	Power, Status, HDMI, HDBaseT, RS-232 TX/RX, IR In/Out	Power, Status, HDMI, HDBaseT, RS-232 TX/RX, IR In/Out	Power, Status, HDMI, HDBaseT, RS-232 TX/RX, IR In/Out
Front Selections	Reset	Reset	Reset/Setup	Reset/Setup
Distance	328ft 100m – 1080p 60Hz 24 & 36bit CAT 5e/6/6a/7 328ft 100m – 1080p 60Hz 48bit CAT 6a/7  230ft 70m – 1080p 60Hz 48bit CAT 5e/6/6a/7  500ft 152m - 1080p 60Hz 24bit (Long Reach Mode) CAT 6 600ft 183m - 1080p 60Hz 24bit (Long Reach Mode) CAT 6A  CAT 5e/6 will achieve 328ft 100m for pixel clock <=225MHz CAT 5e/6 will achieve 230ft 70m for pixel clock >225MHz CAT 6a/7 will achieve 328ft 100m for pixel clock >225MHz			
LAN Connectors	Dual 8P8C with 2 LED indicators each			
HDBaseT Connector	RJ-45 WE/SS 8P8C			
RS-232 Connector	3.5mm TRS			
IR Connector	3.5mm TRS (Auto Sensing Direction for Blaster or Receiver)			
HDMI Connector	Type A 19 pin			
Power Connector	2.5mm ID Half Twist Kycon			
Relay Connector	3.81mm Euro Style Green 4 Position			
Line In/Out	Dual 3.81mm Euro Style Green 5 Position			
Amplifier Connector	5.08mm Euro Style Green 4 Position			
Mechanical	DXE-CAT-RX3 Series			
Housing	Black Aluminum enclosure			
Dimensions [L x W x H]	130mm x 55mm x 30mm [8.46" x 3.82" x 1.3"]			
Weight	2 lbs			
Mounting	Wall-mounting & Rack Mounting			
Power supply	24 90 Watt DC (Only 1 required on RX for Amplifier model) 132mmx57mmx31mm			
Power consumption	5 Watts [Typical] 80 Watts (Amplifier full use) [Max]			
Operation temperature	0~40°C [32~104°F]			
Storage temperature	-20~60°C [-4~140°F]			
Relative humidity	20~90% RH [no condensation]			

<b>Package Contents</b>	1x DXE-CAT-R(x) (x= 3, 3C, 3-A, 3C-A accordingly) 1x 24V DC 90 Watt Wall Supply for –A models only. Non –A models can be powered through normal means and must be ordered accordingly. 1x DXE-CAT-E1 Wall / Desk Mount Ears with Screws 1x User Manual
<b>Options</b>	IR Receiver 38KHz (CA0026-1) IR Emitter (CA0012-1)

***Specifications subject to change without notice.***

## APPENDIX 4 Cabling

Aurora extender products have been tested utilizing shielded cabling. Although our products will work fine without shielded cable it is highly recommended for environmental reasons as the signals are high frequency and can radiate as well as be susceptible to external frequencies and possibly cause noise or disruption in the image. Unshielded cabling will work fine in a conduits as it will provide the shielding. We have found not all cable is created equal even though they appear similar. This can affect distance and overall performance. Below is a list of cables that have been officially tested with our products by the manufacturer of the cable.

### **West Penn Wire**

CAT 6 Shielded - HDBaseT Certified - Only in Black  
4246F – CMR, 254246F – CMP (Plenum)

CAT 6a Shielded HDBaseT Certified - Only in Black  
4246AF – CMR, 254246AF – CMP (Plenum)

Both CAT 6 and CAT 6a Shielded Cables utilized a Modular Plug Kit:  
90170-BI - Includes: 100 Connectors, 100 Boots, Crimp Tool, External round Crimp Tool, Strip Tool

CAT 6 Unshielded - Colors  
4246 – CMR, 254246 - CMP (Plenum)  
Connector: 32-6EZP

CAT5e Shielded - Blue or Gray  
4245F – CMR, 254245F - CMP (Plenum)  
Connector: 32-EZSTP

CAT 5e Unshielded- 12 Colors  
4245-CMR, 254245 - CMP (Plenum)  
Connectors: 32-EZP

## APPENDIX 5    Warranty

### Limited 3 Year Warranty

Aurora Multimedia Corp. ("Manufacturer") warrants that this product is free of defects in both materials and workmanship for a period of 3 years as defined herein for parts and labor from date of purchase. This Limited Warranty covers products purchased in the year of 2009 and after. Motorized mechanical parts (Hard Drives, DVD, etc), mechanical parts (buttons, doors, etc), remotes and cables are covered for a period of 1 year. Touch screen displays are covered for 1 year; touch screen overlay components are covered for 90 days. Supplied batteries are not covered by this warranty. During the warranty period, and upon proof of purchase, the product will be repaired or replaced (with same or similar model) at our option without charge for parts or labor for the specified product lifetime warranty period.

This warranty shall not apply if any of the following:

- A. The product has been damaged by negligence, accident, lightning, water, act-of-God or mishandling; or,
- B. The product has not been operated in accordance with procedures specified in operating instructions; or,
- C. The product has been repaired and or altered by other than manufacturer or authorized service center; or,
- D. The product's original serial number has been modified or removed; or,
- E. External equipment other than supplied by manufacturer, in determination of manufacturer, shall have affected the performance, safety or reliability of the product.
- F. Part(s) are no longer available for product.

In the event that the product needs repair or replacement during the specified warranty period, product should be shipped back to Manufacturer at Purchaser's expense. Repaired or replaced product shall be returned to Purchaser by standard shipping methods at Manufacturer's discretion. Express shipping will be at the expense of the Purchaser. If Purchaser resides outside the contiguous US, return shipping shall be at Purchaser's expense.

**No other warranty, express or implied other than Manufacturer's shall apply.**

Manufacturer does not assume any responsibility for consequential damages, expenses or loss of revenue or property, inconvenience or interruption in operation experienced by the customer due to a malfunction of the purchased equipment. No warranty service performed on any product shall extend the applicable warranty period. This warranty does not cover damage to the equipment during shipping and Manufacturer assumes no responsibility for such damage.

[www.auroramultimedia.com](http://www.auroramultimedia.com)

**Aurora Multimedia Corp.**

205 Commercial Court

Morganville, NJ 07751

Phone: 732-591-5800 Fax: 732-591-6801