ELECTRICAL	
Range over	150 ft.
Cat5e/6	
USB DATA	
USB Fixed Data Rate	480Mbps
USB Version Compatibility	2.0 and 1.1
USB Connector Type (TX)	(1) Туре В
USB Connector Type (TX)	(4) Туре А
UTP DATA	
Signal Type	LVDS
Connector	Unshielded RJ-45
POWER	
External or via USB	5V DC @ 2mA
Connector	2.1mm DC jack (center+ve)
PHYSICAL	
Dimensions	3.375" x 3.375" x 1.5"
Weight	0.14lb

© Copyright 2014 SmartAVI, All Rights Reserved

Notice

The information contained in this document is subject to change without notice. SmartAVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for any particular purpose.

SmartAVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated into another language without prior written consent from SmartAVI.



User Manual

USB2-Mini



The USB2-Mini extends USB 2.0 up to 150 ft. from the computer using a single Cat5e/6 Cable

Smart-

11651 Vanowen St. North Hollywood, California 91605 Phone: (818) 503-6200 Fax: (818) 574-5581

Introduction

SmartAVI's USB2-Mini extends standard USB (Universal Serial Bus) 2.0 signals up to 150 feet using a single Cat5e/6 cable. The USB2-Mini supports all USB 2.0 high-speed devices, from keyboards to printers, and will operate on Windows®, Mac and Linux® operating systems. An integrated four-port hub allows for multiple devices to be connected to the USB2-Mini at once. Additional USB hubs can be added, increasing the amount of devices that can be plugged into the USB2-Mini.

Features

- Supports all USB 2.0 and 1.1 Devices Transparently (Flash Drives, Printers, etc.)
- Supports USB 1.1 keyboard and mouse
- Works on Windows, Mac and Linux Operating Systems
- Integrated Four-Port Hub
- Bus-Powered Local Unit
- Power Adaptor for Remote Unit
- Plug-and-Play Ready



What's in the box?

Part No.	Description
USB2-Mini-S	USB 2.0/1.1 over Cat5e/6 Extender. Includes: [USB2M-TX, USB2M-RX, and PS5VD4A]

Connect the receiver to the peripheral device using the included USB-Hub.



Installation and Operation

Connecting the Transmitter

- 1. Connect the transmitter to the host using the A-B USB cable (included with the unit).
- 2. The A side of the connector would go to the computer host and the B side would be connected to the transmitter.