

TECHNICAL SPECIFICATIONS

VIDEO	
Format	DisplayPort 1.2
Link Rate	5.4 Gbps/lane
Input Interface	(4) DisplayPort (female)
Output Interface	(1) DisplayPort (female)
Resolution	Up to 3840 x 2160 @60Hz
DDC	FAUX transaction mode option over Aux channel
Input Equalization	Automatic
Bandwidth Frequency	10.2 Gbps

USB	
Signal Type	USB 2.0, 1.1, and 1.0 w/ internal hub
Input Interface	(4) USB Type B (female)
Output Interface	(2) USB Type A (female) for keyboard and mouse connection only; (2) for USB 2.0 Transparent

CONTROL	
Front Panel	Tactile Switches
RS-232	Via Control @ 9600 bps
Hotkeys	Via Keyboard
Emulation	Optional

OTHER	
Power	External 100-240 VAC/ 5VDC4A @20W
Dimensions	12" W x 1.75" H x 6" D
Weight	3.5 lbs
Approvals	UL, CE, ROHS Compliant
Operating Temp.	23 to 95 °F (-5 to 35 °C)
Storage Temp.	-4-185 °F (-20-85 °C)
Humidity	Up to 95%

WHAT'S IN THE BOX

PART NO.	QTY	DESCRIPTION
DPN-4P	1	4-Port DisplayPort KVM Switch with USB 2.0 and Front Panel Push Buttons.
PS5VDC4A	1	Power Supply
User Manual	1	



Designed and Manufactured in the USA

800.AVI.2131

Tel: (818) 503-6200

Fax: (818) 503-6208

11651 Vanowen St. North Hollywood, CA 91605

SmartAVI.com

Smart-AVI
SMART AUDIO VIDEO INNOVATION

DPN-4P

User Manual



**4-Port DisplayPort 1.2 KVM Switch
with Full Keyboard and Mouse
Emulation and USB 2.0 Sharing**

CONTROLLING THE DPN-4P

Front Panel Control

To switch ports using the front panel, press the *UP* button to navigate up and *DOWN* button for down.

RS-232 Control

Use a male-to-female serial cable to connect a computer to the RS-232 port of the DPN-4P. Use terminal client software such as the **HyperTerminal** to connect to the DPN-4P. Make sure to use the standard communication mode of 9600 bps, 8, N, 1, N. This port can also be used for software upgrade. Please refer to online manual for more details.

Hotkey Commands

The Hotkey command is a keyboard sequence used to trigger an action on the DPN-4P through the use of the keyboard connected on the USB port of the DPN-4P. To activate the hotkey sequence, press the **CTRL** key twice and then enter the desired hotkey commands.

DPN-4P FRONT



DPN-4P REAR




CONNECTING THE DPN-4P

1. Ensure that power is disconnected from DPN-4P.
2. Connect the DisplayPort cables and USB cables (male-A to male-B) from the computers to the respective ports on the DPN-4P.
3. Optionally connect RS-232 for control functions.
4. Connect the USB keyboard and mouse to the two USB ports on the right .

Note: The 2 USB ports on the right are dedicated for keyboard and mouse emulation. The 2 on the left are for other USB peripherals (flash drives, printers, etc.)

5. Connect the DisplayPort monitor to the *OUT* connector on the DPN-4P.
6. Power on the DPN-4P.

INSTALLATION DIAGRAM

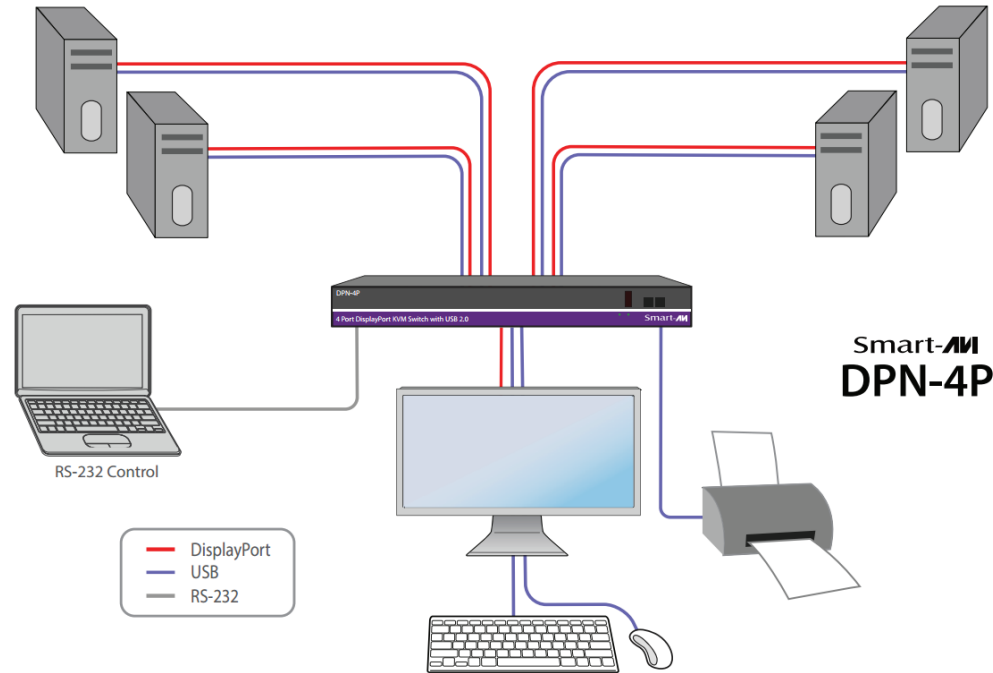

COMMANDS	HOTKEYS	RS-232 CONTROL
Switch all devices (KVM, USB 2.0, and Audio)	[CTRL] [CTRL] m [port #] [ENTER]	// m [port #]<CR>
Switch KVM only	[CTRL] [CTRL] c [port #] [ENTER]	// c [port #]<CR>
Reset	[CTRL] [CTRL] r [ENTER]	// r <CR>