

What's in the Box?

PART NO.	QTY	DESCRIPTION
FX-TXUSB	1	USB 2.0 Fiber Extender Transmitter
FX-RXUSB	1	USB 2.0 Fiber Extender Receiver
PS5VDC4A	2	5 Volt 4 Amp Power Supply
CCUSBAB06	1	6ft USB MM AB cable

Technical Specifications

USB	
Signal Type	EHCI (USB 2.0) and OHCI/UHCI (USB 1.1)
Input Interface (TX)	(1) USB Type B (Female)
Output Interface (RX)	(4) USB Type A (Female)
OPTICAL	
Fiber Type	Single, multi mode
Connector Type	Duplex LC
Wavelength	1310 nm/1550 nm (Dual wavelength)
Data Rate	5 Gbps (2.5 Gbps per single wavelength)
Transmission Power	-5 dB Min.
Receiver Sensitivity	-21 dB Max
Distance	500 m Max.
OTHER	
Power	External 100-240 VAC/5VDC4A @20W
Dimensions	4 in W x 1 in H x 3 in D
Weight	2.0 lbs. (0.9 kg)
Operating Temp.	0-55 °C (32-131°F)
Storage Temp.	-20-85 °C (-4-185 °F)
Humidity	Up to 95%

© Copyright 2011 Smart-AVI, All Rights Reserved

NOTICE

The information contained in this document is subject to change without notice. Smart-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for any particular purpose.

Smart-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated into another language without prior written consent from Smart-AVI.

For more information, visit www.smartavi.com.

Rack Mountable Option



Our SmartRack is the perfect solution to allow virtually all SmartAVI devices to be custom mounted in a standard 19" server rack. The SmartRack is fully adjustable and can secure/organize several devices.

Smart-AVI
SMART AUDIO VIDEO INNOVATION

Installation Manual

FX-USB



USB 2.0 Extender up to 1,500 feet over Fiber Optic Cable

Smart-AVI
SMART AUDIO VIDEO INNOVATION

SmartAVI, Inc. / Twitter: smartavi
11651 Vanowen St. North Hollywood, CA 91605
Tel: (818) 503-6200 Fax: (818) 503-6208
<http://www.SmartAVI.com>

www.smartavi.com

Introduction

The FX-USB is a perfect solution for extending USB 2.0 signals from a computer in a remote location. It extends USB 2.0 to a remote location up to 1,500 feet away. It supports all USB device types from high-speed web cams, hard drives, printers, scanners, audio devices, touch screens, digital cameras and game controllers. The FX-USB is immune to electromagnetic interference, making it ideal for use in situations where there is considerable interference. The FX-USB is also very secure because its fiber optic signals cannot be easily tapped.


Features

- Top Signal Quality at Maximum Extension Over Multimode Fiber (1,500 ft.)
- Fiber Plug Type LC
- Extends USB 2.0 signals up to 1,500 feet from the computer
- Fully compliant with USB 1.1 and 2.0 specifications
- Supports USB 1.1 (12 Mbps) and USB 2.0 (480 Mbps) data rates
- Supports all USB device types from high-speed web cams, hard drives, printers, scanners, audio devices, touch screens, digital cameras and game controllers
- Integrated Four-Port Hub in the receiver
- Compatible with all operating systems
- Fully transparent USB (does not use any emulation)
- Plug and play

Applications

- Security
- PC Networking
- Conference Center Systems
- Point of Sale
- Camera Surveillance
- Video Phone
- Control Room Systems
- Recording Studio
- PC KVM Extension

Product - Installation Diagram

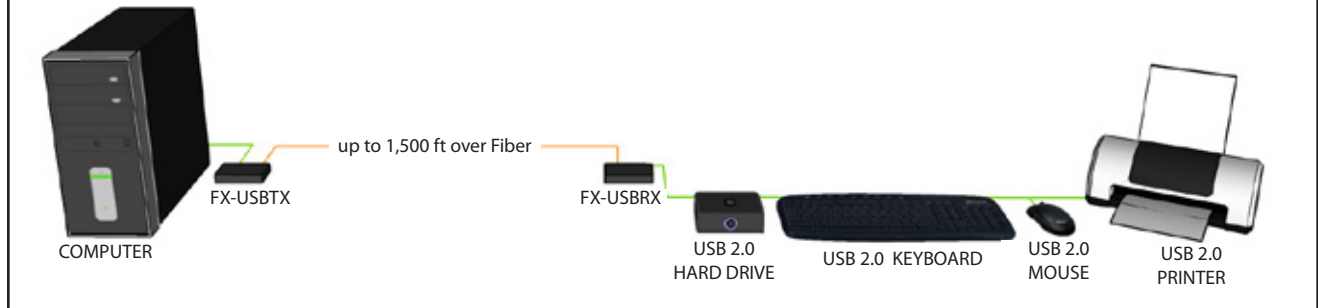

Connecting the FX-USB

1. Power off all devices.
2. Connect the USB source (computer) to the USB port on the front of the FX-TXUSB (transmitter).
3. Connect the FX-TXUSB (transmitter) to the FX-RXUSB (receiver) using a fiber optic cable up to 1,500 feet in length.
4. Connect up to four USB 1.1 devices to the integrated 4-port USB hub on the front of the FX-RXUSB (receiver).
5. Connect the power supply to the FX-RXUSB and the FX-RXUSB.
6. Power on the computer and USB devices.

LED Indicators

Power (Blue)

Steady = Power is connected

Link (Green)

Steady = RX and TX are connected through fiber

Host (Green)

Steady = PC is connected


Blinking = Suspended state/Not Connected

Activity (Amber)

Blinking = Communication between RX and TX

Off = Suspended state/No Activity

FX-TXUSB Front

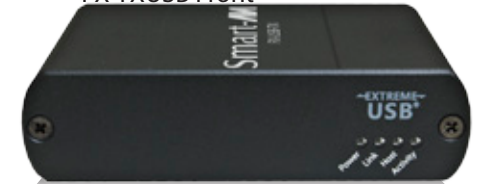

FX-TXUSB Rear



FX-RXUSB Front



FX-RXUSB Rear

