

Technical Specifications

Transmitter and receiver	
Video	
Bandwidth	400MHz
Analog signal Level	1 volt
Impedance	75 ohms
Connector	High density HD15
Format	VGA/SVGA/XGA/UXGA/RGBH/RGsB
Sync	TTL horizontal SyncRange: 15 to 130 KHz Vertical Sync Range 30 to 120 Hz
Signal level	0dB
Impedance	10K ohms
Connector	3.5mm jack socket
System Cable	
Type	Cat5 UTP EIA 568A
Connector	RJ45
Power	
Requirements	5V DC @500mA
Connector	5x2.1 DC Jack



© Copyright 2010 Smart-AVI, All Rights Reserved

Notice

The information contained in this document is subject to change without notice. Smart-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for any particular purpose.

Smart-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated into another language with out prior written consent from Smart-AVI.

For the complete manual, visit www.smartavi.com.

Smart-AVI

Smart Audio Video Integration

User Manual

VCT400



Use a single CAT5 to broadcast high resolution UXGA to 4 locations
1000ft away

Smart-AVI
2840 N. Naomi Ave.,
Burbank, California 91504
Phone: (818) 565-0011
Facsimile: (818) 565-0020

www.smartavi.com

Introduction

The VCT400 allows transmission of high definition video signals over a standard CAT-5 UTP cable over distances of up to 1000 ft.


Features

- Uses easy to install, inexpensive CAT5.
- Output reaches up to 1,000 feet.
- Resolutions up to 1900x1200.
- 300 MHz Bandwidth.
- Sends high-resolution VGA signals from one source to up to 4 devices.
- Compatible with VGA, XGA, Sun, MAC and SGI signals.
- Sync Format / Polarity Preservation.
- High ground loop immunity.
- Built-in lightning, power surge and transient protection.
- Designated trimmer in the remote unit to compensate for cable length.
- Compact Metal Case Enclosure.
- Remote Units come with Buffered Outputs.
- External power supply.

What's in the box?

Description	Part Number
4 port VCA UXGA	VCA-TX400
5VDC 1A Power Supply	PS-5D1A-US
VGA cable Male to Female	CC-VGAMM-06
Optional Equipment	
VCA-TX400 Receiver Unit	VCT-100-RX

Installation Diagram

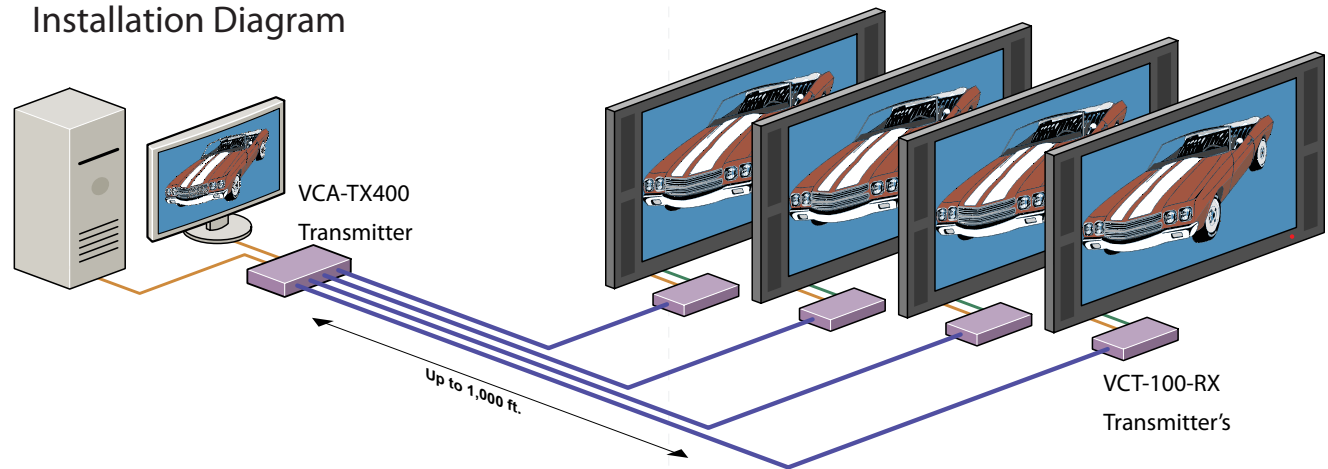

VCT Transmitter Installation Diagram

VCT Receiver Installation Diagram

Connecting The Transmitter


1. Connect the output of the computer video card to the video input of the transmitter using the included male to female video cable.
2. Connect local monitor to the VGA out of the transmitter.
3. In the back of the unit connect the CAT5 cable that will connect to the receiver unit.
4. Connect the power supply.

*NOTE: You can not use RS232 and IR at the same time or Audio.

Connecting The Receiver

1. Connect CAT5 cable (coming from the transmitter) to the back of the receiver.
2. Connect monitors to the VGA out connectors on the front of the receiver.
3. Connect the power supply.

Adjusting and Fine Tuning the Signal

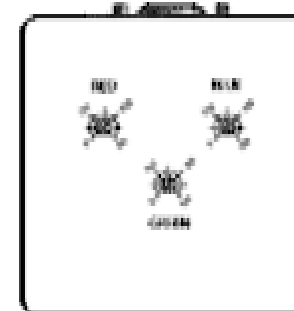

In order to fine tune the signal, adjust the individual dials one at a time starting with GREEN, then BLUE and lastly RED. As you turn the dials you will notice the colors slightly change as you increase or decrease the strength.

Preparing & Connecting System CAT5 Cable

Following is the wiring standard for terminating CAT 5 cable using RJ-45 connector:

- | | |
|--------|------------|
| Pair 1 | Pins 1 & 2 |
| Pair 2 | Pins 3 & 6 |
| Pair 3 | Pins 4 & 5 |
| Pair 4 | Pins 7 & 8 |



Connectors:	RJ-45
Capacitance:	14 pf/ft (46.2 pf/m)
Conductor Gauge:	24 AWG
Impedance:	100 +/- 15 ohms
	4 - Pair