

MC-2

AES/EBU SIGNAL DISTRIBUTION AMPLIFIER AND FORMAT CONVERTER



SAFETY INSTRUCTIONS

General instructions

To reduce the risk of fire or electrical shock, do not expose this appliance to rain or moisture, direct sunlight or excessive heat from sources such as radiators or spotlights. No user serviceable parts are inside. Repair and maintenance must be carried out by qualified personnel authorized by MUTECH GmbH! The unit has been designed for operation in a standard domestic environment. Do NOT expose the unit and its accessories to rain, moisture, direct sunlight or excessive heat produced by such heat sources as radiators or spotlights! The free flow of air inside and around the unit must always be ensured.



Initial operation

Prior to the initial operation of the unit, the appliance, its accessories and packaging must be inspected for any signs of physical damage that may have occurred during transit. If the unit has been damaged mechanically or if liquids have been spilled inside the enclosure, the appliance may not be connected to the mains or must be disconnected from the mains immediately! If the unit is damaged, please do NOT return it to MUTECH GmbH, but notify your dealer and the shipping company immediately, otherwise claims for damage or replacement may not be granted.

If the device is left in a low-temperature environment for a long time and then is moved to a room-temperature environment, condensation may occur on the inside and the exterior. To avoid short-circuits and flashovers, be sure to wait one or two hours before putting the device into operation.

Power supply

The device contains a self-adapting wide-range power supply supporting the majority of global standard line voltages within a range of 90...250 V, with no need for making adjustments. Make sure that your line-voltage source provides a supply voltage within the specified range. In addition, make sure that the device is properly grounded via the local electric installation.

Please use the enclosed power cord (see packaging) to connect the unit to the mains. Switch the unit off before you attempt to connect it to the mains. Connect the power cord to the unit, then to a standard 3-pin mains outlet. To draw the power cord, never pull on the cable but on the mains plug!

The unit must be grounded during operation!

For information on the power-inlet wiring, refer to the »Wiring of connectors« section in the appendix. Disconnect the device from the mains when not using it for an extended period!



This symbol, a flash of lightning inside a triangle, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, an exclamation mark inside a triangle, alerts you to important operating or safety instructions in this manual.

Declaration of Conformity

We herewith confirm that the product complies with the European Commission's standards on electromagnetic compatibility.

Interference emission: EN 50081-1, 1992
Resistance to interference: EN 50082-1, 1992

Presupposed as operation condition is that all clock outputs are connected with high-quality and good shielded BNC 75 ohms cable.



WARRANTY REGULATIONS

§1 Warranty

MUTECH GmbH warrants the flawless performance of this product to the original buyer for a period of two (2) years from the date of purchase. If any failure occurs within the specified warranty period that is caused by defects in material and/or workmanship, MUTECH GmbH shall either repair or replace the product free of charge within 90 days. The purchaser is not entitled to claim an inspection of the device free of charge during the warranty period. If the warranty claim proves to be justified, the product will be returned freight prepaid by MUTECH GmbH within Germany. Outside Germany, the product will be returned with the additional international freight charges payable by the customer. Warranty claims other than those indicated above are expressly excluded.

§2 Warranty transferability

This warranty is extended exclusively to the original buyer who bought the product from a MUTECH GmbH specialized dealer or distributor, and is not transferable to anyone who may subsequently purchase this product. No other person (retail dealer, distributor, etc.) shall be entitled to give any warranty promise on behalf of MUTECH GmbH.

§3 Warranty regulations

The return of the completed registration card, or online registration on one of the websites specified below, is a condition of warranty. Failing to register the device before returning it for repair will void the extended warranty.

- The serial number on the returned device must match the one stated on the registration card or entered during online registration. Otherwise, the device will be returned to the sender at the sender's expense.
- Any returned device must be accompanied by a detailed error description and a copy of the original sales receipt issued by a MUTECH dealer or distributor.
- The device must be returned free of shipping expenses and in the original package, if possible; otherwise, the sender has to provide comparably protective packaging.
- The sender is fully responsible for any damage or loss of the product when shipping it to MUTECH GmbH.

§4 Limitation of warranty

Damages caused by the following conditions are not covered by this warranty:

- Damages caused by every kind of normal wear and tear (e.g. displays, LEDs, potentiometers, faders, switches, buttons, connecting elements, printed labels, cover glasses, cover prints, and similar parts).
- Functional failure of the product caused by improper installation (please observe CMOS components handling instructions!), neglect or misuse of the product, e.g. failure to operate the unit in compliance with the instructions given in the user or service manuals.
- Damage caused by any form of external mechanical impact or modification.
- Damage caused by the user's failure to connect and operate the unit in compliance with local safety regulations.
- Damage caused by force majeure (fire, explosion, flood, lightning, war, vandalism, etc.).
- Consequential damages or defects in products from other manufacturers as well as any costs resulting from a loss of production.

Repairs carried out by personnel which is not authorized from MUTECH GmbH will void the warranty. Adaptations and modifications to the device made with regard to national, technical, or safety regulations in a country or of the customer do not constitute a warranty claim and should be set with MUTECH GmbH in advance.

§5 Repairs

To obtain warranty service, the buyer must call or write to MUTECH GmbH before returning the unit. All inquiries must be accompanied by a description of the problem and the original buyer's invoice. Devices shipped to MUTECH GmbH for repair without prior notice will be returned to the sender at the sender's expense. In case of a functional failure please contact:

MUTECH Gesellschaft fuer Systementwicklung und Komponentenvertrieb mbH

Siekeweg 6/8 • 12309 Berlin • Germany • Fon 030-746880-0 • Fax 030-746880-99 • tecsupport@MUTECH-net.de • www.MUTECH-net.de

MUTECH GMBH ASSUMES NO LIABILITY FOR ANY INCORRECT INFORMATION GIVEN IN THIS MANUAL. PLEASE NOTE THAT ALL SOFTWARE/HARDWARE PRODUCT NAMES ARE REGISTERED TRADEMARKS OF THEIR RESPECTIVE OWNERS. NO PART OF THIS MANUAL MAY BE REPRODUCED, COPIED OR CONVERTED TO A MACHINE-READABLE FORM OR ELECTRONICAL MEDIA WITHOUT A WRITTEN PERMISSION OF MUTECH GMBH. WE RESERVE THE RIGHT TO CHANGE OR IMPROVE OUR PRODUCTS WITHOUT NOTICE. © MUTECH GMBH 2005-2007

■ CONTENT

■ INTRODUCTION

About this Manual	7
General Function Description	7
Features	7
Applications.	8
Peripheral MUTEC Products	8

■ CONTROL ELEMENTS

MC-2 Front Panel	9
MC-2 Rear Panel	9

■ INSTALLATION

Content of the Box	11
Placing the device	11
Wiring the AES/EBU and AES/EBU ID Interfaces	11

■ OPERATION

Selecting Function Areas and setting Functions.	13
Steps of Operation	13
MODE Function Area	14
AES/EBU	14
AES/EBU + AES3 → 11	14
AES/EBU + AES3 → 11 + REF PASS	14
AES/EBU ID	14
AES/EBU ID + AES3 → 11	14
AES/EBU ID + AES3 → 11 + REF PASS	14
AES/EBU ID out Function Area.	14
STATUS Status Area	15
LOCK	15
NO REF	15
CLOCK IN Status Area.	15

■ APPENDIX

Pin Assignment of the Connectors	17
Connecting the AES/EBU ID Input to Ground.	18
Switching-off the Termination of the AES/EBU ID Input.	18
Technical Data	19

Applications

- AES/EBU and AES/EBU ID reference signal distribution.
- AES/EBU and AES/EBU ID digital audio signal distribution.
- Reference signal and digital audio signal refreshing.
- Signal conversion between AES/EBU and AES/EBU ID.
- AES3 to AES11 conversion.
- Clock rate indication of AES/EBU and AES/EBU ID signals.
- Line extension for e.g. theater or broadcast installations.
- Output expansion for e.g. MUTEc's iCLOCK, iCLOCK dp, iD, iD dp, MC-3 SMART CLOCK, MC-3.1 SMART CLOCKSD, MC-3.2 SMART CLOCK HD and other clock generators.

Peripheral MUTEc Products

Reference Clocks and Master Clocks for Synchronization:

- iCLOCK + iCLOCKdp
iCLOCK and iCLOCKdp are synchronizable, high-precision clock generators which are designed to be the reference in digital audio and video studios as well as broadcast and television stations. For further details please visit:
www.iCLOCK-NET.de
- MC-3
The MC-3 SMART CLOCK is an universal digital audio master clock generator. The unit provides different high-stable and Ultra low-jitter clock signals for synchronization of various digital audio devices.
- MC-3.1
The MC-3.1 SMART CLOCK SD is an universal digital audio and SD video sync master clock generator. The unit provides different high-stable clock signals for simultaneous synchronization of digital audio and SD video devices.
- MC-3.2
The MC-3.2 SMART CLOCK HD is an universal digital audio and SD/HD video sync master clock generator. The unit provides different high-stable clock signals for simultaneous synchronization of digital audio and SD/HD video devices.

Format and Sampling Rate Converters with internal Master Clock:

- MC-4
The MC-4 is a high-performance digital audio multichannel format and sampling rate converter for ADAT™, AES3 and S/P-DIF
- MC-6
The MC-6 is a high-performance digital audio dual channel format converter for AES3, AES3id and S/P-DIF.
- MC-8 + MC-8.1
The MC-8 and MC-8.1 are 8 channel, high-performance digital audio and sampling rate converters for AES3 and AES3id.

Cables for Digital Audio:

- MW-05/19
Set of two rack mounting angles to install one MC product frontally into one unit of a 19" rack.
- MW-03/19
Set of two rack mounting angles to install one MC product on the rear side of a 19" rack.
- MW-02/19
Mounting plate to install two MC products side by side into one unit of a 19" rack.




CONTROL ELEMENTS

MC-2 Front Panel



MC-2 Front Panel

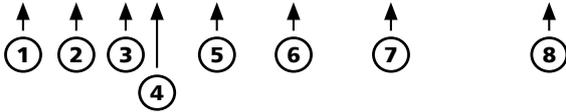

- 1 POWER**
This red LED lights up when the unit is switched on with the rear panel POWER switch.
- 2 SELECT**
The toggle switch selects one of the two functional areas available.
- 3 DATA**
Use this toggle switch to select a function from a specific functional area.
- 4 STATUS**
This area indicates the status of the internal low-jitter PLL.
- 5 MODE**
This area enables the selection of the reference input as well as the needed conversion mode.
- 6 AES/EBU ID OUT**
This function enables to select two different output voltages for the AES/EBU ID outputs.
- 7 CLOCK IN**
This status area indicates the clock rate of the current incoming reference signal.
- 8 AES/EBU OUT 5 + 6**
These are AES/EBU signal distribution outputs no. 5 + 6.

Refer to the OPERATIONS chapter for more information.

MC-2 Rear Panel



MC-2 Rear Panel



- 1 AES/EBU ID OUT 1 + 2**
These outputs transmit digital AES/EBU ID blank frame reference or audio signals in accordance with the specifications of the standards AES3 ID – 1995/2001. The output impedance is 75Ω (BNC connector, female).
- 2 AES/EBU OUT 1–4**
These outputs transmit balanced digital AES/EBU blank frame reference or audio signals in accordance with the specifications of the standards AES3–1992/2003 and AES11–1997/2003. The output impedance is 110Ω (XLR connectors, male).
- 3 AES/EBU IN**
This input receives balanced digital AES/EBU blank frame reference or audio signals in accordance with the specifications of the standards



INSTALLATION

Content of the Box

The unit was packed carefully. Nevertheless we recommend to check the content directly after opening the package:

- 1 x MC-2
- 1 x Power cable
- 4 x Rubber feet
- 1 x Manual

Placing the Device

The unit should be set up as closely as possible to the devices to which it will be connected, so as to avoid excessive cable lengths. Use the 4 rubber feet enclosed with the appliance and stick them symmetrically on the bottom side of the unit to protect the enclosure and supporting surface from being damaged.

The device can be mounted into a standard 19" rack and will require 1 unit. In this case, the rubber feet cannot be attached. Install the device so that one unit of rack space is left free both above and below the device to allow for sufficient ventilation! The mounting depth including the terminals is 160 mm/6.7". Another 60 mm/2.4" should be added for the required cables.

Additional slide-in rails on the rack inside are recommended for safe installation. This will also avoid long-term mechanical deformation of the housing.

Wiring the AES/EBU and AES/EBU ID interfaces

Connect the AES/EBU interfaces with the help of balanced electrical cables equipped with XLR connectors on both ends. The specifications stipulate a specific cable resistance of 110Ω (ask your retailer for a confirmation of this value when purchasing the cables).

Connect the AES/EBU ID interfaces with the help of unbalanced electrical cables equipped with BNC connectors on both ends. The specifications stipulate a specific cable resistance of 75Ω (ask your retailer for a confirmation of this value when purchasing the cables).



The condition of the packaging material and the device should be checked carefully additionally. If there are any damages please refer to SAFETY INSTRUCTIONS, Initial Operation, and WARRANTY REGULATIONS.



Before installing the unit the section SAFETY INSTRUCTIONS located at the beginning of this manual should be read carefully.



Never expose the device and accessories to rain, moisture, direct sunlight, or excessive heat produced by radiators, heaters, or spot lights! Sufficient air circulation in the environment of the device must be ensured!



Especially when working with high AES/EBU clock rates well shielded clock lines are imperative to avoid increased radiation! Standard cables are normally useable for clock rates up to 50.0kHz. Special shielded cable material should be used for transfer of higher clock rates.

Since some manufacturers offer optimized cables for the transmission of AES/EBU and AES/EBU ID signals, it will be a good idea to ask your retailer for specific cables.




OPERATION

Selecting Function Areas and setting Functions


The device is fully operated using the two toggle switches at the front panel.

- 1 Switching the SELECT switch selects between different basic function areas.
- 2 Switching the DATA switch selects between the individual functions within one function area.


! For safety reasons, be sure to read the **SAFETY INSTRUCTIONS** and **INSTALLATION** chapters before first powering-up!
 We also recommend reading the **CONTROLS AND TERMINALS** chapter for information on how to connect MC-2!

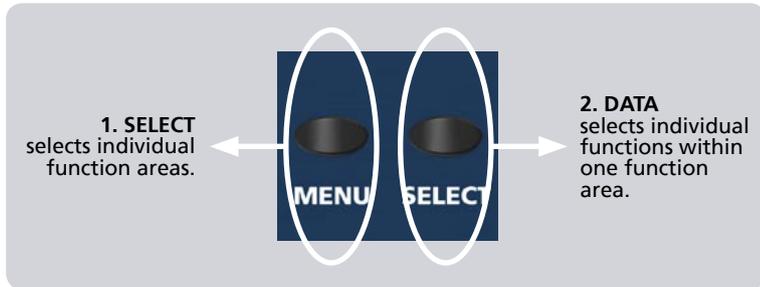

SELECT + DATA operation

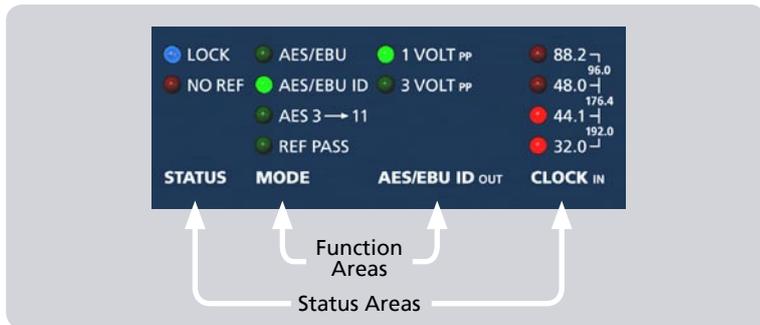

Function Areas + Status Areas

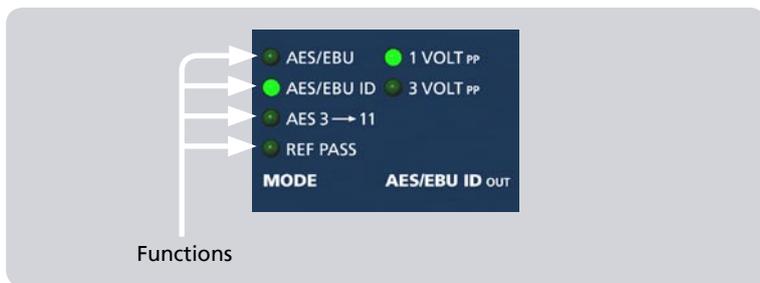


Functions

Steps of Operation

- 1 First press on SELECT or DATA switch enables the last selected function within the last selected function area. The corresponding LED is beginning to flash.
- 2 Every press on DATA switch will select a new function. The LED of every selected function will flash accordingly and the corresponding function is available at once.
- 3 When the needed function is selected, do not press the switches again! After a period of approx. 4 seconds the LED in front of the selected function will stop flashing.

The STATUS area is not accessible by using the SELECT and DATA switches, because it only informs about different conditions of incoming digital audio signals.


! All user-specific function settings are available furthermore when power is restored.

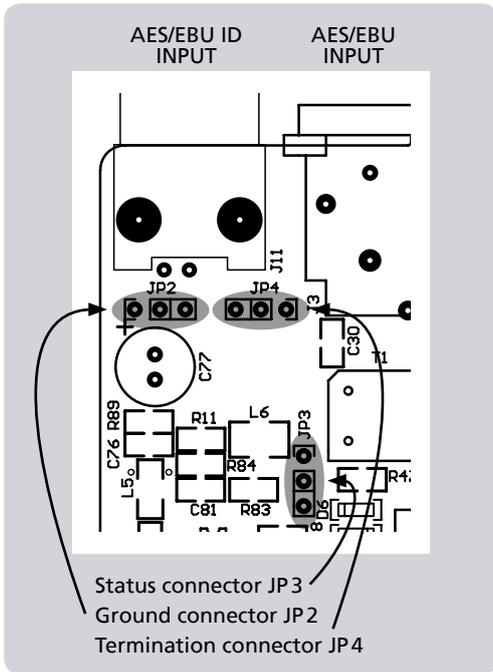


Connecting the AES/EBU ID Input to Ground

CAUTION! Disconnect the unit from the mains before opening!
Remount the aluminium cover thoroughly before you attempt to operate the unit!

When MC-2 is shipped, the BNC-based AES/EBU ID input is isolated from ground.

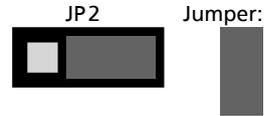

Setting the jumper one pin forward in direction to the housing's leftside (viewed from the front panel) will connect the BNC input connector to ground.

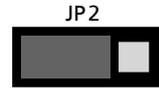


This setting is also necessary when switching-off the termination (see below)!


Switching-off the Termination of the AES/EBU ID Input

CAUTION! Disconnect the unit from the mains before opening!
Remount the aluminium cover thoroughly before you attempt to operate the unit!



When MC-2 is shipped, the BNC-based AES/EBU ID input is terminated internally with 75Ω. Therefore, two jumpers are put on two 3-pin sockets, JP4 for termination and JP3 for status.

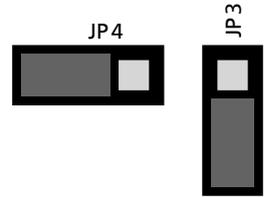

Moving the jumpers of each socket in the opposite position will switch off the 75Ω termination of the AES/EBU ID input.

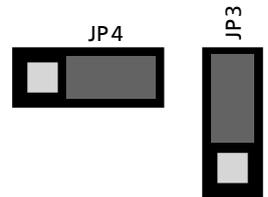

When moving the jumpers of the sockets JP3 and JP4 to switch-off the AES/EBU ID input termination, the input has to be connected to ground simultaneously!

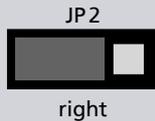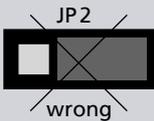



WWW.MUTEC-NET.DE
FON 0049-(0)30-74 6880-0
FAX 0049-(0)30-74 6880-99