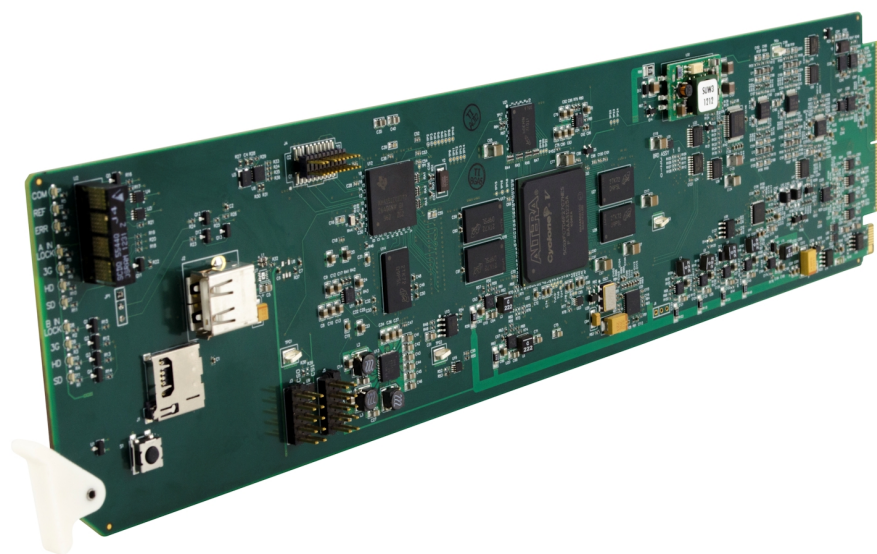

COBALT[®]

9903-UDX-ADDA



**3G/HD/SD-SDI Universal UDX Format Converter/
Framesync with CVBS/YPbPr Video I/O, AES and
Analog Audio Embedding / De-Embedding**

Product Manual



Cobalt Digital Inc.

2506 Galen Drive
Champaign, IL 61821
Voice 217.344.1243 • Fax 217.344.1245
www.cobaltdigital.com

Copyright

©Copyright 2016, Cobalt Digital Inc. All Rights Reserved.

Duplication or distribution of this manual and any information contained within is strictly prohibited without the express written permission of Cobalt Digital Inc. This manual and any information contained within, may not be reproduced, distributed, or transmitted in any form, or by any means, for any purpose, without the express written permission of Cobalt Digital Inc. Reproduction or reverse engineering of software used in this device is prohibited.

Disclaimer

The information in this document has been carefully examined and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Cobalt Digital Inc. reserves the right to make changes to any products herein to improve readability, function, or design. Cobalt Digital Inc. does not assume any liability arising out of the application or use of any product or circuit described herein.

Trademark Information

Cobalt® is a registered trademark of Cobalt Digital Inc.

openGear® is a registered trademark of Ross Video Limited. **DashBoard™** is a trademark of Ross Video Limited.

Dolby® is a registered trademark of Dolby Laboratories, Inc. Other product names or trademarks appearing in this manual are the property of their respective owners.

Congratulations on choosing the Cobalt® 9903-UDX-ADDA 3G/HD/SD-SDI Universal UDX Format Converter/Framesync with CVBS/YPbPr Video I/O, AES and Analog Audio Embedding / De-Embedding. The 9903-UDX-ADDA is part of a full line of modular processing and conversion gear for broadcast TV environments. The Cobalt Digital Inc. line includes video decoders and encoders, audio embedders and de-embedders, distribution amplifiers, format converters, remote control systems and much more. Should you have questions pertaining to the installation or operation of your 9903, please contact us at the contact information on the front cover.

Manual No.:	9903UDXADDA-OM
Document Version:	V1.1
Release Date:	February 4, 2016
Applicable for Firmware Version (or greater):	v1.123 or greater
Description of product/manual changes:	<ul style="list-style-type: none">- Replace image in manual for rear module RM20-9903-H-DIN-HDBNC. Current image has errors for analog audio in/out connections.- Update manual for latest card v1.123 functionality and added rear I/O modules. The use of this new Product Manual is strongly recommended.- Minor consistency corrections, updates to manual.

Table of Contents

Chapter 1	Introduction	1-1
	Overview	1-1
	9903-UDX-ADDA Card Software Versions and this Manual	1-2
	Cobalt Reference Guides	1-2
	Manual Conventions	1-3
	Warnings, Cautions, and Notes	1-4
	Labeling Symbol Definitions.....	1-4
	Safety and Regulatory Summary	1-5
	Warnings.....	1-5
	Cautions	1-5
	EMC Compliance Per Market	1-5
	9903-UDX-ADDA Functional Description.....	1-6
	9903-UDX-ADDA Input/Output Formats.....	1-6
	Video Processor Description	1-8
	Audio Processor Description	1-11
	Control and Data Input/Output Interfaces	1-12
	User Control Interface	1-13
	9903-UDX-ADDA Rear I/O Modules	1-15
	Technical Specifications.....	1-15
	Warranty and Service Information	1-19
	Cobalt Digital Inc. Limited Warranty.....	1-19
	Contact Cobalt Digital Inc.....	1-20
 Chapter 2	 Installation and Setup	 2-1
	Overview	2-1
	Installing the 9903-UDX-ADDA Into a Frame Slot	2-1
	Installing a Rear I/O Module	2-3
	9903-UDX-ADDA Rear I/O Modules	2-4
	GPIO, Serial (COMM), and Analog Audio Connections.....	2-7
	Setting Up 9903-UDX-ADDA Network Remote Control	2-7
 Chapter 3	 Operating Instructions.....	 3-1
	Overview	3-1
	Control and Display Descriptions.....	3-1
	Function Menu/Parameter Overview.....	3-2
	DashBoard™ User Interface.....	3-3
	Cobalt® Remote Control Panel User Interfaces.....	3-4
	Web HTML5 User Interface.....	3-5

Accessing the 9903-UDX-ADDA Card via Remote Control	3-6
Accessing the 9903-UDX-ADDA Card Using DashBoard™	3-6
Accessing the 9903-UDX-ADDA Card Using a Cobalt® Remote Control Panel.....	3-7
Checking 9903-UDX-ADDA Card Information.....	3-8
Ancillary Data Line Number Locations and Ranges	3-9
9903-UDX-ADDA Function Menu List and Descriptions	3-10
Input Video Controls	3-11
Output Video Mode Controls	3-12
Scaler	3-13
Framesync	3-16
Input Audio Status	3-19
Input Audio Routing/Controls	3-20
Video Proc/Color Correction	3-25
Output Audio Routing/Controls	3-28
AFD/WSS/VI Code Insertion Controls	3-33
Timecode	3-37
Closed Captioning	3-42
Ancillary Data Proc Controls	3-43
COMM Ports Setup Controls	3-46
Presets	3-47
Event Setup Controls	3-49
User Log	3-51
Admin (Log Status/Firmware Update - Card IP Address)	3-52
Troubleshooting	3-54
Error and Failure Indicator Overview	3-54
Basic Troubleshooting Checks.....	3-58
9903-UDX-ADDA Processing Error Troubleshooting.....	3-59
Troubleshooting Network/Remote Control Errors.....	3-60
In Case of Problems	3-60

Introduction

Overview

This manual provides installation and operating instructions for the 9903-UDX-ADDA 3G/HD/SD-SDI Universal UDX Format Converter/ Framesync with CVBS/YPbPr Video I/O, AES and Analog Audio Embedding / De-Embedding card (also referred to herein as the 9903-UDX-ADDA).

This manual consists of the following chapters:

- **Chapter 1, “Introduction”** – Provides information about this manual and what is covered. Also provides general information regarding the 9903-UDX-ADDA.
- **Chapter 2, “Installation and Setup”** – Provides instructions for installing the 9903-UDX-ADDA in a frame, and optionally installing a 9903-UDX-ADDA Rear I/O Module.
- **Chapter 3, “Operating Instructions”** – Provides overviews of operating controls and instructions for using the 9903-UDX-ADDA.

This chapter contains the following information:

- **9903-UDX-ADDA Card Software Versions and this Manual (p. 1-2)**
- **Manual Conventions (p. 1-3)**
- **Safety and Regulatory Summary (p. 1-5)**
- **9903-UDX-ADDA Functional Description (p. 1-6)**
- **Technical Specifications (p. 1-15)**
- **Warranty and Service Information (p. 1-19)**
- **Contact Cobalt Digital Inc. (p. 1-20)**

9903-UDX-ADDA Card Software Versions and this Manual

When applicable, Cobalt Digital Inc. provides for continual product enhancements through software updates. As such, functions described in this manual may pertain specifically to cards loaded with a particular software build.

The Software Version of your card can be checked by viewing the **Card Info** menu in DashBoard™. See Checking 9903-UDX-ADDA Card Information (p. 3-8) in Chapter 3, “Operating Instructions” for more information. You can then check our website for the latest software version currently released for the card as described below.

Note: Not all functionality described in this manual may appear on cards with initial software versions.

Check our website and proceed as follows if your card’s software does not match the latest version:

Card Software earlier than latest version	<p>Card is not loaded with the latest software. Not all functions and/or specified performance described in this manual may be available.</p> <p>You can update your card with new Update software by going to the Support>Firmware Downloads link at www.cobaltdigital.com. Download “Firmware Update Guide”, which provides simple instructions for downloading the latest firmware for your card onto your computer, and then uploading it to your card through DashBoard™.</p> <p>Software updates are field-installed without any need to remove the card from its frame.</p>
Card Software newer than version in manual	<p>A new manual is expediently released whenever a card’s software is updated and specifications and/or functionality have changed as compared to an earlier version (a new manual is not necessarily released if specifications and/or functionality have not changed). A manual earlier than a card’s software version may not completely or accurately describe all functions available for your card.</p> <p>If your card shows features not described in this manual, you can check for the latest manual (if applicable) and download it by going to the card’s web page on www.cobaltdigital.com.</p>

Cobalt Reference Guides

From the Cobalt® web home page, go to **Support>Reference Documents** for easy to use guides covering network remote control, card firmware updates, example card processing UI setups and other topics.

Manual Conventions

In this manual, display messages and connectors are shown using the exact name shown on the 9903-UDX-ADDA itself. Examples are provided below.

- Card-edge display messages are shown like this:



- Connector names are shown like this: **SDI IN A**

In this manual, the terms below are applicable as follows:

- **9903-UDX-ADDA** refers to the 9903-UDX-ADDA 3G/HD/SD-SDI Universal UDX Format Converter/Framesync with CVBS/YPbPr Video I/O, AES and Analog Audio Embedding / De-Embedding card.
- **Frame** refers to the HPF-9000, OG3-FR, 8321, or similar 20-slot frame that houses Cobalt® or other cards.
- **Device** and/or **Card** refers to a Cobalt® or other card.
- **System** and/or **Video System** refers to the mix of interconnected production and terminal equipment in which the 9903-UDX-ADDA and other cards operate.
- Functions and/or features that are available only as an option are denoted in this manual like this:



Warnings, Cautions, and Notes

Certain items in this manual are highlighted by special messages. The definitions are provided below.

Warnings

Warning messages indicate a possible hazard which, if not avoided, could result in personal injury or death.




Cautions

Caution messages indicate a problem or incorrect practice which, if not avoided, could result in improper operation or damage to the product.

Notes

Notes provide supplemental information to the accompanying text. Notes typically precede the text to which they apply.

Labeling Symbol Definitions

	Important note regarding product usage. Failure to observe may result in unexpected or incorrect operation.
	Electronic device or assembly is susceptible to damage from an ESD event. Handle only using appropriate ESD prevention practices. If ESD wrist strap is not available, handle card only by edges and avoid contact with any connectors or components.
	Symbol (WEEE 2002/96/EC) For product disposal, ensure the following: <ul style="list-style-type: none">• Do not dispose of this product as unsorted municipal waste.• Collect this product separately.• Use collection and return systems available to you.

Safety and Regulatory Summary

Warnings

! WARNING !

To reduce risk of electric shock do not remove line voltage service barrier cover on frame equipment containing an AC power supply. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Cautions

CAUTION

This device is intended for environmentally controlled use only in appropriate video terminal equipment operating environments.

CAUTION

This product is intended to be a component product of an openGear® frame. Refer to the openGear® frame Owner's Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as its component products.

CAUTION

Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using only convection cooling. The 9903-UDX-ADDA has a moderate power dissipation (<13 W). As such, avoiding placing the card adjacent to other cards with similar dissipation values if possible.

CAUTION

If required, make certain Rear I/O Module(s) is installed before installing the 9903-UDX-ADDA into the frame slot. Damage to card and/or Rear I/O Module can occur if module installation is attempted with card already installed in slot.

CAUTION

If card resists fully engaging in rear I/O module mating connector, check for alignment and proper insertion in slot tracks. Damage to card and/or rear I/O module may occur if improper card insertion is attempted.

CAUTION

The 9903-UDX-ADDA FPGA is designed for a normal-range operating temperature around 85° C core temperature. Operation in severe conditions exceeding this limit for non-sustained usage are within device operating safe parameters, and can be allowed by setting this control to Disable. However, the disable (override) setting should be avoided under normal conditions to ensure maximum card protection.

EMC Compliance Per Market

Market	Regulatory Standard or Code
United States of America	FCC "Code of Federal Regulations" Title 47 Part15, Subpart B, Class A
Canada	ICES-003
International	CISPR 24:2010 IEC 61000-4-2:2008 IEC 61000-4-3:2006 with A1:2007 and A2:2010 IEC 61000-4-4:2004 IEC 61000-4-6:2008 IEC 61000-6-3:2006 with A1:2010 CISPR 22:2008

9903-UDX-ADDA Functional Description

Figure 1-1 shows a functional block diagram of the 9903-UDX-ADDA. The 9903-UDX-ADDA also includes AES/analog audio support and CVBS/component video I/O. IA basic signal presence input failover function allows routing from an alternate SDI source when an input LOS is detected.

The 9903-UDX-ADDA also provides ARC processing and timecode/closed-captioning conversion from packet-based timecode formats and CEA608/708 HD formats to HD ATC, SD_ATC, and SD VITC-based (waveform) timecode. Closed captioning from CEA708 to HD formats and line 21 SD closed captioning are available on the processed HD-SD-SDI outputs.

9903-UDX-ADDA Input/Output Formats

The 9903-UDX-ADDA provides the following inputs and outputs:

- **Inputs:**
 - **3G/HD/SD SDI IN A** and **SDI IN B** – two 3G/HD/SD-SDI inputs. **SDI IN A** or **SDI IN B** can be set to failover to **A** or **B** in absence of opposite channel of this pair.
 - **CVBS/YPbPr IN** – CVBS and component coaxial analog video input which can receive SD/HD analog video for processing and up-conversion.
 - **AES IN** – BNC (AES-3id, 75Ω) ports as AES input (number of ports dependent on rear I/O module used).
 - **AN-AUD IN** – Two balanced analog audio embed inputs.
- **Outputs:**
 - **3G/HD/SD-SDI OUT (1-4)** – four 3G/HD/SD-SDI program video outputs.
 - **AES OUT** – BNC (AES-3id, 75Ω) ports as AES outputs (number of ports dependent on rear I/O module used).
 - **AN-AUD OUT** – Two balanced analog audio de-embed outputs.
 - **CVBS/YPbPr OUT** – CVBS and component coaxial analog video outputs.

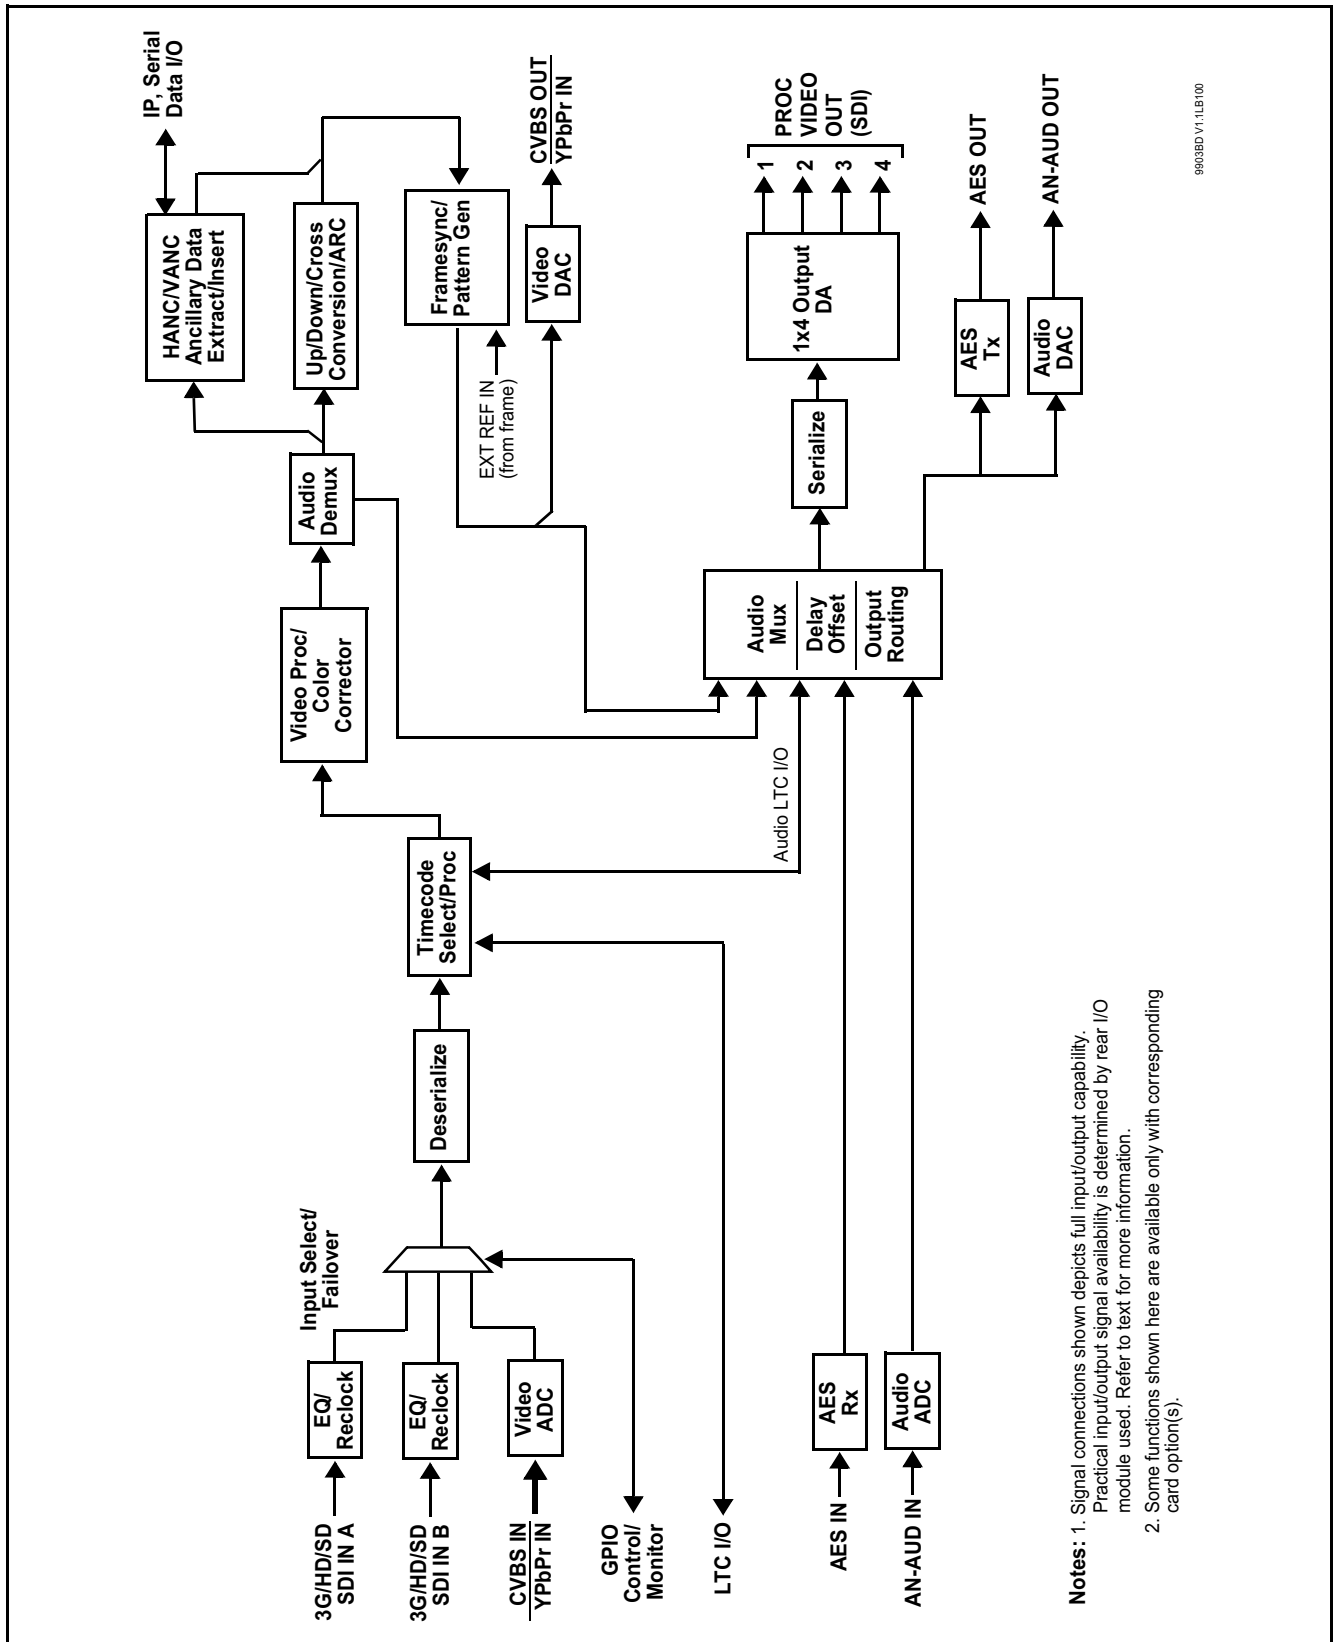


Figure 1-1 9903-UDX-ADDA Functional Block Diagram

Video Processor Description

The 9903-UDX-ADDA features a up/down/cross-convert scaler, frame sync, and user-adjustable aspect ratio control and zoom control. The 9903-UDX-ADDA video subsystem also provides the functions described below.

Input Video Select

A GUI-based control allows the card to select from up to two 3G/HD/SD-SDI inputs, and a SD CVBS or HD/SD YPbPr component analog video input. For analog inputs, waveform-based ancillary data is preserved for extraction and usage later in the card processing chain. Analog video processing uses 10-bit processing with 5-line adaptive comb filtered SD Y/C separation.

The input can be selected using DashBoard manual control, set to failover to an alternate input upon loss of the target input, and can be externally selected via a GPIO interface. All SDI input ports feature RP168 clean switching performed on the specified VBI switch line when a user-selected input change is effected.

Timecode Processor

(See Figure 1-2.) This function provides for extraction of timecode data from input video source, and in turn allow individual timecode strings to be embedded and/or burned into the output video. The function can monitor any of the video inputs of the card for supported timecode formats such as ATC_LTC or ATC_VITC for down-conversions to HD, and ATC_VITC or VITC waveform (with selectable odd/even field line number control) for SD SDI or CVBS inputs. Waveform VITC timecode can also be extracted from a reference input and used as the output timecode value. If the preferred format is detected, the preferred format is used by the card; if the preferred format is not detected, the card uses other formats (where available) as desired. An internally-generated free-run timecode can be also be embedded on output video if desired.

The function also provides conversion between various timecode formats and provides independent insertion and line number controls for each SDI timecode output format.

Option

When licensed with option **+LTC**, this function also can receive, send and translate between audio/RS-485 LTC timecode formats and the VBI formats described above.

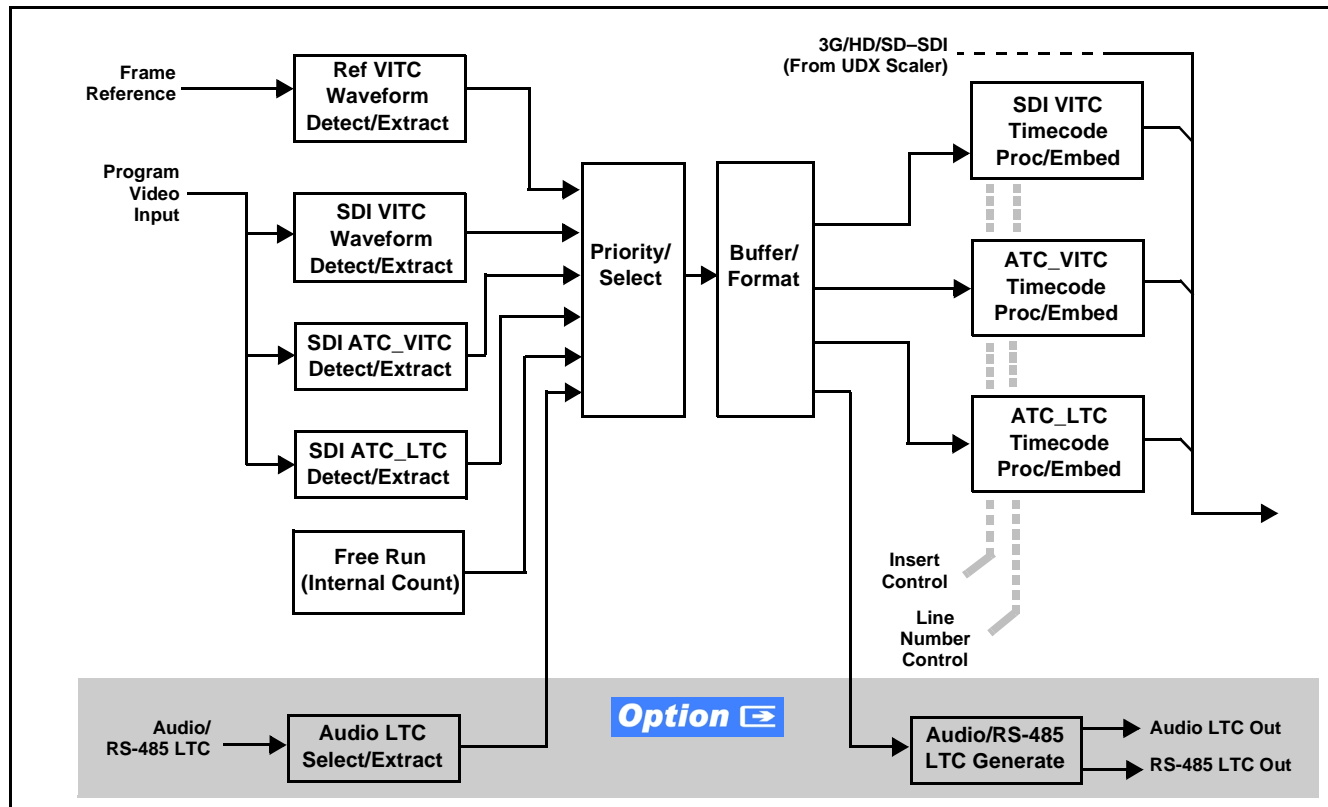


Figure 1-2 Timecode Processor

Frame Sync Function

This function provides for frame sync control using either one of two external **FRAME REF IN (1,2)** reference signals distributed with the card frame, or the input video as a frame sync reference.

This function also allows horizontal and/or vertical offset to be added between the output video and the frame sync reference.

Frame sync can select from either of two card frame reference sources, or free-run input video sync. Selectable failover allows alternate reference selection should the initial reference source become unavailable or invalid. In the event of input video loss of signal, the output can be set to disable video, go to black, go to an internal test signal generator pattern, or freeze to the last intact frame (last frame having valid SAV and EAV codes).

An internal test signal generator provides a selection of several standard patterns such as color bars, sweep patterns, and other technical patterns. The test patterns can be applied to the output video upon loss of input or manually inserted at any time.

Scaler Function

The scaler function provides up/down/cross-conversion to 3G/HD/SD from multiple SD and 3G/HD video formats and multiple frame rates, and cross-conversion between interlaced and progressive formats, with auto-format detect/down-conversion of SMPTE 424M/292M/259M formats.

The scaler function also provides aspect ratio conversion that provides a choice from several standard aspect ratios. User-defined settings allow custom user-defined H and V aspect ratio control. Reticule insertion provides safe action area marking as well as other reticule functions and patterns.

Closed Captioning Processor

This function provides support for closed captioning setup. The function allows the selection of the ancillary data line number where the ancillary closed caption data is outputted when the output is HD. When receiving HD-SDI, both CEA 608 and CEA 708 are supported, with CEA 608 and CEA 708 (containing CEA 608 packets) converted to line 21 closed captioning on outputs down-converted to SD.

Color Corrector **Option** ➞

Option **+COLOR** converts the YCbCr SDI input video to the 4:4:4 RGB color space (where the color correction is applied), and then back to YCbCr SDI on the output. Controls are available to adjust each RGB level independently for both white levels (gain) and black levels (offset). Gamma can also be independently adjusted for each RGB channels. Various controls can be ganged to provide adjustment for all three color channels simultaneously.

Ancillary Data Processor **Option** ➞

This function provides full VANC/HANC ancillary data de-embedding and embedding for 3G/HD/SD-SDI streams. Direct access to DID and SDID locations allows extraction or insertion of user data such as camera PTZ, SCTE 104, closed-captioning read/insert, GPI/GPO via ANC, or other specialized user payloads. Data can be extracted and inserted within the card, bypassing the scaler (Bridge mode), or inserted and/or extracted to and from the card via serial or IP interfaces connecting to external devices/systems. A rear I/O module with a dedicated IP port can be used with the ancillary data processor function for data insertion or extraction via IP.

Audio Processor Description

The audio processor operates as an internal audio router. This function chooses from the following inputs:

- 16 channels of embedded audio from the SDI video input (default 1-to-1 routing to SDI output)
- Up to 16 channels (8 pairs) of discrete AES input¹
- Up to 4 channels of balanced analog audio input

(See Figure 1-3.) The audio processing subsection is built around a card internal 16-channel audio bus. This 16-channel bus receives inputs from an input routing crosspoint that routes de-embedded, and discrete AES and analog audio inputs, over the 16-channel card bus. Correspondingly, at the output end of the 16-channel bus is an output routing crosspoint that in turn distributes the 16-channel bus signals to embedded, and discrete AES and analog audio outputs.

An Input Audio Status display shows the presence and peak level of each input audio channel received by the card. In addition to SDI embedded audio channel sources, analog and coaxial AES inputs are available as input audio choices. For AES audio inputs, payload is identified (PCM or data such as Dolby® Digital or E). Each AES input pair has independent sample rate converters to align each input pair with video timing to accommodate cases where AES audio is not synchronous with input video (SRC automatically bypassed for non-PCM payloads). As such, the audio subsection provides a full crosspoint between all supported audio inputs and output types.

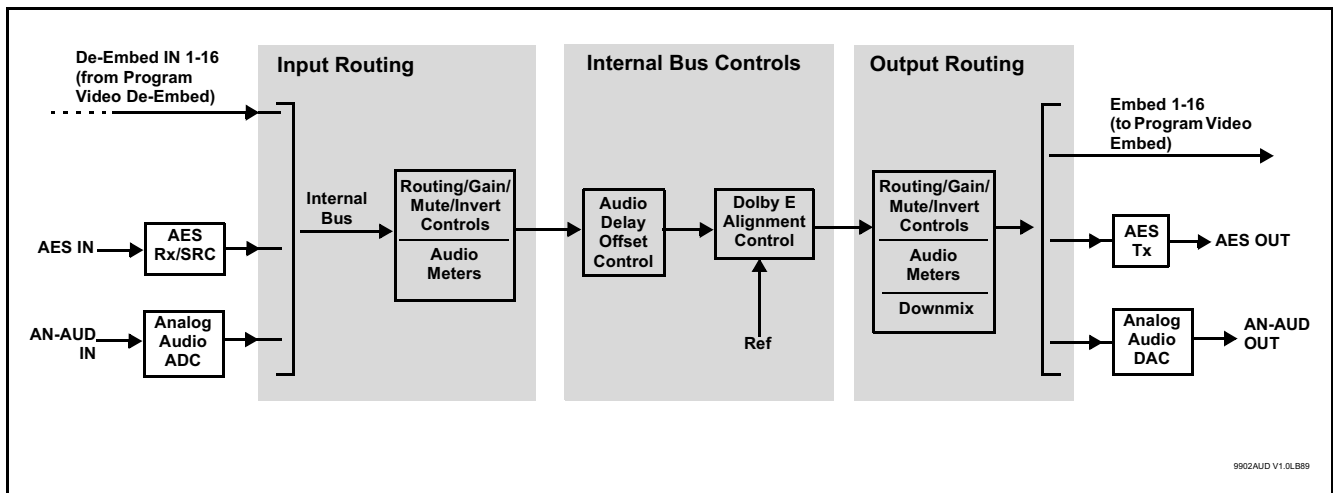


Figure 1-3 Basic Audio Processing Block Diagram

1. Discrete audio I/O channel count is dependent on rear I/O module used. Current rear I/O modules may not support maximum number of available discrete channels.

Flex Buses. For both input and output nodes before and after the card internal bus, flex buses provide flexible-structure mixer in which any of 16 summing nodes (**Flex Mix Bus A** thru **Flex Mix Bus P**) can receive any card audio input, thereby allowing several customizable mixing schemes. Similarly, any of the 16 card internal bus signals can be applied to an output flex bus mixer.

Control and Data Input/Output Interfaces

GPI Interface

Two independent ground-closure sensing GPI inputs (**GPI 1** and **GPI 2**; each sharing common ground connection as chassis potential) are available. Associated with each GPI user control is a selection of one of 32 user-defined card presets in which GPI activation invokes a card control preset. Because the GPI closure invokes a user-defined preset, the resulting setup is highly flexible and totally user-defined. Invoking a user preset to effect a change involves card setup communication limited **only** to the items being changed; the card remains on-line during the setup, and the called preset is rapidly applied.

GPI triggering can be user selected to consider the activity on discrete GPI ports, or combinations of logic states considering both GPI inputs, as well as be set for level or edge triggering. This flexibility allows multistage, progressive actions to be invoked if desired. Indication is provided showing whenever a GPI input has been invoked.

GPO Interface

Two independent phototransistor non-referenced (floating) contact pairs (**GPO 1/1** and **GPO 2/2**) are available. A GPO can be invoked by setting a GPO to be enabled when a card preset is in turn applied (i.e., when a preset is invoked (either manually or via event-based loading), the GPO is correspondingly also activated.

Serial (COMM) Ports

The 9903-UDX-ADDA is equipped with two, 3-wire serial ports (**COM 1 - Serial Port 1**, **COM 2 - Serial Port 2**). The ports provide for SMPTE 2020 de-embedding to an output port, and provide RS-485 LTC I/O (when licensed with option **+LTC**), and can be used with the Ancillary Data Processor option for data insertion or extraction. Either port can be configured as RS-232 Tx/Rx or RS-485 non-duplexed Tx or Rx.

User Control Interface

Figure 1-4 shows the user control interface options for the 9903-UDX-ADDA. These options are individually described below.

Note: All user control interfaces described here are cross-compatible and can operate together as desired. Where applicable, any control setting change made using a particular user interface is reflected on any other connected interface.

- **DashBoard™ User Interface** – Using DashBoard™, the 9903-UDX-ADDA and other cards installed in openGear®¹ frames can be controlled from a computer and monitor.

DashBoard™ allows users to view all frames on a network with control and monitoring for all populated slots inside a frame. This simplifies the setup and use of numerous modules in a large installation and offers the ability to centralize monitoring. Cards define their controllable parameters to DashBoard™, so the control interface is always up to date.

The DashBoard™ software can be downloaded from the Cobalt Digital Inc. website: www.cobaltdigital.com (enter “DashBoard” in the search window). The DashBoard™ user interface is described in Chapter 3, “Operating Instructions”.

- **Cobalt® OGCP-9000 and OGCP-9000/CC Remote Control Panels** – The OGCP-9000 and OGCP-9000/CC Remote Control Panels conveniently and intuitively provide parameter monitor and control of the 9903-UDX-ADDA and other video and audio processing terminal equipment meeting the open-architecture Cobalt® cards for openGear™ standard.

In addition to circumventing the need for a computer to monitor and control signal processing cards, the Control Panels allow quick and intuitive access to hundreds of cards in a facility, and can monitor and allow adjustment of multiple parameters at one time.

The Remote Control Panels are totally compatible with the openGear™ control software DashBoard™; any changes made with either system are reflected on the other. The Remote Control Panel user interface is described in Chapter 3, “Operating Instructions”.

1. openGear® is a registered trademark of Ross Video Limited. DashBoard™ is a trademark of Ross Video Limited.

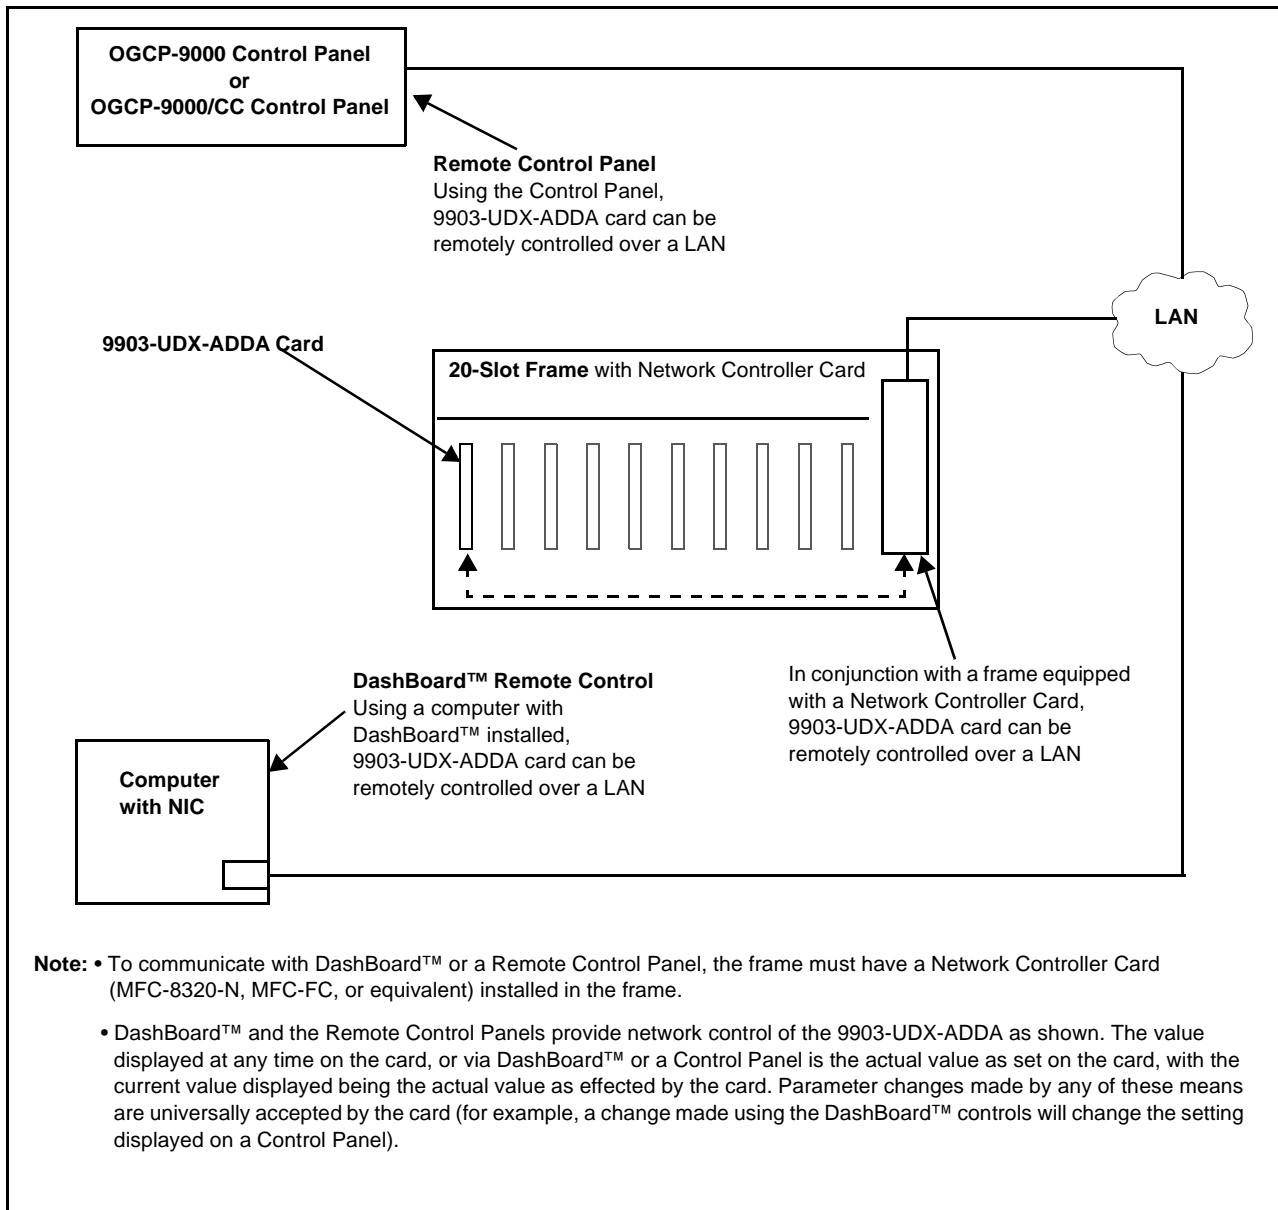


Figure 1-4 9903-UDX-ADDA User Control Interface

Note: If network remote control is to be used for the frame and the frame has not yet been set up for remote control, Cobalt® reference guide **Remote Control User Guide (PN 9000RCS-RM)** provides thorough information and step-by-step instructions for setting up network remote control of Cobalt® cards using Dashboard™. (Cobalt® OGCP-9000 and OGCP-9000/CC Remote Control Panel product manuals have complete instructions for setting up remote control using a Remote Control Panel.)

Download a copy of this guide by clicking on the **Support>Reference Documents** link at www.cobaltdigital.com and then select Dashboard Remote Control Setup Guide as a download, or contact Cobalt® as listed in Contact Cobalt Digital Inc. (p. 1-20).

9903-UDX-ADDA Rear I/O Modules

The 9903-UDX-ADDA physically interfaces to system video connections at the rear of its frame using a Rear I/O Module.

All inputs and outputs shown in the 9903-UDX-ADDA Functional Block Diagram (Figure 1-1) enter and exit the card via the card edge backplane connector. The Rear I/O Module breaks out the 9903-UDX-ADDA card edge connections to BNC and other connectors that interface with other components and systems in the signal chain.

The full assortment of 9903-UDX-ADDA Rear I/O Modules is shown and described in 9903-UDX-ADDA Rear I/O Modules (p. 2-4) in Chapter 2, “Installation and Setup”.

Technical Specifications

Table 1-1 lists the technical specifications for the 9903-UDX-ADDA 3G/HD/SD-SDI Universal UDX Format Converter/Framesync with CVBS/YPbPr Video I/O, AES and Analog Audio Embedding / De-Embedding card.

Table 1-1 Technical Specifications

Item	Characteristic
Part number, nomenclature	9903-UDX-ADDA 3G/HD/SD-SDI Universal UDX Format Converter/Framesync with CVBS/YPbPr Video I/O, AES and Analog Audio Embedding / De-Embedding
Installation/usage environment	Intended for installation and usage in frame meeting openGear™ modular system definition
Power consumption	< 13 Watts maximum
Installation Density	Up to 20 cards per 20-slot frame
Environmental: Operating temperature: Relative humidity (operating or storage):	32° – 104° F (0° – 40° C) < 95%, non-condensing
Frame communication	10/100 Mbps Ethernet with Auto-MDIX
Indicators	Card edge display and indicators as follows: <ul style="list-style-type: none">• 4-character alphanumeric display• Status/Error LED indicator• Input Presence LED indicators

Table 1-1 Technical Specifications — continued

Item	Characteristic
Serial Digital Video Input	<p>Number of Inputs: Up to two 75Ω BNC, with manual select or failover to alternate input.</p> <p>SDI Formats Supported: SMPTE 259M, SMPTE 292M, SMPTE 424M</p> <p>SDI Receive Cable Length: 3G/HD/SD: 120/180/320 m (Belden 1694A)</p> <p>SDI Return Loss: >15 dB up to 1.485 GHz; >10 dB up to 2.970 GHz</p> <p>SDI Alignment Jitter: 3G/HD/SD: < 0.3/0.2/0.2 UI</p> <p>Timing Jitter: 3G/HD/SD: < 2.0/1.0/0.2 UI</p> <p>Note: SDI Return loss and receive cable length are affected by rear I/O module used. Specifications represent typical performance.</p>
Analog Video Input	<p>Number of Inputs: One SD analog CVBS; 3-connector YPbPr component. CVBS can be upsampled to any supported SDI format; all SDI formats can be downconverted to CVBS.</p> <p>Impedance: 75 Ω</p> <p>ADC resolution: 10-bit</p> <p>Sampling frequency: 54 MHz (4x over-sampling SD)</p> <p>SD Y/C separation: 5 line Adaptive Comb Filter</p> <p>SD Freq. Response: ± 0.25 dB to 5.5 MHz</p> <p>SD SNR: > 55 dB to 5.5 MHz (unweighted)</p> <p>Differential Phase: < 1 degree</p> <p>Differential Gain: < 1%</p> <p>Nonlinearity < 1%</p> <p>HD Freq. Response: Y 30 MHz., PbPr 15 MHz</p> <p>HD SNR: > 55 dB to 30 MHz (unweighted)</p>
AES Audio Inputs	<p>Standard: SMPTE 276M</p> <p>Number of Inputs: Up to 16 unbalanced; AES-3id</p> <p>Impedance: 75 Ω</p>

Table 1-1 Technical Specifications — continued

Item	Characteristic
Analog Audio Inputs	Number of Inputs: Two balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu Analog Input Impedance: >10 k Ω Analog Reference Level: -20 dBFS Analog Nominal Level: +4 dBu Analog Input Clip Level: +24 dBu (0 dBFS) Analog Freq. Response: ± 0.2 dB (20 Hz to 20 kHz) Analog SNR: 115 dB (A weighted) Analog THD+N: -96 dB (20 Hz to 10 kHz) Analog Crosstalk: -106 dB (20 Hz to 20 kHz)
Post-Processor Serial Digital Video Outputs	Number of Outputs: Up to four 3G/HD/SD-SDI BNC Impedance: 75 Ω Return Loss: > 15 dB at 5 MHz – 270 MHz Signal Level: 800 mV \pm 10% DC Offset: 0 V \pm 50 mV Jitter (3G/HD/SD): < 0.3/0.2/0.2 UI
Analog Video Output	Number of Outputs: One SD analog CVBS; 3-connector YPbPr component. Impedance: 75 Ω
AES Audio Outputs	Standard: SMPTE 276M Number of Outputs: Up to 16 unbalanced; AES-3id Impedance: 75 Ω

Table 1-1 Technical Specifications — continued

Item	Characteristic
Analog Audio Outputs	Number of Outputs: Two balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu
Frame Reference Input	Number of Inputs: Two, REF 1 and REF 2 from frame with selectable failover Standards Supported: SMPTE 170M/318M ("black burst") SMPTE 274M/296M ("tri-level") Return Loss: > 35 dB up to 5.75 MHz
GPIO/COMM	(2) GPI configurable to select input routing. (2) GPO configurable to invoke upon input selected. (2) RS-232/485 comm ports. All connections via rear module RJ-45 GPIO/ COMM jack.

Warranty and Service Information

Cobalt Digital Inc. Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of shipment to the original purchaser, except that 4000, 5000, 6000, 8000 series power supplies, and Dolby® modules (where applicable) are warranted to be free from defects in material and workmanship for a period of one (1) year.

Cobalt Digital Inc.'s ("Cobalt") sole obligation under this warranty shall be limited to, at its option, (i) the repair or (ii) replacement of the product, and the determination of whether a defect is covered under this limited warranty shall be made at the sole discretion of Cobalt.

This limited warranty applies only to the original end-purchaser of the product, and is not assignable or transferrable therefrom. This warranty is limited to defects in material and workmanship, and shall not apply to acts of God, accidents, or negligence on behalf of the purchaser, and shall be voided upon the misuse, abuse, alteration, or modification of the product. Only Cobalt authorized factory representatives are authorized to make repairs to the product, and any unauthorized attempt to repair this product shall immediately void the warranty. Please contact Cobalt Technical Support for more information.

To facilitate the resolution of warranty related issues, Cobalt recommends registering the product by completing and returning a product registration form. In the event of a warrantable defect, the purchaser shall notify Cobalt with a description of the problem, and Cobalt shall provide the purchaser with a Return Material Authorization ("RMA"). For return, defective products should be double boxed, and sufficiently protected, in the original packaging, or equivalent, and shipped to the Cobalt Factory Service Center, postage prepaid and insured for the purchase price. The purchaser should include the RMA number, description of the problem encountered, date purchased, name of dealer purchased from, and serial number with the shipment.

Cobalt Digital Inc. Factory Service Center

2506 Galen Drive
Champaign, IL 61821 USA
www.cobaltdigital.com

Office: (217) 344-1243
Fax: (217) 344-1245
Email: info@cobaltdigital.com

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON COBALT'S PART. ANY SOFTWARE PROVIDED WITH, OR FOR USE WITH, THE PRODUCT IS PROVIDED "AS IS." THE BUYER OF THE PRODUCT ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE GOODS HEREIN SOLD. COBALT PRODUCTS ARE NOT AUTHORIZED FOR USE IN LIFE SUPPORT APPLICATIONS.

COBALT'S LIABILITY, WHETHER IN CONTRACT, TORT, WARRANTY, OR OTHERWISE, IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT, AND SHALL IN NO EVENT INCLUDE SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS), EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Contact Cobalt Digital Inc.

Feel free to contact our thorough and professional support representatives for any of the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Phone:	(217) 344-1243
Fax:	(217) 344-1245
Web:	www.cobaltdigital.com
General Information:	info@cobaltdigital.com
Technical Support:	support@cobaltdigital.com

Installation and Setup

Overview

This chapter contains the following information:

- Installing the 9903-UDX-ADDA Into a Frame Slot (p. 2-1)
- Installing a Rear I/O Module (p. 2-3)
- Setting Up 9903-UDX-ADDA Network Remote Control (p. 2-7)

Installing the 9903-UDX-ADDA Into a Frame Slot

CAUTION

Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using only convection cooling. The 9903-UDX-ADDA has a moderate power dissipation (<13 W). As such, avoiding placing the card adjacent to other cards with similar dissipation values if possible.

CAUTION



This device contains semiconductor devices which are susceptible to serious damage from Electrostatic Discharge (ESD). ESD damage may not be immediately apparent and can affect the long-term reliability of the device.

Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always use proper ESD handling precautions and equipment when working on circuit boards and related equipment.

Note: If installing the 9903-UDX-ADDA in a slot with no rear I/O module, a **Rear I/O Module is required** before cabling can be connected. Refer to Installing a Rear I/O Module (p. 2-3) for rear I/O module installation procedure.

CAUTION

If required, make certain Rear I/O Module(s) is installed before installing the 9903-UDX-ADDA into the frame slot. Damage to card and/or Rear I/O Module can occur if module installation is attempted with card already installed in slot.

Note: Check the packaging in which the 9903-UDX-ADDA was shipped for any extra items such as a Rear I/O Module connection label. In some cases, this label is shipped with the card and to be installed on the Rear I/O connector bank corresponding to the slot location of the card.

Install the 9903-UDX-ADDA into a frame slot as follows:

1. Determine the slot in which the 9903-UDX-ADDA is to be installed.
2. Open the frame front access panel.
3. While holding the card by the card edges, align the card such that the plastic ejector tab is on the bottom.
4. Align the card with the top and bottom guides of the slot in which the card is being installed.
5. Gradually slide the card into the slot. When resistance is noticed, gently continue pushing the card until its rear printed circuit edge terminals engage fully into the rear I/O module mating connector.

CAUTION

If card resists fully engaging in rear I/O module mating connector, check for alignment and proper insertion in slot tracks. Damage to card and/or rear I/O module may occur if improper card insertion is attempted.

6. Verify that the card is fully engaged in rear I/O module mating connector.
7. Close the frame front access panel.
8. Connect the input and output cables as shown in 9903-UDX-ADDA Rear I/O Modules (p. 2-4).
9. Repeat steps 1 through 8 for other 9903-UDX-ADDA cards.

- Note:**
- The 9903-UDX-ADDA BNC inputs are internally 75-ohm terminated. It is not necessary to terminate unused BNC inputs or outputs.
 - External frame sync reference signals are received by the card over a reference bus on the card frame, and not on any card rear I/O module connectors. The frame has BNC connectors labeled **REF 1** and **REF 2** which receive the reference signal from an external source such as a house distribution.
 - To remove a card, press down on the ejector tab to unseat the card from the rear I/O module mating connector. Evenly draw the card from its slot.
10. If network remote control is to be used for the frame and the frame has not yet been set up for remote control, perform setup in accordance with Setting Up 9903-UDX-ADDA Network Remote Control (p. 2-7).

Note: If installing a card in a frame already equipped for, and connected to DashBoard™, no network setup is required for the card. The card will be discovered by DashBoard™ and be ready for use.

Installing a Rear I/O Module

Note: This procedure is applicable **only if a Rear I/O Module is not currently installed** in the slot where the 9903-UDX-ADDA is to be installed.
If installing the 9903-UDX-ADDA in a slot already equipped with a suitable I/O module, omit this procedure.

Install a Rear I/O Module as follows:

1. On the frame, determine the slot in which the 9903-UDX-ADDA is to be installed.
2. In the mounting area corresponding to the slot location, install Rear I/O Module as shown in Figure 2-1.

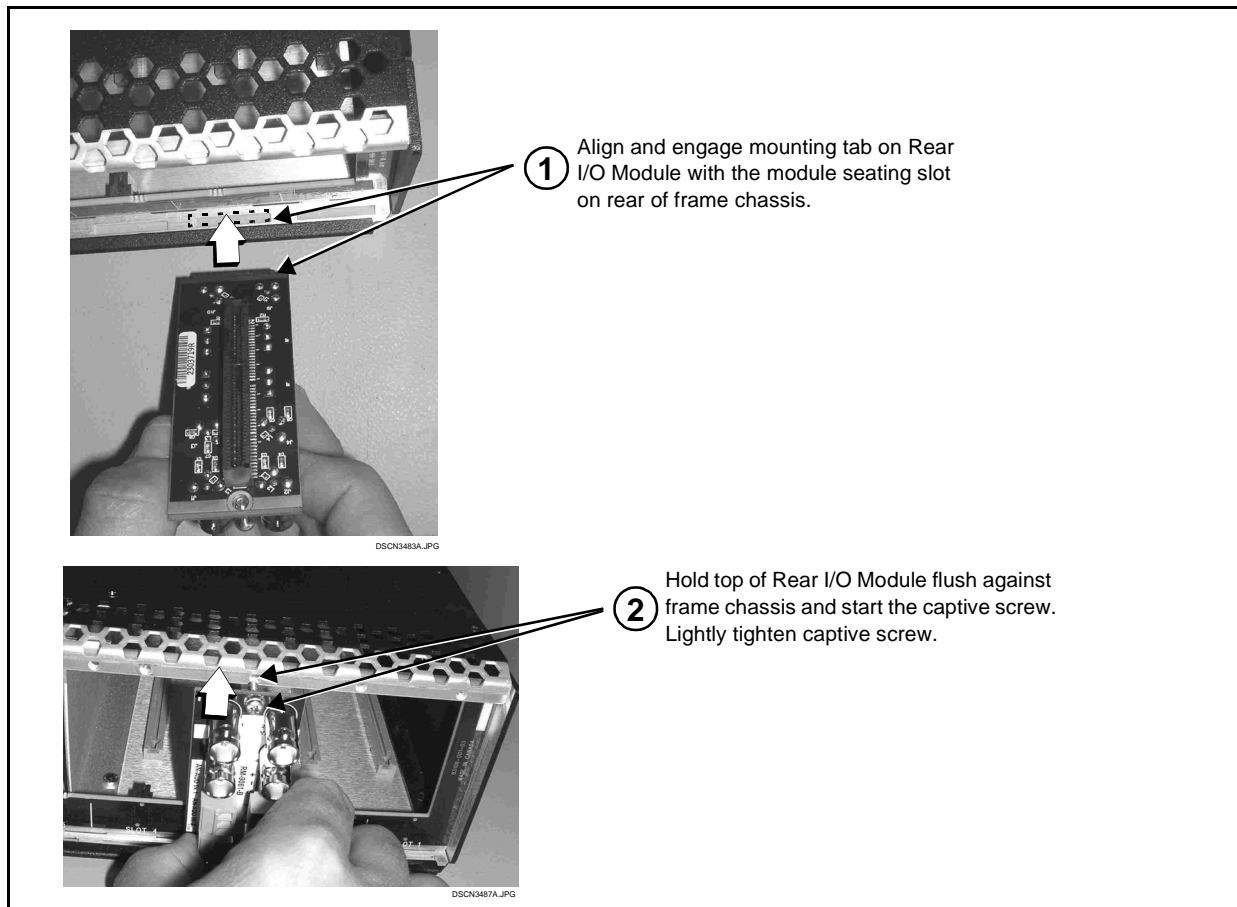


Figure 2-1 Rear I/O Module Installation

9903-UDX-ADDA Rear I/O Modules

Table 2-1 shows and describes the full assortment of Rear I/O Modules specifically for use with the 9903-UDX-ADDA.

Notes: Rear I/O Modules equipped with 3-wire Phoenix connectors are supplied with removable screw terminal block adapters. For clarity, the adapters are omitted in the drawings below.

Table 2-1 9903-UDX-ADDA Rear I/O Modules

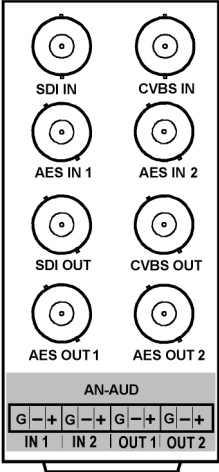
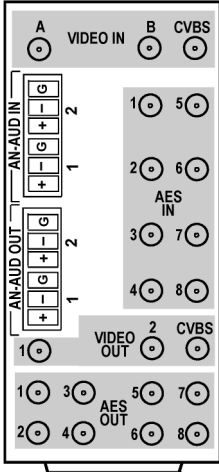
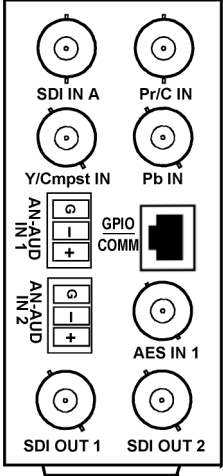
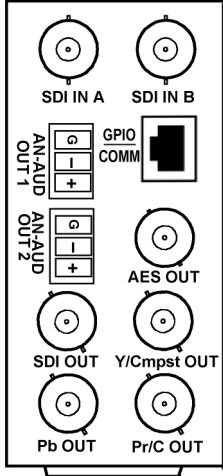

9903-UDX-ADDA Rear I/O Module	Description
RM20-9903-B 	<p>Provides the following connections:</p> <ul style="list-style-type: none"> • One 3G/HD/SD-SDI input BNC (SDI IN) • One analog video CVBS coaxial input BNC (CVBS IN) • Two analog balanced audio inputs (AN-AUD IN 1 and AN-AUD IN 2) • Two AES input BNCs (AES IN 1 and AES IN 2) • One 3G/HD/SD-SDI output BNC (SDI OUT) • One analog video CVBS coaxial output BNC (CVBS OUT) • Two analog balanced audio outputs (AN-AUD OUT 1 and AN-AUD OUT 2) • Two AES output BNCs (AES OUT 1 and AES OUT 2)
RM20-9903-D 	<p>Provides the following connections:</p> <ul style="list-style-type: none"> • Two 3G/HD/SD-SDI inputs (SDI IN A and SDI IN B) • One CVBS video input (CVBS IN) • Two analog balanced audio inputs (AN-AUD IN 1 and AN-AUD IN 2) • Eight AES audio inputs (AES IN 1 thru AES IN 8) • Two 3G/HD/SD-SDI outputs (SDI OUT 1 and SDI OUT 2) • One CVBS video output (CVBS OUT) • Two analog balanced audio outputs (AN-AUD OUT 1 and AN-AUD OUT 2) • Eight AES audio outputs (AES OUT 1 thru AES OUT 8) <p>Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9903-D-HDBNC or RM20-9903-D-DIN, respectively.</p>

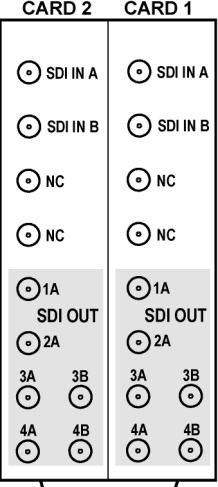
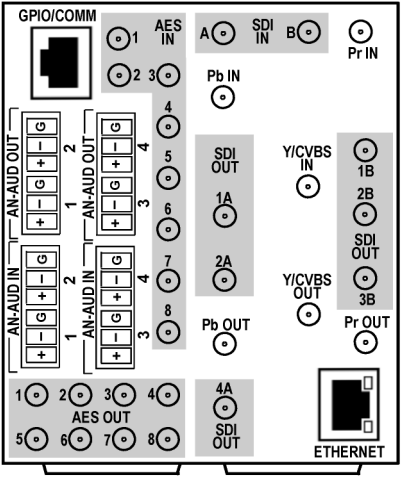
Table 2-1 9903-UDX-ADDA Rear I/O Modules — continued

9903-UDX-ADDA Rear I/O Module	Description
<p>RM20-9903-E</p> 	<p>Provides the following connections:</p> <ul style="list-style-type: none"> • One 3G/HD/SD-SDI input BNC (SDI IN A) • One CVBS/component analog video input (BNC) (Y/Cmpst IN, Pr/C IN, Pb IN) • One AES audio input BNC (AES IN 1) • Two analog balanced audio inputs (AN-AUD IN 1 and AN-AUD IN 2) • Two 3G/HD/SD-SDI output BNCs (SDI OUT 1 and SDI OUT 2) • COMM/GPIO RJ-45 connector. Provides the following: <ul style="list-style-type: none"> - Multi-format serial interface - Two opto-isolated GPI inputs - Two opto-coupled GPO (GPO 1/G and GPO 2/G) <p>Note: Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-7) for connector pinouts and important information regarding GPO electrical limits.</p>
<p>RM20-9903-F</p> 	<p>Provides the following connections:</p> <ul style="list-style-type: none"> • Two 3G/HD/SD-SDI input BNCs (SDI IN A and SDI IN B) • One 3G/HD/SD-SDI output BNC (SDI OUT 1) • One CVBS/component analog video output (BNC) (Y/Cmpst OUT, Pr/C OUT, Pb OUT) • One AES audio output (AES OUT 1) • Two analog balanced audio outputs (AN-AUD OUT 1 and AN-AUD OUT 2) • COMM/GPIO RJ-45 connector. Provides the following: <ul style="list-style-type: none"> - Multi-format serial interface - Two opto-isolated GPI inputs - Two opto-coupled GPO (GPO 1/G and GPO 2/G) <p>Note: Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-7) for connector pinouts and important information regarding GPO electrical limits.</p>
<div>  <div> COBALT RM20-9001-B/S-DIN </div> </div> <p>**SAMPLE-NOT FOR USE**</p>	

Due to the density of connector placement on Rear Modules using high-density connectors (e.g., RM20-9001-B/S-DIN), these modules use a QR barcode label instead a regular label. Simply scan the image with a smart phone and a link to the rear module label (as shown in our catalog) will appear. (Smart phone must have a QR reader app such as QuickMark QR Code Reader or equivalent.)

Not all devices may be able to acquire the image. If this occurs, use the device to access the web page for card/rear module to view the diagram.

Table 2-1 9903-UDX-ADDA Rear I/O Modules — continued

9903-UDX-ADDA Rear I/O Module	Description
<p>RM20-9903-G/S</p> 	<p>Split Rear Module. Provides each of the following connections for two 9903-UDX-ADDA cards:</p> <ul style="list-style-type: none"> • Two 3G/HD/SD-SDI inputs (SDI IN A and SDI IN B) • Six 3G/HD/SD-SDI outputs (SDI OUT 1A thru SDI OUT 4B) <p>Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9903-G/S-HDBNC or RM20-9903-G/S-DIN, respectively.</p>
<p>RM20-9903-H</p> 	<p>Double-width rear modules provides the following connections:</p> <ul style="list-style-type: none"> • Two 3G/HD/SD-SDI inputs (SDI IN A and SDI IN B) • One CVBS/component analog video input (Y/Cmpst IN, Pr/C IN, Pb IN) • Four analog balanced audio inputs (AN-AUD IN 1 thru AN-AUD IN 4) • Eight AES audio inputs (AES IN 1 thru AES IN 8) • Four 3G/HD/SD-SDI outputs (SDI OUT 1B thru SDI OUT 4A) • One CVBS/component analog video output (Y/Cmpst OUT, Pr/C OUT, Pb OUT) • Four analog balanced audio outputs (AN-AUD OUT 1 thru AN-AUD OUT 4) • Eight AES audio outputs (AES OUT 1 thru AES OUT 8) • COMM/GPIO RJ-45 connector • ETHERNET 100/1000 BaseT Ethernet connector <p>Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9903-H-HDBNC or RM20-9903-H-DIN, respectively.</p>

GPIO, Serial (COMM), and Analog Audio Connections

Figure 2-2 shows connections to the card multi-pin terminal block connectors. These connectors are used for card serial comm, GPIO, and balanced analog audio connections.

Note: It is preferable to wire connections to plugs oriented as shown in Figure 2-2 rather than assessing orientation on rear module connectors. Note that the orientation of rear module 3-wire audio connectors is not necessarily consistent within a rear module, or between different rear modules. If wiring is first connected to plug oriented as shown here, the electrical orientation will be correct regardless of rear module connector orientation.

Setting Up 9903-UDX-ADDA Network Remote Control

Perform remote control setup in accordance with Cobalt® reference guide “Remote Control User Guide” (PN 9000RCS-RM).

Note: • If network remote control is to be used for the frame and the frame has not yet been set up for remote control, Cobalt® reference guide **Remote Control User Guide (PN 9000RCS-RM)** provides thorough information and step-by-step instructions for setting up network remote control of Cobalt® cards using DashBoard™. (Cobalt® OGCP-9000 and OGCP-9000/CC Remote Control Panel product manuals have complete instructions for setting up remote control using a Remote Control Panel.)

Download a copy of this guide by clicking on the **Support>Reference Documents** link at www.cobaltdigital.com and then select DashBoard Remote Control Setup Guide as a download, or contact Cobalt® as listed in Contact Cobalt Digital Inc. (p. 1-20).

• If installing a card in a frame already equipped for, and connected to DashBoard™, no network setup is required for the card. The card will be discovered by DashBoard™ and be ready for use.

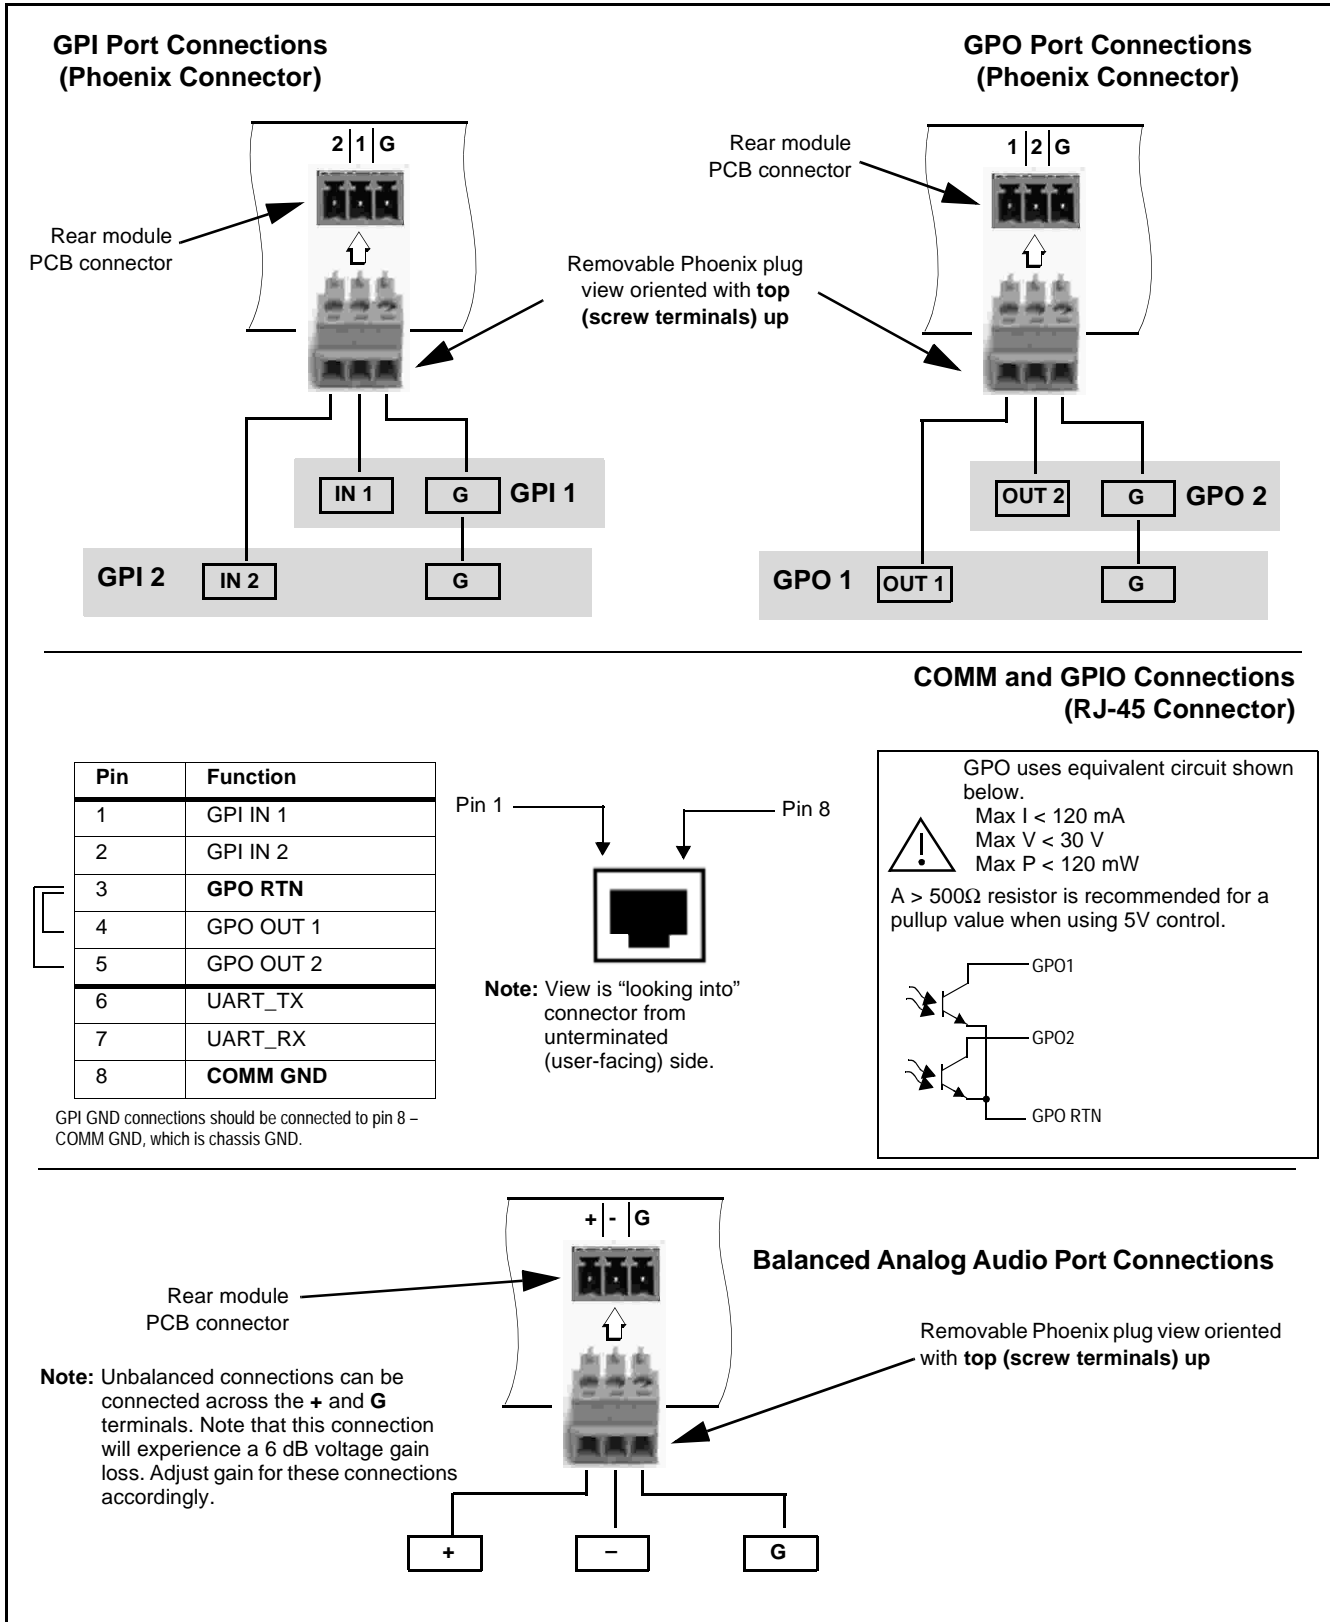


Figure 2-2 COMM, GPIO, and Analog Audio Connector Pinouts

Operating Instructions

Overview

If you are already familiar with using DashBoard or a Cobalt Remote Control Panel to control Cobalt cards, please skip to 9903-UDX-ADDA Function Menu List and Descriptions (p. 3-10).

This chapter contains the following information:

- Control and Display Descriptions (p. 3-1)
- Accessing the 9903-UDX-ADDA Card via Remote Control (p. 3-6)
- Checking 9903-UDX-ADDA Card Information (p. 3-8)
- Ancillary Data Line Number Locations and Ranges (p. 3-9)
- 9903-UDX-ADDA Function Menu List and Descriptions (p. 3-10)
- Troubleshooting (p. 3-54)

Control and Display Descriptions

This section describes the user interface controls, indicators, and displays for using the 9903-UDX-ADDA card. The 9903-UDX-ADDA functions can be accessed and controlled using any of the user interfaces described here.

The format in which the 9903-UDX-ADDA functional controls, indicators, and displays appear and are used varies depending on the user interface being used. Regardless of the user interface being used, access to the 9903-UDX-ADDA functions (and the controls, indicators, and displays related to a particular function) follows a general arrangement of Function Menus under which related controls can be accessed (as described in Function Menu/Parameter Overview below).

Note: When a setting is changed, settings displayed on DashBoard™ (or a Remote Control Panel) are the settings as effected by the card itself and reported back to the remote control; the value displayed at any time is the actual value as set on the card.

Function Menu/Parameter Overview

The functions and related parameters available on the 9903-UDX-ADDA card are organized into function **menus**, which consist of parameter groups as shown below.

Figure 3-1 shows how the 9903-UDX-ADDA card and its menus are organized, and also provides an overview of how navigation is performed between cards, function menus, and parameters.

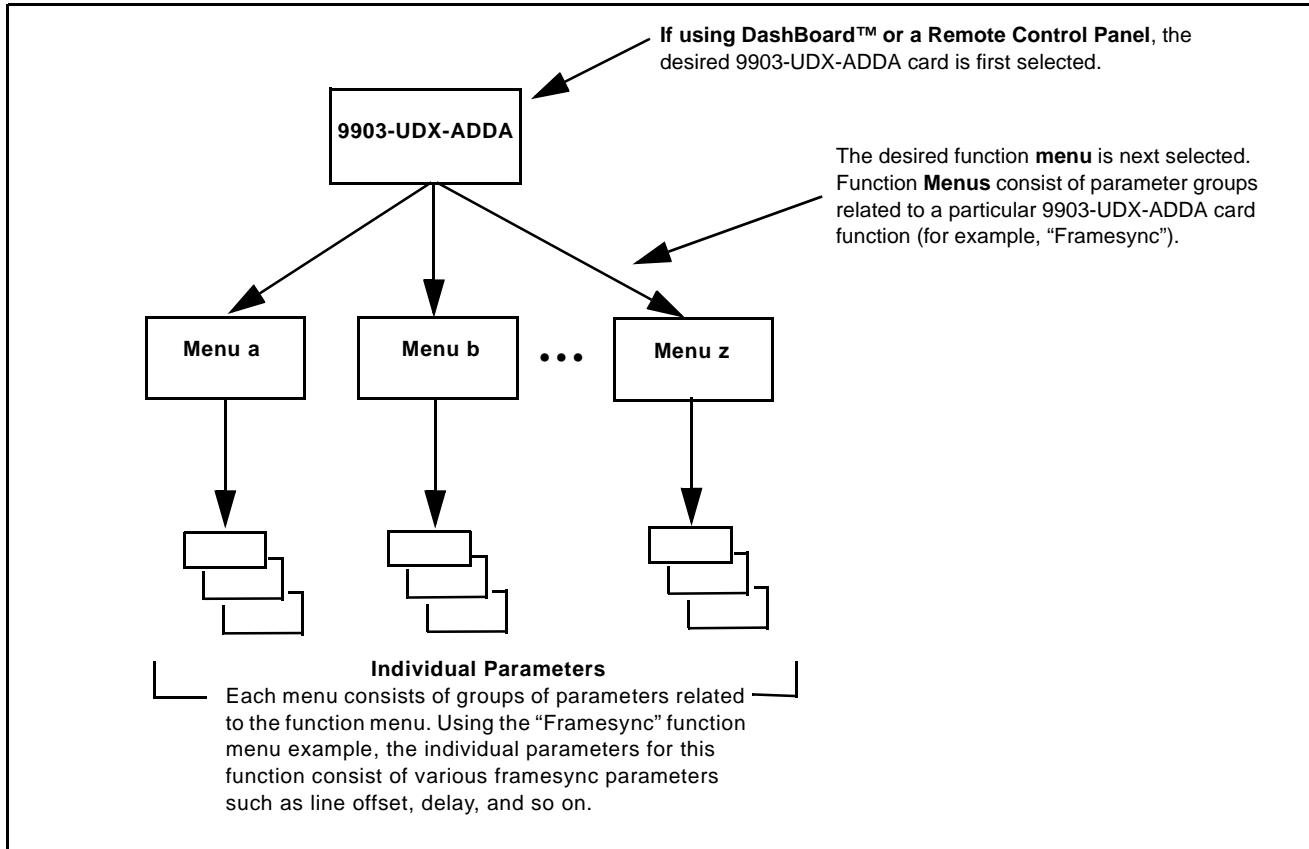


Figure 3-1 Function Menu/Parameter Overview

DashBoard™ User Interface

(See Figure 3-2.) The card function menus are organized in DashBoard™ using tabs. When a tab is selected, each parametric control or selection list item associated with the function is displayed. Scalar (numeric) parametric values can then be adjusted as desired using the GUI slider controls. Items in a list can then be selected using GUI drop-down lists.

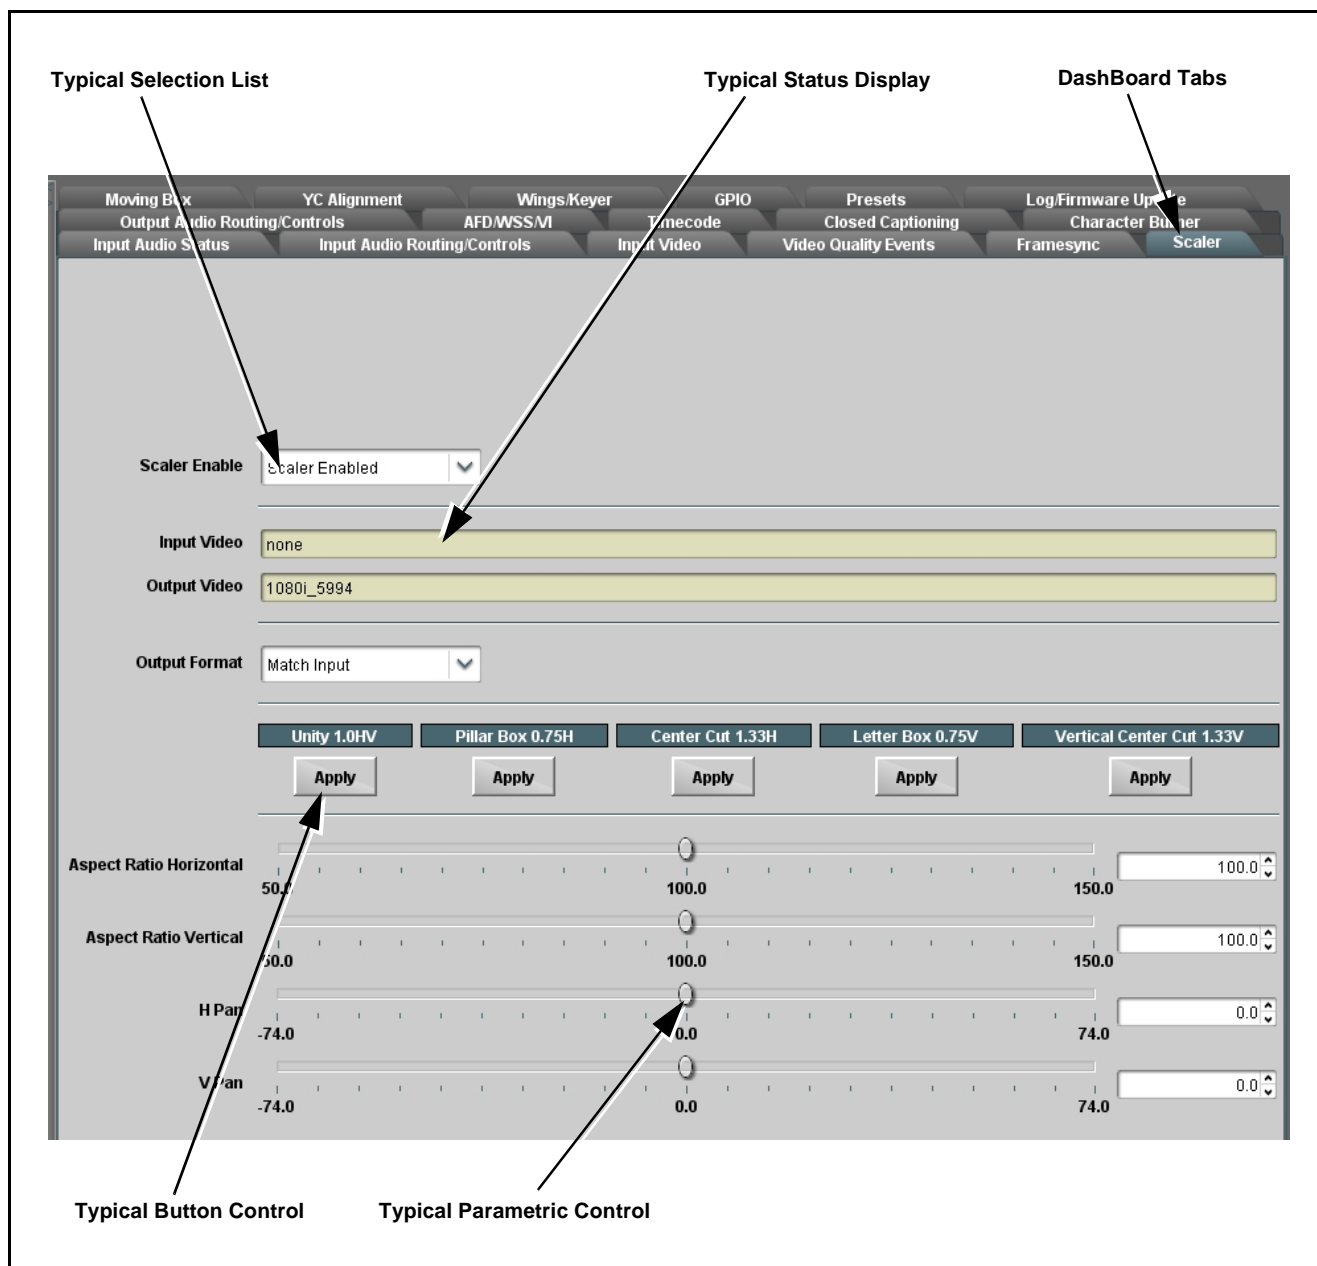


Figure 3-2 Typical DashBoard Tabs and Controls

Cobalt® Remote Control Panel User Interfaces

(See Figure 3-3.) Similar to the function menu tabs using DashBoard™, the Remote Control Panels have a Select Submenu key that is used to display a list of function submenus. From this list, a control knob on the Control Panel is used to select a function from the list of displayed function submenu items.

When the desired function submenu is selected, each parametric control or selection list item associated with the function is displayed. Scalar (numeric) parametric values can then be adjusted as desired using the control knobs, which act like a potentiometer. Items in a list can then be selected using the control knobs which correspondingly act like a rotary switch. (In this manner, the setting effected using controls and selection lists displayed on the Control Panel are comparable to the submenu items accessed and committed using the 9903-UDX-ADDA card edge controls.)

Figure 3-3 shows accessing a function submenu and its parameters (in this example, “Video Proc”) using the Control Panel as compared to using the card edge controls.

Note: Refer to “OGCP-9000 Remote Control Panel User Manual” (PN OGCP-9000-OM) or “OGCP-9000/CC Remote Control Panel User Manual” (PN OGCP-9000/CC-OM) for complete instructions on using the Control Panels.

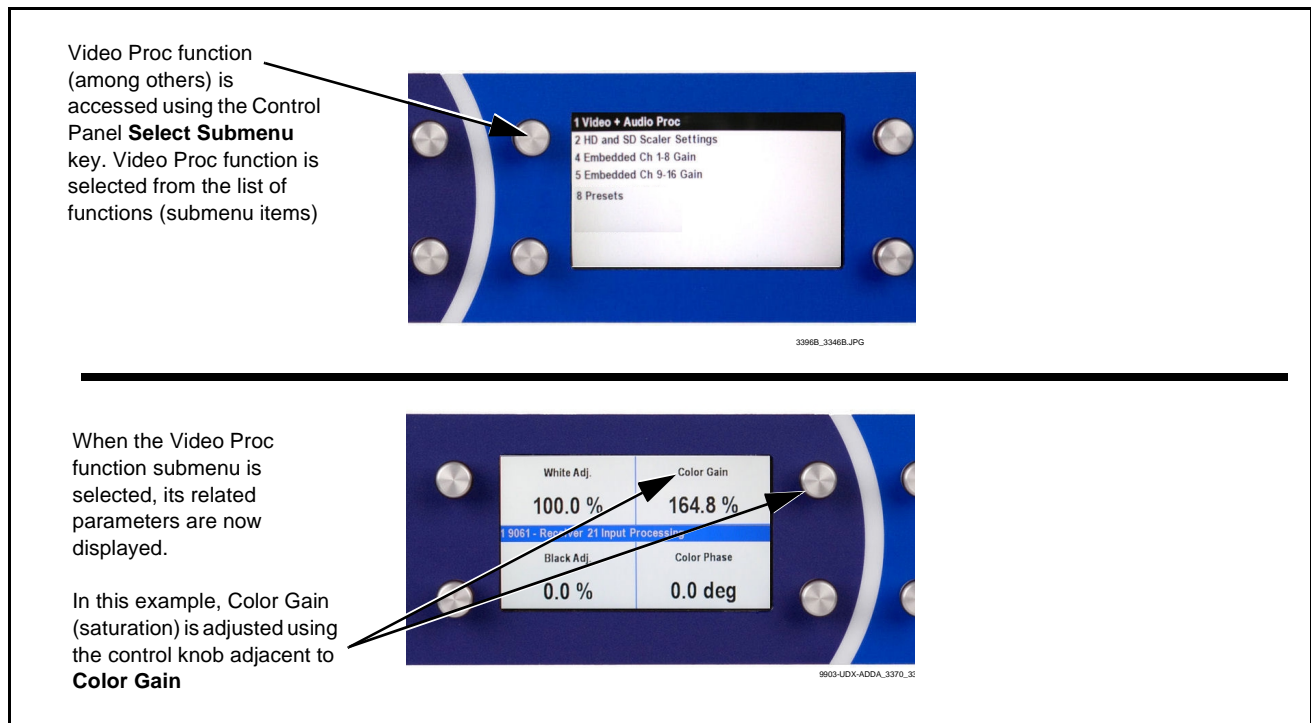


Figure 3-3 Remote Control Panel Setup of Example Video Proc Function Setup

Web HTML5 User Interface

(See Figure 3-4.) When equipped with a rear I/O module having an Ethernet port, the 9903-UDX-ADDA controls can be accessed via a web network connection with no additional remote control software needed. The web GUI shows the same tabs, controls and status displays as those accessed using DashBoard™. This allows very convenient control access to the card, even if using a computer without DashBoard remote control or in case the frame network connection is down.

The card can be accessed in a web browser by entering the card IP address as set in the card **Admin** tab. (See Admin (Log Status/Firmware Update - Card IP Address) (p. 3-52) for more information.)

Note: Card must be equipped with a rear I/O module with an Ethernet port to use html access. The card address is entirely independent of, and requires no association with, the frame openGear IP address.

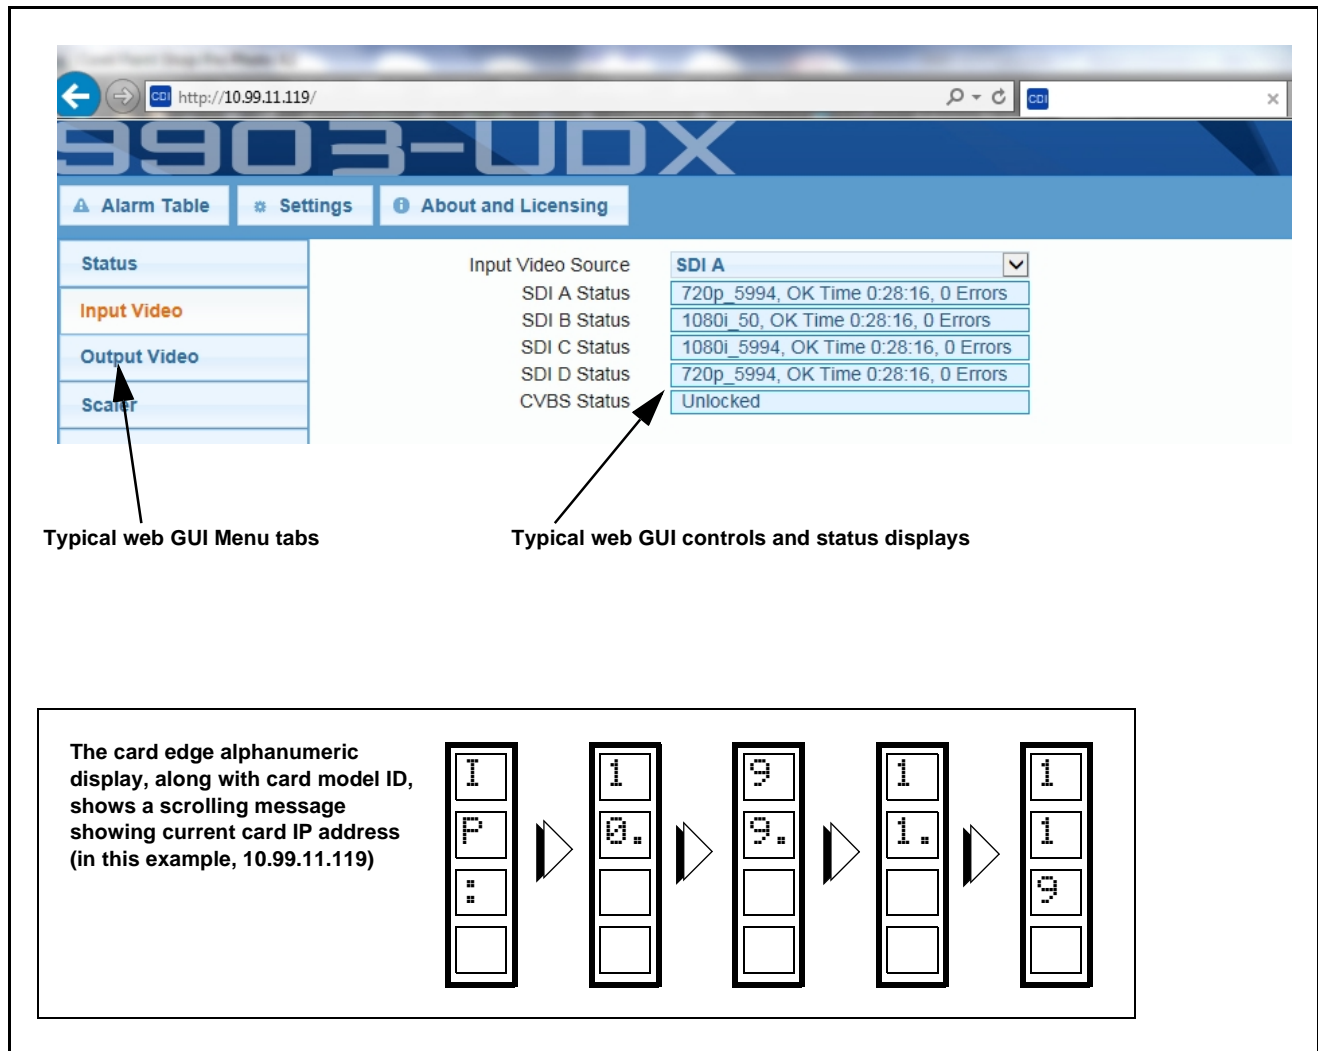


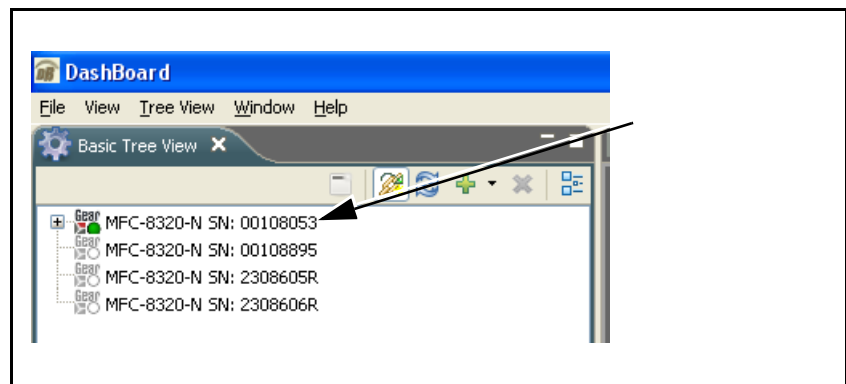
Figure 3-4 Typical Web GUI Tabs and Controls

Accessing the 9903-UDX-ADDA Card via Remote Control

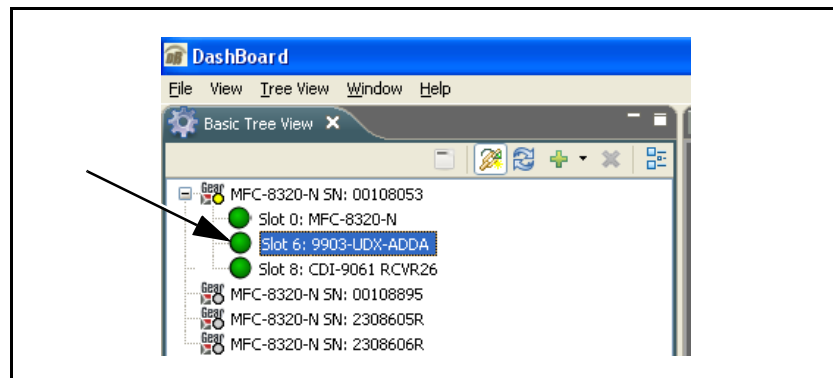
Access the 9903-UDX-ADDA card using DashBoard™ or Cobalt® Remote Control Panel as described below.

Accessing the 9903-UDX-ADDA Card Using DashBoard™

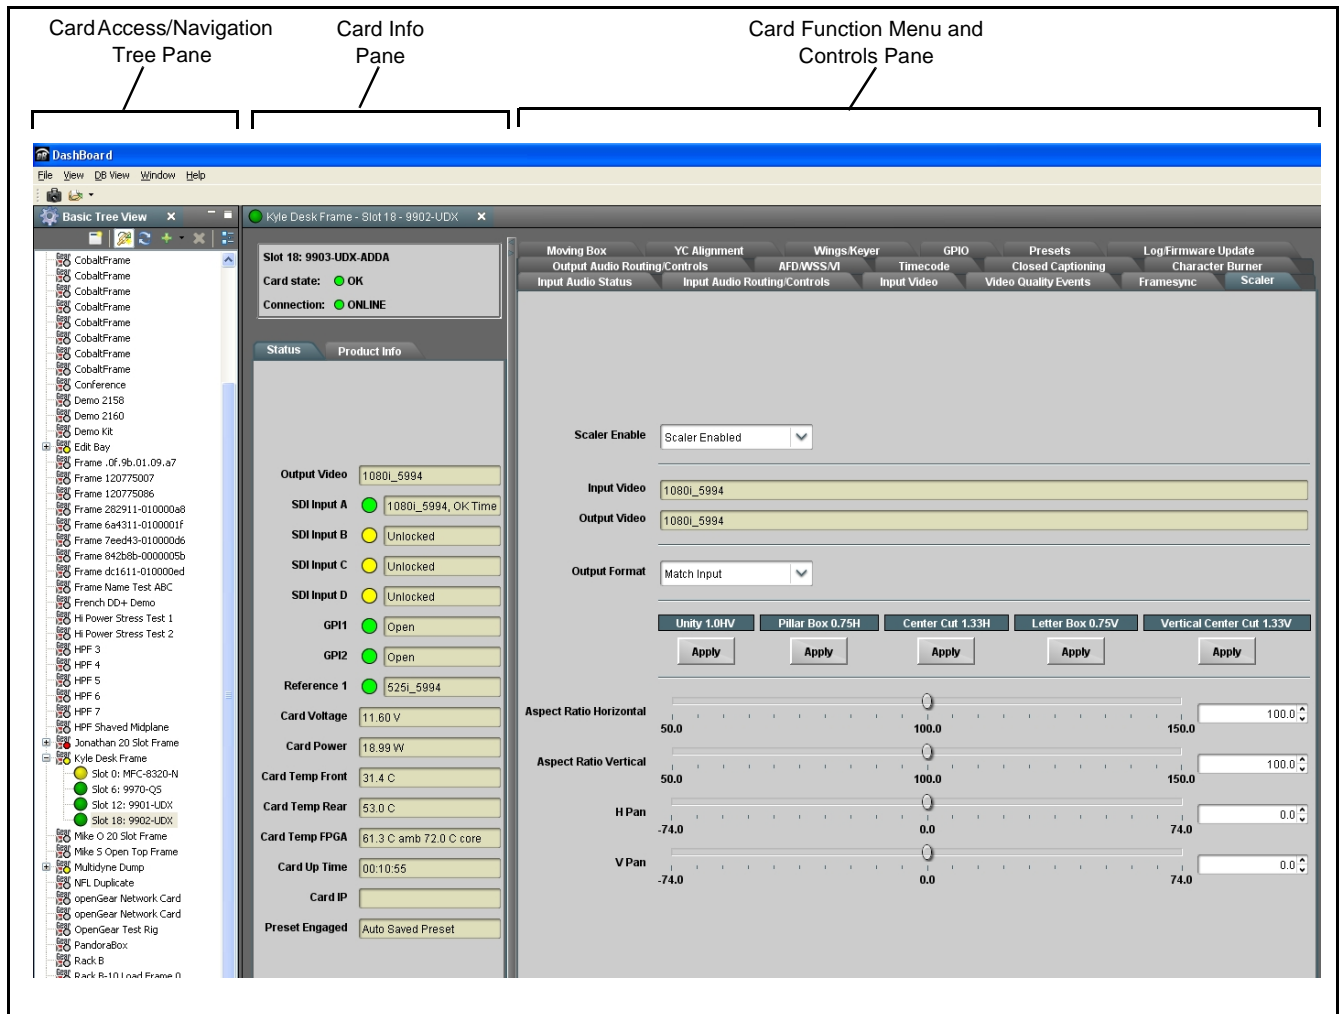
1. On the computer connected to the frame LAN, open DashBoard™.
2. As shown below, in the left side Basic View Tree locate the Network Controller Card associated with the frame containing the 9903-UDX-ADDA card to be accessed (in this example, “MFC-8320-N SN: 00108053”).



3. As shown below, expand the tree to access the cards within the frame. Click on the card to be accessed (in this example, “Slot 6: 9903-UDX-ADDA”).

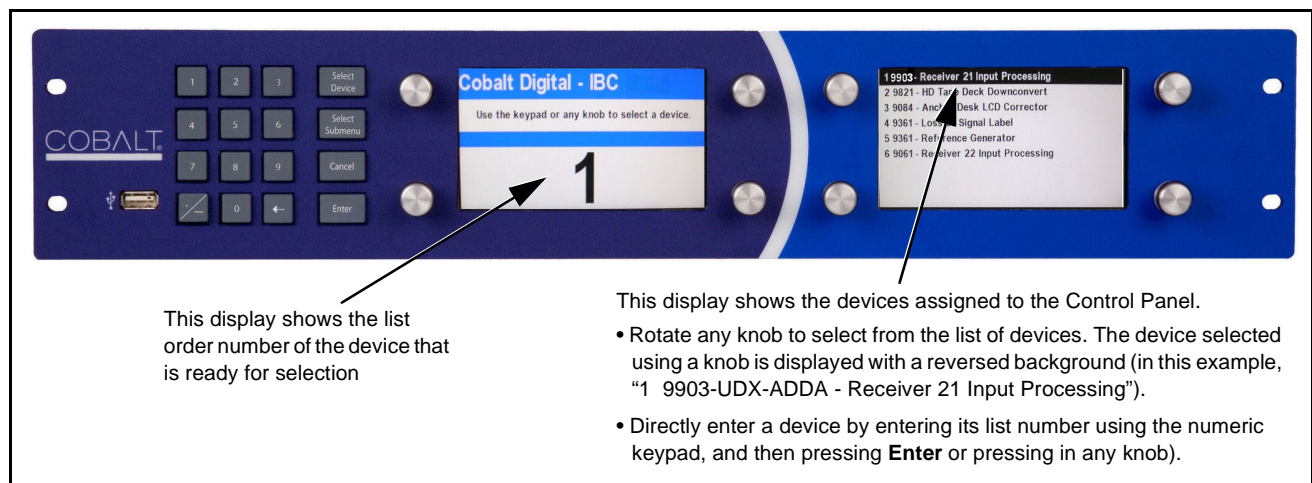


As shown on the next page, when the card is accessed in DashBoard™ its function menu screen showing tabs for each function is displayed. (The particular menu screen displayed is the previously displayed screen from the last time the card was accessed by DashBoard™).



Accessing the 9903-UDX-ADDA Card Using a Cobalt® Remote Control Panel

Press the **Select Device** key and select a card as shown in the example below.



Checking 9903-UDX-ADDA Card Information

The operating status and software version the 9903-UDX-ADDA card can be checked using DashBoard™ or the card edge control user interface. Figure 3-5 shows and describes the 9903-UDX-ADDA card information screen using DashBoard™ and accessing card information using the card edge control user interface.

Note: Proper operating status in DashBoard™ is denoted by green icons for the status indicators shown in Figure 3-5. Yellow or red icons respectively indicate an alert or failure condition. Refer to Troubleshooting (p. 3-54) for corrective action.

The **Tree View** shows the cards seen by DashBoard™. In this example, Network Controller Card is hosting a 9903-UDX-ADDA card in slot 16.

Status Display
This displays shows the status and format of the signals being received by the 9903-UDX-ADDA, as well as card status.

Card Info Display
This displays (alternately selected in the Card Info pane) shows the the card hardware and software version info, as well as a Cobalt code number for the currently installed rear module.

Tree View

- HPF-9000_SW-D
 - Slot 0: HPF-FC
 - Slot 2: CDI-9121 test
 - Slot 8: 9922-2F5
 - Slot 15: 9502-DCDA-3G
 - Slot 16: 9903-UDX-ADDA
 - Slot 17: 9501-DCDA-3G

Status Display

Slot 16: 9903-UDX-ADDA
Card state: ● OK
Connection: ● ONLINE

Product Info

Input Video: 720p 50, OK Time 0:54:13, 0 Errors
Output Video: 720p 50

SDI Input A: ● Unlocked
SDI Input B: ● 720p 50, OK Time 0:54:13, 0 Errors
SDI Input C: ● Unlocked
SDI Input D: ● Unlocked
CVBS Input: ● Unlocked
Reference: ● Unlocked (Ref 2)

Card Voltage: 11.46 V
Card Power: 15.11 W
Card Temp Front: 24.2 C
Card Temp Rear: 54.6 C
Card Temp FPGA: 50.1 C amb
Card Up Time: 00:54:13

Card Info Display

Product: 9903-UDX-ADDA
Product Options: +COLOR +ANC +LTC
Supplier: Cobalt Digital Inc.
Revision: 1.123.B7E9-rel
Build Date: Jul 16 2015 13:29:52
FPGA Revision: 1.00.0000
FPGA Build Date: Jul 10 2015 15:01:12
Kernel Revision: 3.2.0-Local-1.3 #53 Wed Apr 29 22:01:09
Filesystem Revision: 1.0 Jun 03 2015 09:49:55
Flash Storage: 44.0 MB free
RAM Usage: 20.1 %
CPU Usage: 86.1 %
Serial Number: 384315
Rear Module: 1990

Figure 3-5 9903-UDX-ADDA Card Info/Status Utility

Ancillary Data Line Number Locations and Ranges

Table 3-1 lists typical default output video VANC line number locations for various ancillary data items that may be passed or handled by the card.

Table 3-1 Typical Ancillary Data Line Number Locations/Ranges

Item	Default Line No. / Range	
	SD	HD
AFD	12 (Note 2)	9 (Note 2)
ATC_VITC	13 (Note 2)	9/8 (Note 2)
ATC_LTC	—	10 (Note 2)
Dolby® Metadata	13 (Note 2)	13 (Note 2)
SDI VITC Waveform	14/16 (Note 2)	—
Closed Captioning	21 (locked)	10 (Note 2)

Notes:

- The card does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data.
- While range indicated by drop-down list on GUI may allow a particular range of choices, the actual range is automatically clamped (limited) to certain ranges to prevent inadvertent conflict with active picture area depending on video format. Limiting ranges for various output formats are as follows:

Format	Line No. Limiting	Format	Line No. Limiting	Format	Line No. Limiting
525i	12-19	720p	9-25	1080p	9-41
625i	9-22	1080i	9-20		

Because line number allocation is not standardized for all ancillary items, consideration should be given to all items when performing set-ups. Figure 3-6 shows an example of improper and corrected VANC allocation within an HD-SDI stream.

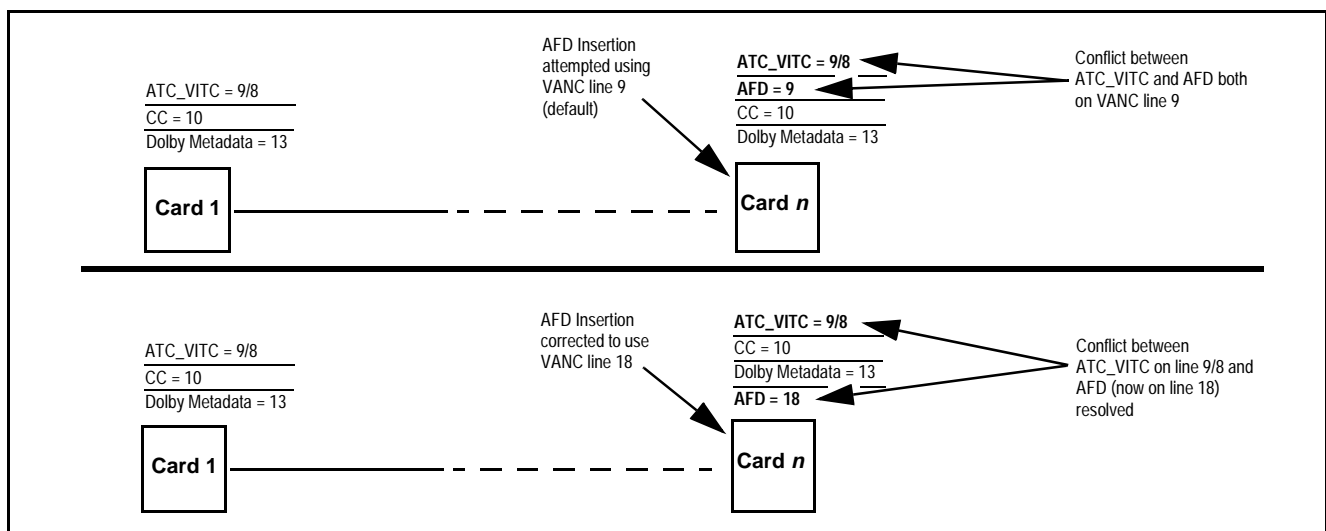



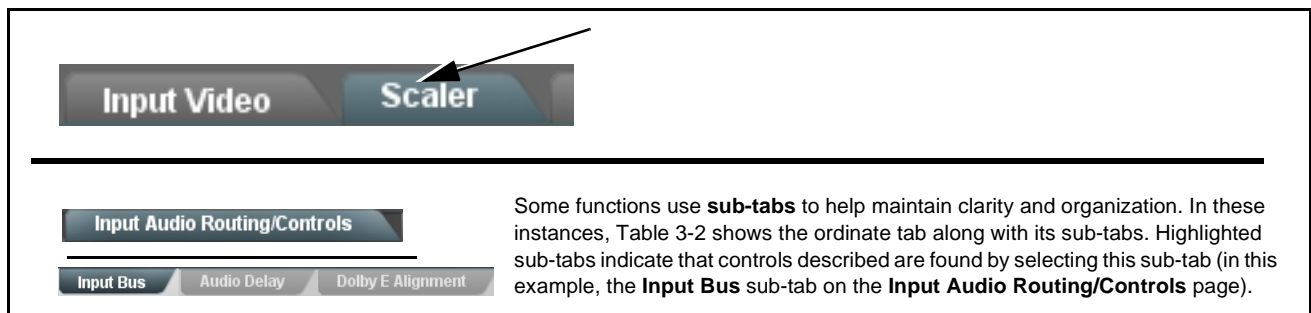
Figure 3-6 Example VANC Line Number Allocation Example

9903-UDX-ADDA Function Menu List and Descriptions

Table 3-2 individually lists and describes each 9903-UDX-ADDA function menu and its related list selections, controls, and parameters. Where helpful, examples showing usage of a function are also provided. Table 3-2 is primarily based upon using DashBoard™ to access each function and its corresponding menus and parameters.

Note: All numeric (scalar) parameters displayed on DashBoard™ can be changed using the slider controls,  arrows, or by numeric keypad entry in the corresponding numeric field. (When using numeric keypad entry, add a return after the entry to commit the entry.)

On DashBoard™ itself and in Table 3-2, the function menu items are organized using tabs as shown below.



The table below provides a quick-reference to the page numbers where each function menu item can be found.

Function Menu Item	Page	Function Menu Item	Page
Input Video Controls	3-11	Timecode	3-37
Output Video Mode Controls	3-12	Closed Captioning	3-42
Scaler	3-13	Ancillary Data Proc Controls	3-43
Framesync	3-16	COMM Ports Setup Controls	3-46
Input Audio Status	3-19	Presets	3-47
Input Audio Routing/Controls	3-20	Event Setup Controls	3-49
Video Proc/Color Correction	3-25	User Log	3-51
Output Audio Routing/Controls	3-28	Admin (Log Status/Firmware Update - Card IP Address)	3-52
AFD/WSS/VI Code Insertion Controls	3-33		

Table 3-2 9903-UDX-ADDA Function Menu List


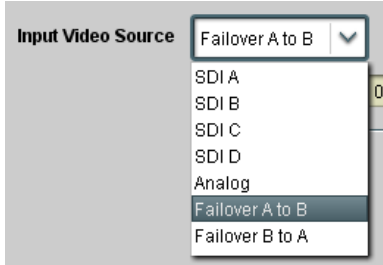
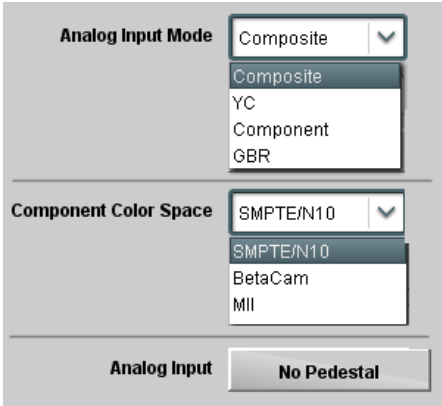
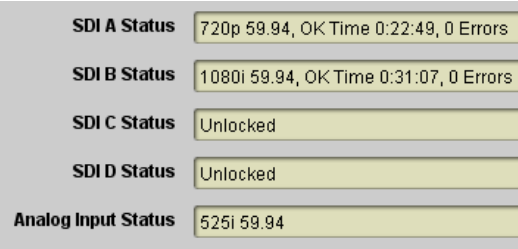
	<p>Allows manual or failover selection of card SDI and analog program video inputs and displays status and raster format of received video.</p>
<p>• Input Video Source</p> 	<p>Selects the input video source to be applied to the card's program video input.</p> <ul style="list-style-type: none"> • SDI A and SDI B choices allow forced manual selection of correspondingly SDI IN A or SDI IN B. • Failover A to B sets main path preference of SDI IN A. <ul style="list-style-type: none"> - If SDI IN A goes invalid, then SDI IN B is selected. - If SDI IN A goes valid again, failover automatically reverts to SDI IN A. • Failover B to A sets main path preference of SDI IN B. <ul style="list-style-type: none"> - If SDI IN B goes invalid, then SDI IN A is selected. - If SDI IN B goes valid again, failover automatically reverts to SDI IN B. • SDI C and SDI D choices allow forced manual selection of correspondingly SDI IN C or SDI IN D without failover choices. • Analog – select CVBS or component input as the program video input. <p>Note: Failover criteria via this control is simple signal presence.</p>
<p>• Analog Video Input Type Control</p> 	<p>When receiving analog video input, sets the card to accept received input signal from choices shown.</p> <p>Analog Input button sets the card input to match analog source containing or not containing 7.5 IRE pedestal.</p> <p>Note: Input type must be appropriately set for the card to correctly process the received input.</p>
<p>• Input Video Status</p> 	<p>Displays input status of each video input, along with elapsed time of signal acquire.</p> <p>SDI A thru SDI D and Analog show raster/format for all card inputs. If signal is not present or is invalid, Unlocked is displayed. (These status indications are also propagated to the Card Info pane.)</p> <p>Note: Status display shows maximum card input complement. Input complement is determined by rear I/O module used.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div> <div>Output Video</div> <div> <div>Output Routing</div> <div>Analog Video</div> </div> </div>	<p>Provides analog video output parameter controls and test pattern output controls for card CVBS and component output.</p>
<p>Note: Output Routing sub-tab is currently reserved and locked to Program Video for all SDI outputs.</p>	
<p>• Analog Video Output Type Control</p> <div> <div>Analog Output Mode</div> <div> <div>Composite PAL/NTSC</div> <div>Composite PAL/NTSC</div> <div>Composite PAL-M</div> <div>Y/C PAL/NTSC</div> <div>Y/C PAL-M</div> <div>Component</div> <div>GBR</div> </div> </div> <div> <div>Component Color Levels</div> <div> <div>SMPTE/N10</div> <div>SMPTE/N10</div> <div>BetaCam</div> <div>MII</div> </div> </div> <div> <div>Oversampling</div> <div> <div>Enable</div> <div></div> </div> </div> <div> <div>Color</div> <div> <div>Enable</div> <div></div> </div> </div> <div> <div>Test Pattern</div> <div> <div>Disable</div> <div></div> </div> </div>	<p>Analog Output Mode sets the card analog video output from choices shown.</p> <p>Note: PAL-M choices provide a PAL-M analog output derived from NTSC analog or North American SDI video inputs (i.e., 59.94 rate). PAL-M is basically an NTSC signal which uses a PAL color sub-carrier scheme. PAL-M output can only be derived from a 5994 (or related) signal. PAL SDI or analog inputs cannot be “cross-converted” to PAL-M.</p> <p>Component Color Levels sets the card component analog video output from choices shown.</p> <p>Oversampling enables or disables video DAC oversampling. Oversampling can improve rendering of motion for down-conversions to the CVBS SD analog output.</p> <p>Color enables or disables chroma content in the CVBS output.</p> <p>Test Pattern enables manual insertion (replacement) of CVBS output video to instead output 75% color bars.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


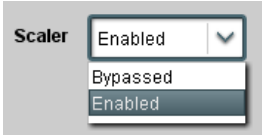
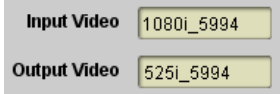
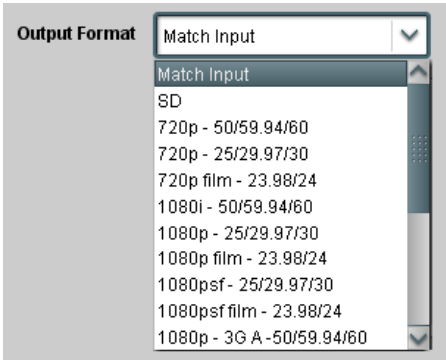
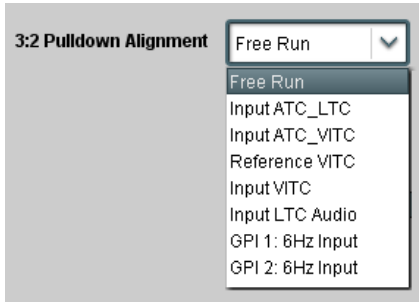
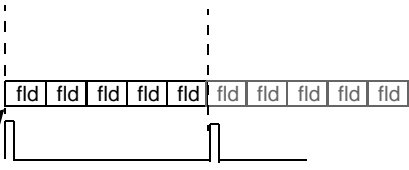
	<p>Provides up/down/cross-converter, aspect ratio controls, and user H/V controls.</p>
<p>• Scaler Enable Control</p> 	<p>Enables or disables Scaler function.</p> <p>Note: When scaler is disabled, all ancillary data is passed from input to output intact. If the scaler is enabled, ancillary data such as timecode and closed captioning must be set for re-insertion as desired. See Timecode (p. 3-37) and Closed Captioning (p. 3-42) for more information about insertion into scaled output video.</p>
<p>• Input/Output Video Status</p> 	<p>Displays signal format/status sent to scaler and output format/status. If invalid or no signal is present, none is displayed.</p>
<p>• Output Format Selector</p> 	<p>Provides conversions to formats as shown.</p>
<p>• 3:2 Alignment Optimization Selector</p> 	<p>Provides selection to optimize 3:2 pulldown conversion where timecode or other selections shown are to be relied upon to indicate frame transitions.</p> <div data-bbox="764 1318 1437 1577"> <p>In the example below, A-frame is aligned using 6Hz pulse imported via GPI.</p>  <p>A-Frame alignment to 6Hz pulse via GPI</p> </div> <p>Note: If input video timecode or other marker cannot be relied upon for accurate and precise frame marking, leave control set to Free Run.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

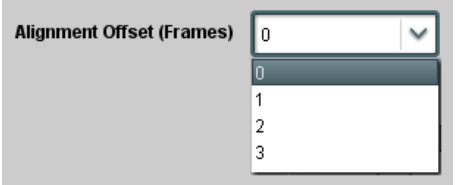
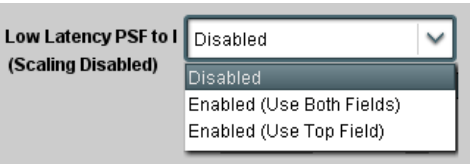
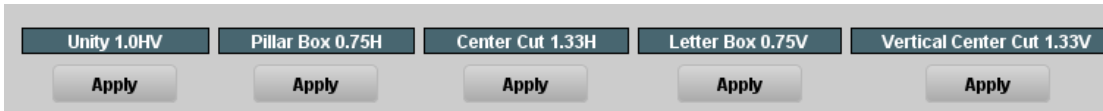
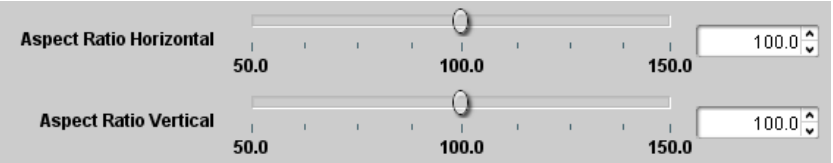
Scaler	(continued)
<p>• Alignment Offset Selector</p> 	<p>Based on alignment selection selected above, offsets A-frame by amount selected.</p>
<p>• Low-Latency PSF to Interlaced Control</p> 	<p>Allows PsF to Interlaced conversions bypassing Scaler ARC and Pan controls to enhance processing latency performance over that available in normal mode.</p> <ul style="list-style-type: none"> • Disabled: This is card “normal” setting that locks out the low-latency processing function. Normal scaler processing latency (along with full ARC and pan control) is available with this setting. • Enabled (Use Both Fields): This setting provides a highest-quality low-latency setting, and can be expected to provide an approximate latency of 12 msec for North American frame rates. • Enabled (Use Top Field): This setting provides the lowest available latency with a slight reduction of motion smoothness due to alignment not waiting for both fields. This setting can be expected to provide an approximate latency of 6 msec for North American frame rates. <p>Note: When either low latency mode is enabled, image ARC scaling and/or panning is locked out.</p>
<p>• Standard Quick Set Aspect Ratio Conversion Selectors</p> 	<p>Selects between the standard preset Aspect Ratio Conversions (ARC) shown below.</p>
<p>• User-defined Aspect Ratio Controls</p> 	<p>Aspect Ratio Horizontal and Aspect Ratio Vertical controls adjust horizontal and vertical zoom percentage. Settings less than (<) 100% provide zoom-out; settings greater than (>) 100% provide zoom-in.</p> <p>(50% to 150% range in 0.1% steps; null = 100.0)</p> <p>Buttons allow standard ARC presets to be applied to output video. For any setting, using the Horizontal or Vertical controls allow user custom settings.</p> <p>Pressing any of the preset buttons restores the ARC to the selected setting and overrides any previous custom settings.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

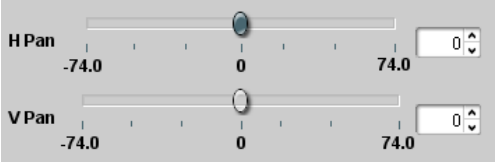
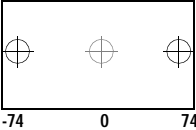
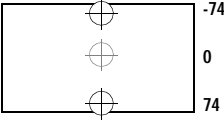
Scaler	(continued)
<div><p>• H Pan and V Pan Controls</p></div>	<p>H Pan control shifts horizontal center of image left (negative settings) or right (positive settings)</p> <p>(-74% to 74% range in 0.1% steps; null = 0.0)</p>  <hr/> <p>V Pan control shifts vertical center of image down (negative settings) or up (positive settings)</p> <p>(-74% to 74% range in 0.1% steps; null = 0.0)</p> 

Table 3-2 9903-UDX-ADDA Function Menu List — continued


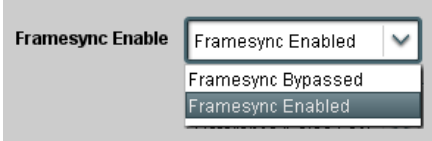
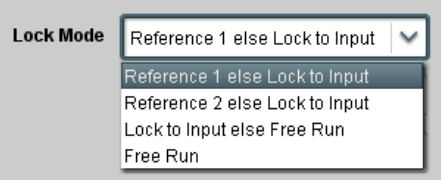

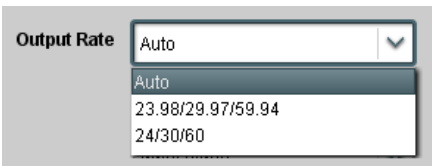
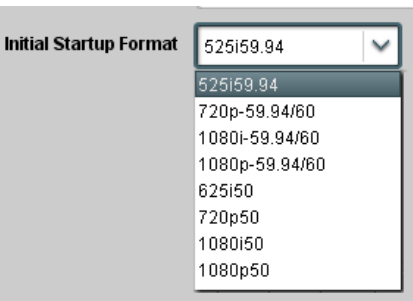
	<p>Provides video frame sync/delay offset control and output control/loss of program video failover selection controls.</p>
<p>• Framesync Enable/Disable Control</p> 	<p>Provides master enable/disable of all card framesync functions/controls.</p>
<p>• Lock Mode Select</p> 	<p>Selects Frame Sync functions from the choices shown to the left and described below.</p> <ul style="list-style-type: none"> • Lock to Reference: Output video is locked to selected external reference received on the frame reference bus. (External reference signal Ref 1 / Ref 2 are distributed to the card and other cards via the Ref 1 / Ref 2 buses on the frame.) <ul style="list-style-type: none"> Note: If valid reference is not received, the <small>Card state:</small>  Reference Invalid indication appears in the Card Info status portion of DashBoard™, indicating invalid frame sync reference error. • Lock to Input: Uses the program video input video signal as the reference standard. <ul style="list-style-type: none"> Note: If Lock to Input is used for framesync, any timing instability on the input video will result in corresponding instability on the output video. • Free Run: Output video is locked to the card's internal clock. Output video is not locked to external reference.
<p>• Output Rate Select</p> 	<p>Allows frame rate to be outputted same as input video, or converted to from the choices shown to the left and described below.</p> <ul style="list-style-type: none"> • Auto – output video frame rate tracks with input video. • 23.98/29.97/59.94 – forces standard North American frame rates. Can be used to convert 24/30/60 Hz camera frame rates to corresponding 23.98/29.97/59.94 standard North American frame rates. • 24/30/60 – forces 24/30/60 frame rates. Can be used to convert 23.98/29.97/59.94 Hz frame rates to corresponding 24/30/60 Hz frame rates.
<p>• Initial Startup Format Select</p> 	<p>Selects a synthesized frame sync format/rate to be invoked (from the choices shown to the left) in the time preceding stable lock to external reference.</p> <p>Set this control to that of the intended external reference to help ensure smoothest frame sync locking. This control also sets the card test pattern format where the card's initial output at power-up is the internal pattern instead of program video.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

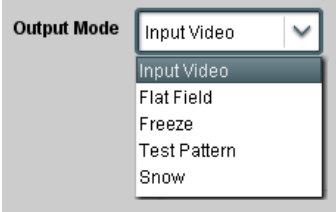
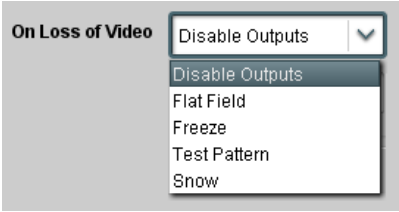
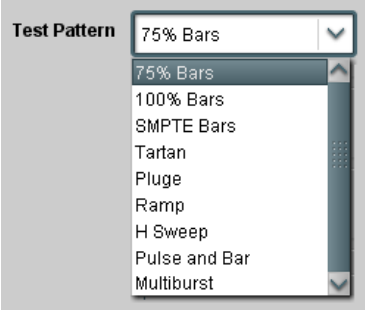
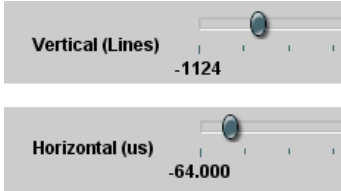
<div data-bbox="297 262 644 325" style="background-color: #333; color: white; text-align: center; padding: 5px; font-weight: bold;">Framesync</div>	(continued)
<p>• Program Video Output Mode Select</p> 	<p>Provides a convenient location to select between card program video output and other technical outputs from the choices shown to the left and described below.</p> <ul style="list-style-type: none"> • Input Video – card outputs input program video (or loss of signal choices described below). • Flat Field (Black) – card outputs black flat field. • Freeze – card outputs last frame having valid SAV and EAV codes. • Test Pattern – card outputs standard technical test pattern (pattern is selected using the Pattern drop-down described below). • Snow – card outputs synthesized snow multi-color pattern.
<p>• Loss of Input Signal Selection</p> 	<p>In the event of program input video Loss of Signal (LOS), determines action to be taken as follows:</p> <ul style="list-style-type: none"> • Disable Outputs: Disable program video SDI outputs. • Flat Field (Black) – go to black flat field on program video output. • Freeze – go to last frame having valid SAV and EAV codes on program video output. • Test Pattern – go to standard technical test pattern on program video output (pattern is selected using the Pattern drop-down described below). • Snow – output synthesized snow multi-color pattern.
<p>• Test Pattern Select</p> 	<p>Provides a choice of standard technical patterns (shown to the left) when Test Pattern is invoked (either by LOS failover or directly by selecting Test Pattern on the Program Video Output Mode Select control).</p>
<p>• Output Video Reference Offset Controls</p> 	<p>With framesync enabled, provides the following controls for offsetting the output video from the reference:</p> <ul style="list-style-type: none"> • Vertical (Lines) – sets vertical delay (in number of lines of output video) between the output video and the frame sync reference. (Positive values provide delay; negative values provide advance) (Range is -1124 thru 1124 lines; null = 0 lines.) • Horizontal (µs) – sets horizontal delay (in µs of output video) between the output video and the frame sync reference. (Positive values provide delay; negative values provide advance) (Range is -64 thru 64 µsec; null = 0.000 µsec.) <p>Note: Offset advance is accomplished by hold-off of the reference-directed release of the frame, thereby effectively advancing the program video relative to the reference.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued



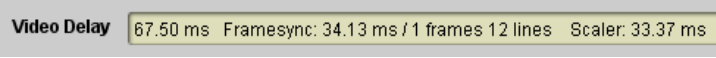
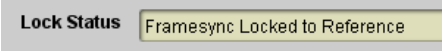
	(continued)
<p>• Frame Delay Control</p> 	<p>When Framesync is enabled, specifies the smallest amount of latency delay (frames held in buffer) allowed by the frame sync. The frame sync will not output a frame unless the specified number of frames are captured in the buffer. The operational latency of the frame sync is always between the specified minimum latency and minimum latency plus one frame (not one field).</p> <p>Note: Due to card memory limits, the maximum available Minimum Latency Frames is related to the output video format selected.</p> <p>When using this control, be sure to check the Report Delay display to make certain desired amount of frames are delayed.</p>
<p>• Video Delay Display</p> 	<p>Displays the current input-to-output video delay (in msec units) as well as in terms of Frames/fractional frame (in number of lines).</p> <p>Status display shows total input-to-output video delay, along with itemized framesync and scaler delays.</p>
<p>• Framesync Lock Status Display</p> 	<p>Displays the current framesync status and reference source.</p>
<p>Note: Audio timing offset from video is performed using the delay controls on the Input Audio Routing/Controls tab. Refer to Input Audio Routing/Controls (p. 3-20) for these controls.</p>	

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Input Audio Status

Displays signal status and payload for embedded and discrete audio received by the card.

Individual signal status and peak level displays for embedded audio input pairs, and AES/analog input pairs as described below. AES pair status also shows sample rate.

- **Absent:** Indicates embedded channel or AES pair does not contain recognized audio PCM data.
- **Present - PCM:** Indicates AES pair or embedded channel contains recognized audio PCM data.
- **Dolby E:** Indicates embedded channel or AES pair contains Dolby® E encoded data.
- **Dolby Digital:** Indicates embedded channel or AES pair contains Dolby® Digital encoded data.

Note: • Dolby status displays occur only for valid Dolby® signals meeting SMPTE 337M standard.

- AES Dolby-encoded inputs that are routed directly to card are directed via a special path that automatically bypasses SRC. However, AES inputs to other destinations (e.g., AES embedding) are first applied through SRC. These paths disable SRC if Dolby-encoded data is detected. To avoid a possible "Dolby noise burst" if an input on these paths changes from PCM to Dolby, it is recommended to set the AES **SRC** control for the pair to **SCR Off** for an AES input that is expected to carry a Dolby signal.

	Status	Peak	
Emb 1-2	Dolby Digital	Data	
Emb 3-4	Present - PCM	-80 dBFS/-80 dBFS	
Emb 5-6	Present - PCM	-80 dBFS/-80 dBFS	
Emb 7-8	Present - PCM	-20 dBFS/-20 dBFS	
Emb 9-10	Present - PCM	0 dBFS/-20 dBFS	
Emb 11-12	Present - PCM	-14 dBFS/-10 dBFS	
Emb 13-14	Present - PCM	-9 dBFS/-5 dBFS	
Emb 15-16	Present - PCM	-3 dBFS/0 dBFS	
	Status	Peak	SRC
AES 1-2	Absent	---/---	SRC On
	⋮		
AES 15-16	Absent	---/---	
	Peak		
Analog 1-2	-74 dBFS/-74 dBFS		

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Input Audio Routing/Controls

Input Bus Audio Delay Dolby E Alignment

Provides audio routing, gain, per-channel/bulk audio delay controls, and audio meters. These controls route selected audio sources onto the card 16-channel internal bus (which is used for all audio processing).

The interface displays 16 audio bus channels, each with the following controls:

- Audio Bus Ch 1 through 8:**
 - Source selection: Emb Ch 1, Emb Ch 2, Emb Ch 3, Emb Ch 4, Emb Ch 5, Emb Ch 6, AES Ch 1, AES Ch 2
- Audio Bus Ch 9 through 16:**
 - Source selection: Emb Ch 9, Emb Ch 10, Emb Ch 11, Emb Ch 12, Emb Ch 13, Emb Ch 14, Emb Ch 15, Emb Ch 16

Each channel includes a Mute button, a level meter, an Invert button, a gain slider (0 to -80), and a 0 dB reference level.

The diagram shows the following routing:

- Input Audio Crosspoint:** Receives input from Emb Ch 1-6 and AES Ch 1-2.
- Card 16-Ch Internal Bus:** Receives audio from the crosspoint and provides Gain, Mute, Bulk and Channel Delay Controls.
- Output Channels:** The internal bus routes audio to 16 channels: Bus Ch 1 through Bus Ch 16. Bus Ch 1-6 are shown with active routing, while Bus Ch 7-16 are shown as Silence or Mute.

All audio inputs are transferred through the card via the 16-channel Internal Bus (**Bus Ch 1** thru **Bus Ch 16**).

The example above shows various Source selections that direct Emb Ch 1 thru Ch 6 and AES Ch 1 and Ch 2 onto the card internal bus (unused bus channels can be set to Silence or Mute).

Each bus channel provides Gain, Mute, and Invert controls.

The source-to-destination correlation shown here is only an example; **any** of the sources described on the following pages can route to **any** of the internal bus channels.

Audio Bus Ch 5

Emb Ch 5

Mute

Invert

20

-30

-80

0

Audio Bus Ch 6

Emb Ch 6

Mute

Invert

20

-30

-80

0

Audio Bus Ch 7

AES Ch 1

Mute

Invert

20

-30

-80

0

Audio Bus Ch 8

AES Ch 2

Mute

Invert

20

-30

-80

0

Audio Bus Ch 9

Emb Ch 9

Mute

Invert

20

-30

-80

0

Audio Bus Ch 10

Emb Ch 10

Mute

Invert

20

-30

-80

0

Audio Bus Ch 11

Emb Ch 11

Mute

Invert

20

-30

-80

0

Audio Bus Ch 12

Emb Ch 12

Mute

Invert

20

-30

-80

0

Audio Bus Ch 13

Emb Ch 13

Mute

Invert

20

-30

-80

0

Audio Bus Ch 14

Emb Ch 14

Mute

Invert

20

-30

-80

0

Audio Bus Ch 15

Emb Ch 15

Mute

Invert

20

-30

-80

0

Audio Bus Ch 16

Emb Ch 16

Mute

Invert

20

-30

-80

0

Table 3-2 9903-UDX-ADDA Function Menu List — continued

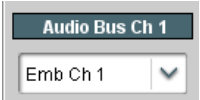
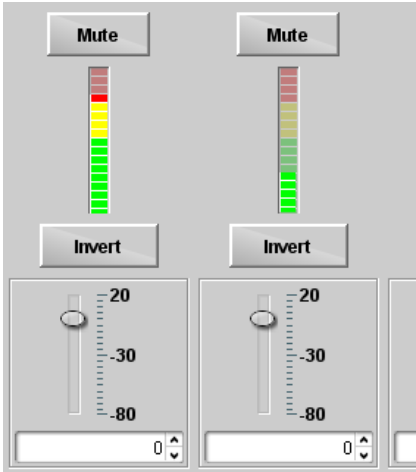

<div>Input Audio Routing/Controls</div> <div> <div>Input Bus</div> <div>Audio Delay</div> <div>Dolby E Alignment</div> </div>	(continued)
<p>Note:</p> <ul style="list-style-type: none"> • Default factory preset routing routes embedded Ch 1 thru Ch 16 to bus channels Audio Bus Ch 1 thru Ch 16. • Bus Ch 2 thru Bus Ch 16 have controls identical to the controls described here for Bus Ch 1. Therefore, only the Bus Ch 1 controls are shown here. 	
<p>• Bus Channel Source</p> 	<p>Using the Source drop-down list, selects the audio input source to be routed to the card bus channel from the following choices:</p> <ul style="list-style-type: none"> • Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) • AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) • Analog input channel 1 thru 16 (Analog Ch 1 or Analog Ch 2) • Input Flex Bus summing nodes A thru P (see Input Flex Mix (p. 3-23)) <p>Note: AES pair and analog channel count are dependent on rear I/O module used.</p>
<p>• Channel Mute/Phase Invert/Gain Controls and Peak Level Display</p> 	<p>Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.)</p> <p>Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel.</p> <p>(-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)</p> <p>Note: Although the card can pass non-PCM data such as Dolby® E or AC-3, setting the gain control to any setting other than default 0 will corrupt Dolby data.</p>
<div>Audio Bus Input Routing/Controls</div> <div> <div>Input Bus</div> <div>Audio Delay</div> <div>Dolby E Alignment</div> </div>	
<p>• Bulk (Master) Audio/Video Delay Control</p> 	<p>Audio Delay – Provides bulk (all four groups/master) and individual card audio bus channel delay offset controls and delay parametric displays.</p> <p>Bulk Delay control adds bulk (all four groups) audio delay from any video delay (net audio delay offset setting adds delay in addition to any delay included by other actions). This control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec).</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

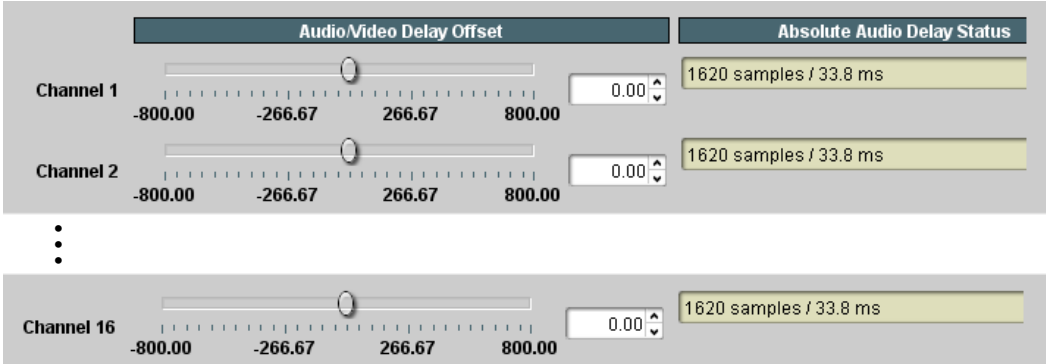
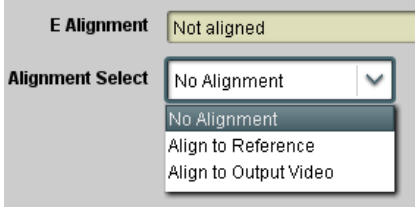
<div data-bbox="191 268 688 331">Audio Bus Input Routing/Controls</div> <div data-bbox="191 346 688 378"> <div>Input Bus</div> <div>Audio Delay</div> <div>Dolby E Alignment</div> </div>	(continued)
<p>• Per-Channel Audio/Video Delay Offset Controls</p> <p>Offset control adds or reduces (offsets) channel audio delay from the matching video delay (audio delay offset setting adds or removes delay in addition to any delay included by other actions). This control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays.</p> <p>(-800.0 to +800.0 msec range in 0.02 msec steps; null = 0.0 msec)</p> <p>Delay Status shows current delay from video for the corresponding audio channel.</p> <p>Note:</p> <ul style="list-style-type: none"> • Maximum advance/delay offset is dependent on video format. • Where a Dolby pair is present, adjustment of either channel control results in a matching delay setting for the other channel in the pair. 	
<div data-bbox="191 1146 688 1209">Audio Bus Input Routing/Controls</div> <div data-bbox="191 1224 688 1255"> <div>Input Bus</div> <div>Audio Delay</div> <div>Dolby E Alignment</div> </div> <p>• Dolby E Embedding Alignment Control</p> 	<p>Dolby E Alignment – Provides selectable Dolby E alignment for embedded Dolby E to position the bitstream utilizing the Dolby E “guard band”. This helps prevent frame errors that may occur in a bitstream upon switching or editing.</p> <p>For incoming Dolby E data routed to the card audio bus (either over embedded channels or via AES embedding to the bus), aligns the embedded Dolby data corresponding to selection. Alignment line as a result of selection is shown in E Alignment Status display.</p> <p>Note: Where a frame reference is available, it is recommended to use the Align to Reference selection. This helps ensure that the correct alignment is achieved even if the video is user delayed or output format (scaling) is changed.</p> <p>Refer to “Preferred Alignment for Dolby E in HD Systems” (http://www.dolby.com/about/news-events/newsletters-dtvaudio-dolby-e-alignment.html) for more information regarding Dolby E alignment.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Audio Bus Input Routing/Controls

Flex Mix

Input Flex Mix – Provides a 16-channel mixer in which each of the inputs can be mixed onto up to 16 independent output summing nodes. Each input channel has independent gain and mute controls.

Source	Flex Bus
Flex Mix 1 Embed Ch 1	Flex Mix A
Flex Mix 2 Embed Ch 2	Flex Mix A
Flex Mix 3 Embed Ch 3	Flex Mix A
Flex Mix 4 Embed Ch 4	Flex Mix A
Flex Mix 5 Embed Ch 5	Flex Mix B
Flex Mix 6 Embed Ch 6	Flex Mix B
Flex Mix 7 Embed Ch 11	Flex Mix B
Flex Mix 8 Embed Ch 12	Flex Mix B
Flex Mix 9 Embed Ch 13	Flex Mix C
Flex Mix 10 Embed Ch 14	Flex Mix C
Flex Mix 11 Embed Ch 15	Flex Mix C
Flex Mix 12 Embed Ch 16	Flex Mix C
Flex Mix 13 Analog Input 1	Flex Mix D
Flex Mix 14 Analog Input 2	Flex Mix D
Flex Mix 15 Analog Input 3	Flex Mix D
Flex Mix 16 Analog Input 4	Flex Mix D

In this example four, 4-input mono mixers are provided by selecting **Flex Mixer Bus A** for the Flex Mix 1 thru Flex Mix 4 inputs, and **Flex Mixer Bus B** for the next four inputs, and so on as shown.

Emb Ch 1 - Ch 16 --> AES Ch 1 - Ch 16 --> Anlg Ch 1- Ch 4 -->

Emb Ch 1 --> Flex Mix 1
Emb Ch 2 --> Flex Mix 2
Emb Ch 3 --> Flex Mix 3
Emb Ch 4 --> Flex Mix 4

Emb Ch 5 --> Flex Mix 5
Emb Ch 6 --> Flex Mix 6
Emb Ch 11 --> Flex Mix 7
Emb Ch 12 --> Flex Mix 8

Emb Ch 13 --> Flex Mix 9
Emb Ch 14 --> Flex Mix 10
Emb Ch 15 --> Flex Mix 11
Emb Ch 16 --> Flex Mix 12

Anlg Ch 1 --> Flex Mix 13
Anlg Ch 2 --> Flex Mix 14

Flex Mix A
Flex Mix B
Flex Mix C
Flex Mix D

To Audio Bus Input Routing

Source	Flex Bus
Flex Mix 1 Embed Ch 1	Flex Mix A
Flex Mix 2 Embed Ch 2	Flex Mix A
Flex Mix 3 AES Ch 1	Flex Mix B
Flex Mix 4 AES Ch 2	Flex Mix B
Flex Mix 5 Analog Input 1	Flex Mix C
Flex Mix 6 Analog Input 2	Flex Mix C
Flex Mix 7 Silence	Flex Mix D
...	
Flex Mix 16 Silence	Flex Mix D

In this example three, 2-input mono mixers are provided by selecting **Flex Mixer Bus A** for the Flex Mix 1 and Flex Mix 2 inputs, and **Flex Mixer Bus B** for the next two inputs, and so on as shown.

Emb Ch 1 - Ch 16 --> AES Ch 1 - Ch 16 --> Anlg Ch 1- Ch 4 -->

Emb Ch 1 --> Flex Mix 1
Emb Ch 2 --> Flex Mix 2

AES Ch 1 --> Flex Mix 3
AES Ch 2 --> Flex Mix 4

Anlg Ch 1 --> Flex Mix 5
Anlg Ch 2 --> Flex Mix 6

Flex Mix A
Flex Mix B
Flex Mix C

To Audio Bus Input Routing

Table 3-2 9903-UDX-ADDA Function Menu List — continued

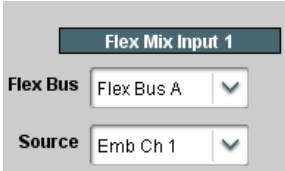
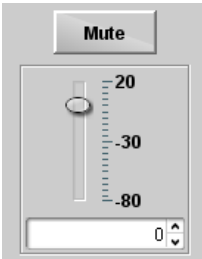
<div>Audio Bus Input Routing/Controls</div> <div>Flex Mix</div>	(continued)
<p>Note: For each Flex Mix input channel, its source should be considered and appropriately set. Unused input channels should be set to the Silence selection.</p>	
<p>• Flex Mix Input Channel Source/Bus Assignment</p> 	<p>Using the Source drop-down list, selects the audio input source to be directed to the corresponding bus channel from the choices listed below.</p> <ul style="list-style-type: none"> • Silence • Embed Ch 1 thru Embed Ch 16 • AES Ch 1 thru AES Ch 16 • Analog Ch 1 thru Analog Ch 2 <p>The Flex Bus drop-down selects the bus (A thru P) to which the input is assigned to.</p> <p>Note: See the examples on the previous page showing various types of mixers using multiple flex buses.</p>
<p>• Gain / Mute Control</p> 	<p>Provides relative gain (in dB) control and a channel Mute checkbox.</p> <p>(-80 to +20 dB range in 0.1 dB steps; unity = 0.0 dB)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

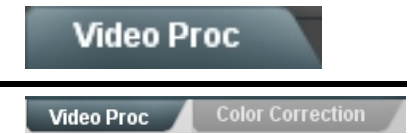


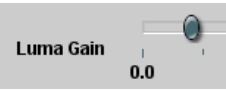



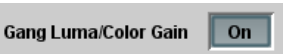
	<p>Provides the following Video Proc and Color Correction parametric controls.</p>
<p>• Video Proc</p> 	<p>Video Proc (Enable/Disable) provides master on/off control of all Video Proc functions.</p> <ul style="list-style-type: none"> • When set to Disable, Video Proc is bypassed. • When set to Enable, currently displayed parameter settings take effect.
<p>• Reset to Unity</p> 	<p>Reset to Unity provides unity reset control of all Video Proc functions. When Confirm is clicked, a Confirm? pop-up appears, requesting confirmation.</p> <ul style="list-style-type: none"> • Click Yes to proceed with the unity reset. • Click No to reject unity reset.
<p>• Luma Gain</p> 	<p>Adjusts gain percentage applied to Luma (Y channel). (0% to 200% range in 0.1% steps; unity = 100%)</p>
<p>• Luma Lift</p> 	<p>Adjusts lift applied to Luma (Y-channel). (-100% to 100% range in 0.1% steps; null = 0.0%)</p>
<p>• Color Gain</p> 	<p>Adjusts gain percentage (saturation) applied to Chroma (C-channel). (0% to 200% range in 0.1% steps; unity = 100%)</p>
<p>• Color Phase</p> 	<p>Adjusts phase angle applied to Chroma. (-360° to 360° range in 0.1° steps; null = 0°)</p>
<p>• Gang Luma/Color Gain</p> 	<p>When set to On, changing either the Luma Gain or Color Gain controls increases or decreases both the Luma and Color gain levels by equal amounts.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

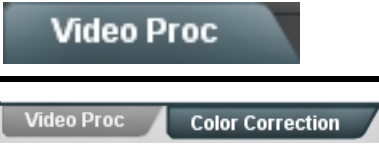



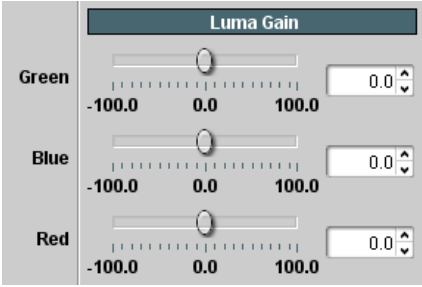
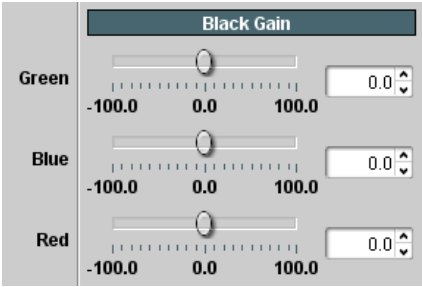
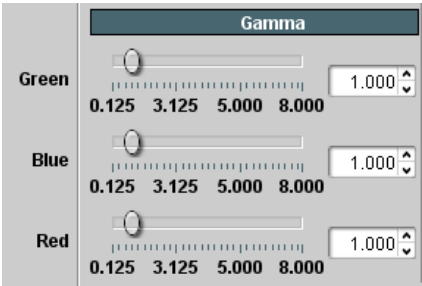
	 <p>Provides color corrector functions for the individual RGB channels for the card program video path (option +COLOR).</p>
<p>• Color Corrector</p> 	<p>Color Corrector (On/Off) provides master on/off control of all Color Corrector functions.</p> <ul style="list-style-type: none"> • When set to Off, all processing is bypassed. • When set to On, currently displayed parameters settings take effect.
<p>• Reset to Unity</p> 	<p>Reset to Unity provides unity reset control of all Color Corrector functions.</p> <p>When Confirm is clicked, a Confirm? pop-up appears, requesting confirmation.</p> <ul style="list-style-type: none"> • Click Yes to proceed with the unity reset. • Click No to reject unity reset.
<p>• Luma Gain R-G-B controls</p>  <p>• Black Gain R-G-B controls</p>  <p>• Gamma Factor R-G-B controls</p> 	<p>Separate red, green, and blue channels controls for Luma Gain, Black Gain, and Gamma curve adjustment.</p> <p>Gain controls provide gain adjustment from 0.0 to 200.0% range in 0.1% steps (unity = 100.0)</p> <p>Gamma controls apply gamma curve adjustment in 0.125 to 8.000 range in thousandths steps (unity = 1.000)</p> <p>Each of the three control groups (Luma, Black, and Gamma) have a Gang Column button which allows settings to be proportionally changed across a control group by changing any of the group's controls.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div data-bbox="282 268 579 331">Video Proc</div> <hr/> <div data-bbox="282 365 659 407"> <div>Video Proc</div> <div>Color Correction</div> </div>	(continued)
<ul style="list-style-type: none"> • Black Hard Clip <div data-bbox="282 512 548 596"> <div>Black Hard Clip</div> <div>-6.8</div> </div>	<p>Applies black hard clip (limiting) at specified percentage.</p> <p>(-6.8% to 50.0%; null = -6.8%)</p>
<ul style="list-style-type: none"> • White Hard Clip <div data-bbox="282 688 544 772"> <div>White Hard Clip</div> <div>50.0</div> </div>	<p>Applies white hard clip (limiting) at specified percentage.</p> <p>(50.0% to 109.1%; null = 109.1%)</p>
<ul style="list-style-type: none"> • White Soft Clip <div data-bbox="282 861 547 945"> <div>White Soft Clip</div> <div>50.0</div> </div>	<p>Applies white soft clip (limiting) at specified percentage.</p> <p>(50.0% to 109.1%; null = 109.1%)</p>
<ul style="list-style-type: none"> • Chroma Saturation Clip <div data-bbox="282 1043 631 1127"> <div>Chroma Saturation Clip</div> <div>50.0</div> </div>	<p>Applies chroma saturation clip (limiting) chroma saturation at specified percentage.</p> <p>(50.0% to 160.0%; null = 160.0%)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

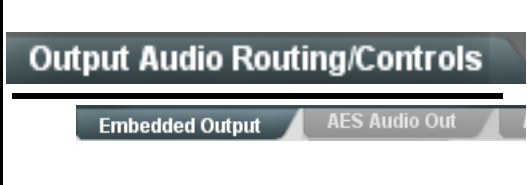
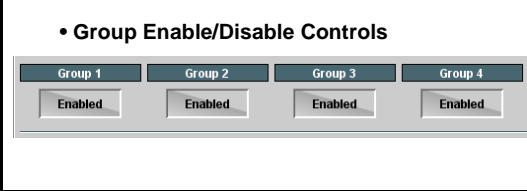
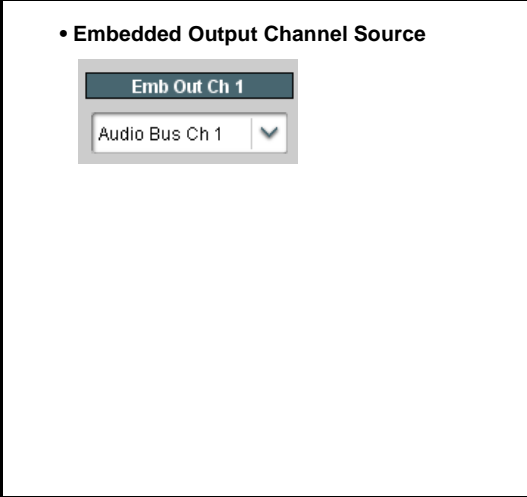

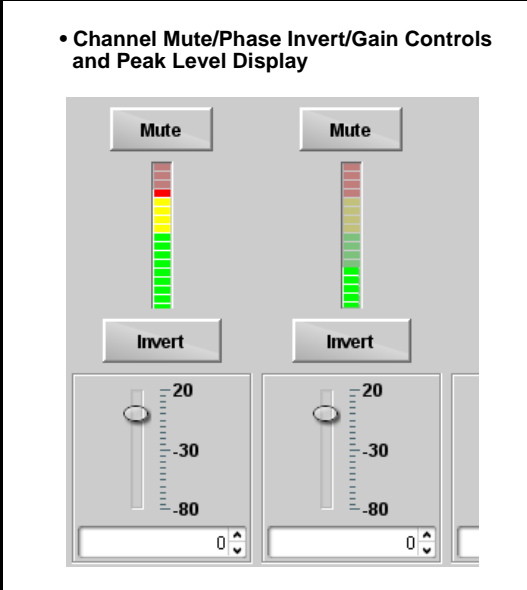
	<p>Provides an audio crosspoint allowing the audio source selection for each embedded audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.</p>
<p>Note:</p> <ul style="list-style-type: none"> • Embedded Ch 2 thru Embedded Ch 16 have controls identical to the Source, Gain, Mute, and Invert controls described here for Embedded Ch 1. Therefore, only the Embedded Ch 1 controls are shown here. • For each channel, its source and destination should be considered and appropriately set. Unused destination channels should be set to the Silence selection. 	
<p>• Group Enable/Disable Controls</p> 	<p>Allows enable/disable of embedded audio groups 1 thru 4 on card program video output to accommodate some legacy downstream systems that may not support all four embedded audio groups.</p> <p>Note: Changing the setting of this control will result in a noise burst in all groups. This control should not be manipulated when carrying on-air content.</p>
<p>• Embedded Output Channel Source</p> 	<p>Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices:</p> <ul style="list-style-type: none"> • Card Audio Bus Ch 1 thru Ch 16 • Built-in Tone generators Tone 1 thru Tone 16 (all are -20 dBFS level; freq (Hz) in ascending order are 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) <p>Note: Multiple tone generators, even if set to the same frequency, may not exhibit phase coherence. If identical tones with frequency and phase coherence are required, use a single tone generator (e.g., "Tone 1") across multiple channels instead of multiple generators set to the same frequency.</p> <ul style="list-style-type: none"> • Option  Audio LTC • Downmixer L • Downmixer R • Output Flex Bus summing nodes A thru P (see Input Flex Mix (p. 3-23))
<p>• Channel Mute/Phase Invert/Gain Controls and Peak Level Display</p> 	<p>Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.)</p> <p>Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel.</p> <p>(-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


<div data-bbox="215 262 727 321" data-label="Section-Header"> <h3>Output Audio Routing/Controls</h3> </div> <div data-bbox="203 338 678 375" data-label="Text"> <p> <input type="radio"/> AES Audio Out <input type="radio"/> Analog Audio Out </p> </div>	<p>Provides an audio crosspoint allowing the audio source selection for each AES audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.</p>
<p>Note:</p> <ul style="list-style-type: none"> • AES Out Ch 2 has controls identical to the Source, Gain, Mute, and Invert controls described here for AES Out Ch 1. Therefore, only the AES Out Ch 1 controls are shown here. • For each channel, its source and destination should be considered and appropriately set. Unused destination channels should be set to the Silence selection. 	
<p>• AES Output Channel Source</p> <div data-bbox="280 594 500 697" data-label="Image"> </div>	<p>Using the Source drop-down list, selects the audio input source to be routed to the corresponding AES output channel from the following choices:</p> <ul style="list-style-type: none"> • Card Audio Bus Ch 1 thru Ch 16 • Built-in Tone generators Tone 1 thru Tone 16 (all are -20 dBFS level; freq (Hz) in ascending order are 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) <p>Note: Multiple tone generators, even if set to the same frequency, may not exhibit phase coherence. If identical tones with frequency and phase coherence are required, use a single tone generator (e.g., "TG1") across multiple channels instead of multiple generators set to the same frequency.</p> <ul style="list-style-type: none"> • Option  Audio LTC • Downmixer L • Downmixer R
<p>• Channel Mute/Phase Invert/Gain Controls and Peak Level Display</p> <div data-bbox="271 1089 683 1558" data-label="Image"> </div>	<p>Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.)</p> <p>Gain controls allow relative gain (in dB) control for the corresponding destination AES output channel.</p> <p>(-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


<div data-bbox="203 275 659 315">Output Audio Routing/Controls</div> <div data-bbox="224 348 380 373">Analog Audio Out</div> <div data-bbox="444 348 548 373">Downmixer</div>	<p>Provides an audio crosspoint allowing the audio source selection for each analog audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.</p>
<p>• Analog Output Channel Source</p> <div data-bbox="253 468 469 569"> <div data-bbox="310 485 412 506">AN Out Ch 1</div> <div data-bbox="272 531 448 552">Audio Bus Ch 1</div> </div>	<p>Using the Source drop-down list, selects the audio input source to be routed to the corresponding analog audio output channel from the following choices:</p> <ul style="list-style-type: none"> • Card Audio Bus Ch 1 thru Ch 16 • Built-in Tone generators Tone 1 thru Tone 16 (all are -20 dBFS level; freq (Hz) in ascending order are 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) <p>Note: Multiple tone generators, even if set to the same frequency, may not exhibit phase coherence. If identical tones with frequency and phase coherence are required, use a single tone generator (e.g., "Tone 1") across multiple channels instead of multiple generators set to the same frequency.</p> <ul style="list-style-type: none"> • Option  Audio LTC • Downmixer L • Downmixer R
<p>• Channel Mute/Phase Invert/Gain Controls and Peak Level Display</p> <div data-bbox="240 963 651 1430"> <div data-bbox="305 989 358 1010">Mute</div> <div data-bbox="500 989 553 1010">Mute</div> <div data-bbox="321 1024 342 1178"></div> <div data-bbox="516 1024 537 1178"></div> <div data-bbox="310 1199 363 1220">Invert</div> <div data-bbox="500 1199 553 1220">Invert</div> <div data-bbox="310 1241 363 1381"></div> <div data-bbox="500 1241 553 1381"></div> <div data-bbox="310 1402 363 1423">0</div> <div data-bbox="500 1402 553 1423">0</div> </div>	<p>Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.)</p> <p>Gain controls allow relative gain (in dB) control for each corresponding destination analog audio out channel.</p> <p>(-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


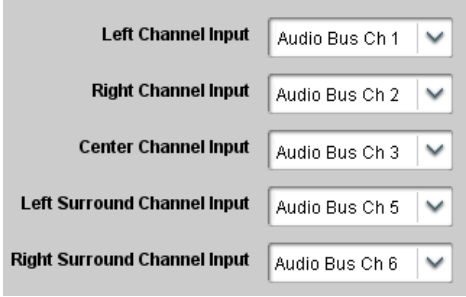
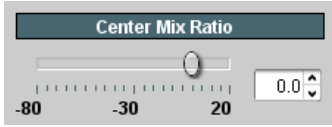
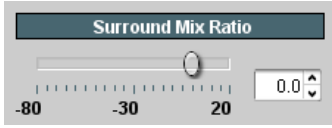
	<p>Provides audio down-mix audio routing selections that multiplexes any five audio channel sources into a stereo pair.</p>
<p>• Downmixer Source Controls</p> 	<p>Left Channel Input thru Right Surround Channel Input select the five audio bus source channels to be used for the downmix.</p> <p>Downmix channels Downmixer L and Downmixer R are available as sources for embedded, AES, or analog audio outputs using the Channel Source controls described above.</p>
<p>• Center Mix Ratio Control</p> 	<p>Adjusts the attenuation ratio of center-channel content from 5-channel source that is re-applied as Lt and Rt content to the DM-L and DM-R stereo mix.</p> <ul style="list-style-type: none"> • 0 dB setting applies no ratiometric reduction. Center channel content is restored as in-phase center-channel content with no attenuation, making center-channel content more predominate in the overall mix. • Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric reduction of center-channel content. Center-channel content is restored as in-phase center-channel content at a -80 dB ratio relative to overall level, making center-channel content less predominate in the overall mix. <p>(20 dB to -80 dB range in 0 dB steps; default = 0 dB)</p> <p>Note: Default setting is recommended to maintain center-channel predominance in downmix representative to that of the original source 5-channel mix.</p>
<p>• Surround Mix Ratio Control</p> 	<p>Adjusts the attenuation ratio of surround-channel content from 5-channel source that is re-applied as Lo and Ro content to the DM-L and DM-R stereo mix.</p> <ul style="list-style-type: none"> • 0 dB setting applies no ratiometric reduction. Surround-channel content is restored with no attenuation, making Lo and Ro content more predominate in the overall mix. • Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric reduction of surround-channel content. Surround-channel content is restored at a -80 dB ratio relative to overall level, making surround-channel content less predominate in the overall mix. <p>(20 dB to -80 dB range in 0 dB steps; default = 0 dB)</p> <p>Note: Default setting is recommended to maintain surround-channel predominance in downmix representative to that of the original source 5-channel mix.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div> <div>Output Audio Routing/Controls</div> <div>Flex Mix</div> </div>	<p>Output Flex Mix – Provides a 16-channel mixer in which each of the inputs can be mixed onto up to 16 independent output summing nodes. Each input channel has independent gain and mute controls.</p>
	<p>In this example three of the 16 flex bus summing nodes are used to sum groups 1 thru 3 into three outputs (Flex Mix A thru Flex Mix C). These summed outputs can then be outputted on any of the card's audio outputs.</p>
<p>Note: For each Flex Mix input channel, its source should be considered and appropriately set. Unused input channels should be set to the Silence selection.</p>	
<p>• Flex Mix Input Channel Source/Bus Assignment</p>	<p>Using the Source drop-down list, selects the audio input source to be directed to the corresponding bus channel from the choices listed below.</p> <ul style="list-style-type: none"> • Silence • Audio Bus Ch 1 thru Ch 16 • Tones 1 thru 16 • Downmix L or Downmix R <p>The Flex Bus drop-down selects the bus (A thru P) to which the input is assigned to.</p>
<p>• Gain / Mute Control</p>	<p>Provides relative gain (in dB) control and a channel Mute checkbox.</p> <p>(-80 to +20 dB range in 0.1 dB steps; unity = 0.0 dB)</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


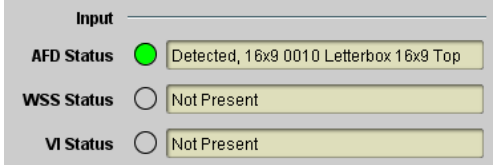
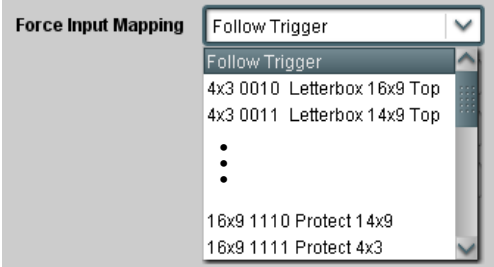
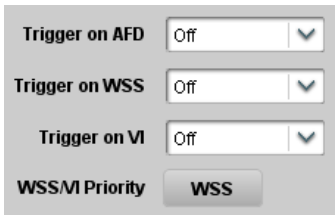
	<p>AFD/WSS/VI sub-tab provides prioritized and gated input monitoring for AFD, WSS and/or VI formats. Also provides translation between input and output AFD, WSS, and VI ARC formats.</p>
<p>Note:</p> <ul style="list-style-type: none"> • This function only marks the SDI output with an AFD code. Actual AFD processing must be performed by a downstream card or system that recognizes an AFD code assigned here. • Line number control available only for AFD format. WSS and VI use fixed line numbers per applicable standards. • Some AFD codes are not supported in WSS and VI formats. Refer to AFD/WSS/VI Translation Matrix on page 3-35 for more information. 	
<p>• Input Format Status Displays</p> 	<p>Displays the current status and contents of the three supported ARC formats shown to the left.</p> <ul style="list-style-type: none"> • If a format is received, the current formatting code and description is displayed (as shown in the example). • If a format is not receiving data, Not Present is displayed.
<p>• Input Mapping</p> 	<p>When received ARC code is received, applies H/V coding as follows:</p> <ul style="list-style-type: none"> • Follow Trigger – Uses the ARC coding inherent in the received triggering ARC. • 4x3 ARC Codes – For received triggering formats coded as 4x3, applies the H/V coding selected in this drop-down. • 16x9 ARC Codes – For received triggering formats coded as 16x9, applies the H/V coding selected in this drop-down. <p>Note: Settings performed here can be applied directly to the output video, or the settings applied here can be custom modified if desired for any of the 11 4x3 codes and any of the 11 16x9 codes available here using the AFD Map sub-tab. Refer to AFD/WSS/VI Translation Matrix on page 3-35 for more information and coding descriptions.</p>
<p>• Input Triggering Controls</p> 	<p>Individual ARC format input controls allow accepting or rejecting received ARC formats as follows:</p> <ul style="list-style-type: none"> • Trigger on AFD: <ul style="list-style-type: none"> • Off rejects AFD-coded triggering. • On allows trigger on AFD. • Trigger on WSS: <ul style="list-style-type: none"> • Off rejects WSS-coded triggering. • AFD allows triggering on AFD-coded WSS. • ETSI allows triggering on ETSI-coded WSS. • Trigger on VI: <ul style="list-style-type: none"> • Off rejects VI-coded triggering. • AFD allows triggering on AFD-coded WSS. • SMPTE allows triggering on SMPTE-coded WSS. <p>Note: If multiple formats are present on the input video, AFD preempts other formats, followed by WSS or VI (as set by the WSS/VI Priority control).</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div style="background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold;">AFD/WSS/VI</div> <div style="display: flex; justify-content: space-between; padding: 2px 5px;"> AFD/WSS/VI AFD Map </div>	(continued)
<p>• Output Enable Controls</p> <div style="border: 1px solid #ccc; padding: 10px; background-color: #f9f9f9;"> <p style="text-align: center; margin-bottom: 10px;">Output ▾</p> <div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> <div style="text-align: right;">AFD Output</div> <div>Enabled ▾</div> </div> <div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> <div style="text-align: right;">WSS Output</div> <div>Disabled ▾</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: right;">VI Output</div> <div>Disabled ▾</div> </div> </div>	<p>Individual ARC format input controls allow accepting or rejecting received ARC formats as follows:</p> <ul style="list-style-type: none"> • AFD Output: <ul style="list-style-type: none"> • Disable turns off AFD format on output. • Enable inserts AFD packet on output, and allows changing line number. • Follow Input Line inserts AFD packet on same line as received AFD line number (where applicable). • WSS Output: <ul style="list-style-type: none"> • Disable turns off WSS format on output. • AFD Enabled inserts AFD-coded WSS on output. • ETSI Enabled inserts ETSI-coded WSS on output. • VI Output: <ul style="list-style-type: none"> • Disable turns off WSS format on output. • AFD Enabled inserts AFD-coded VI on output. • SMPTE Enabled inserts SMPTE-coded VI on output.
<p>• Output Status Displays</p> <div style="border: 1px solid #ccc; padding: 10px; background-color: #f9f9f9;"> <p style="text-align: center; margin-bottom: 10px;">Output ▾</p> <div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> <div style="text-align: right;">AFD Status</div> <div> ● Enabled, 16x9 1111 Protect 4x3 </div> </div> <div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> <div style="text-align: right;">WSS Status</div> <div> ○ Disabled or no valid mapping </div> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: right;">VI Status</div> <div> ● Enabled, SMPTE 6 625/50/16x9 </div> </div> </div>	<p>Displays the current output status, coding, and H/V ratio for AFD, WSS, and VI formats.</p> <ul style="list-style-type: none"> • If a format is active and enabled (as set with the Output Enable controls), the code and H/V description is displayed. • If a format is not outputting data, Disabled is displayed. <p>Note:</p> <ul style="list-style-type: none"> • The code displayed shows the outputted code. If the code is modified by user settings performed in the AFD Map sub-tab, these changes are shown here. Refer to AFD Map sub-tab for more information. • As shown in the example, settings that result in invalid mapping across format translations will display Disabled. In these cases, no output is inserted for the format.
<p>• AFD Output Line Control</p> <div style="border: 1px solid #ccc; padding: 10px; background-color: #f9f9f9;"> <div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> <div style="text-align: right;">AFD Output Line Field 1</div> <div>10 ▴ ▾</div> </div> <div style="display: flex; justify-content: space-between;"> <div style="text-align: right;">AFD Output Line Field 2</div> <div>22 ▴ ▾</div> </div> </div>	<p>Allows selecting the line location of the AFD data within the video signal Ancillary Data space.</p> <p>Note:</p> <ul style="list-style-type: none"> • The card does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data. • For progressive formats, the Field 1 control serves as the line number control.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

AFD/WSSM

AFD/WSS/VI

AFD Map

(continued)

AFD/WSS/VI Translation Matrix

The table below lists valid translations between WSS, VI, and SMPTE 2016 AFD codes for both 4x3 and 16x9-coded frames.

Input						Output				
	AFD	WSS ETSI 625	WSS ETSI 525	VI	Description	AFD	WSS ETSI 625	WSS ETSI 525	VI	Description
4:3 Coded	0010	4			4x3 Letterbox 16x9 Top	0010	4	0	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9 Top
	0011	2			4x3 Letterbox 14x9 Top	0011	2	0	1 (NTSC) 2 (PAL)	4x3 Letterbox 14x9 Top
	0100	5	2		4x3 Letterbox 16x9 Center	0100	5	2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9 Center
	0101, 0110, 0111				Undefined					
	1000	0	0	0 1 (NTSC) 2 (PAL)	4x3 Coded Frame	1000	0	0	1 (NTSC) 2 (PAL)	4x3 Coded Frame
	1001				4x3 Center	1001	0	0	1 (NTSC) 2 (PAL)	4x3 Center
	1010	3			4x3 16x9 Center	1010	3	2	1 (NTSC) 2 (PAL)	4x3 16x9 Center
	1011	1			4x3 14x9 Center	1011	1	0	1 (NTSC) 2 (PAL)	4x3 14x9 Center
	1100			3, 4, 7	Reserved	1100		0	1 (NTSC) 2 (PAL)	Reserved
	1101	6			4x3 Protect 14x9	1101	6	0	1 (NTSC) 2 (PAL)	4x3 Protect 14x9
	1110				4x3 Letterbox 16x9; Protect 14x9 Center	1110		2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9; Protect 14x9 Center
	1111				4x3 Letterbox 16x9; Protect 4x3 Center	1111		2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9; Protect 4x3 Center
16:9 Coded	0010				16x9 Letterbox 16x9 Top	0010		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 16x9 Top
	0011				16x9 Letterbox 14x9 Top	0011		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 14x9 Top
	0100				16x9 Letterbox 16x9 Center	0100		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 16x9 Center
	0101, 0110, 0111				Undefined					
	1000	7	1	0 5 (NTSC) 6 (PAL)	16x9 Coded Frame	1000	7	11	5 (NTSC) 6 (PAL)	16x9 Coded Frame
	1001				16x9 4x3 Center	1001		1	5 (NTSC) 6 (PAL)	16x9 4x3 Center
	1010				16x9 Center Protect 16x9	1010	7	1	5 (NTSC) 6 (PAL)	16x9 Center Protect 16x9
	1100				Reserved	1100		1	5 (NTSC) 6 (PAL)	Reserved
	1101				16x9 4x3 Protect 14x9	1101		1	5 (NTSC) 6 (PAL)	16x9 4x3 Protect 14x9
	1110				16x9 Protect 14x9	1110		1	5 (NTSC) 6 (PAL)	16x9 Protect 14x9
	1111				16x9 Protect 4x3	1111		1	5 (NTSC) 6 (PAL)	16x9 Protect 4x3

Note: Shaded cells indicate invalid translation which cannot be used.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div><div>AFD/WSSM</div><div>AFD/WSSMAFD Map</div></div>	<p>AFD Map sub-tab allows bidirectional re-assignment of one code to another code.</p>
<div><div><div>Input:4x3</div><div>4x3 Letterbox 16x9 Top 0010</div><div>4x3 Letterbox 14x9 Top 0011</div><div>⋮</div><div>4x3 Letterbox 16x9 Protect 4x3 1111</div><div>Input:16x9</div><div>16x9 Letterbox 16x9 Top 0010</div><div>16x9 Letterbox 14x9 Top 0011</div><div>⋮</div><div>16x9 Protect 4x3 1111</div></div><div><div>Output AFD Code</div><div>16x9 0010 Letterbox 16x9 Top</div><div>16x9 0011 Letterbox 14x9 Top</div><div>⋮</div><div>16x9 1111 Protect 4x3</div><div>Output AFD Code</div><div>4x3 0010 Letterbox 16x9 Top</div><div>4x3 0011 Letterbox 14x9 Top</div><div>⋮</div><div>4x3 1111 Letterbox 16x9 Protect 4x3</div></div></div>	

Table 3-2 9903-UDX-ADDA Function Menu List — continued

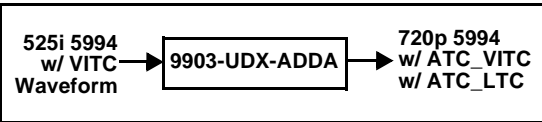
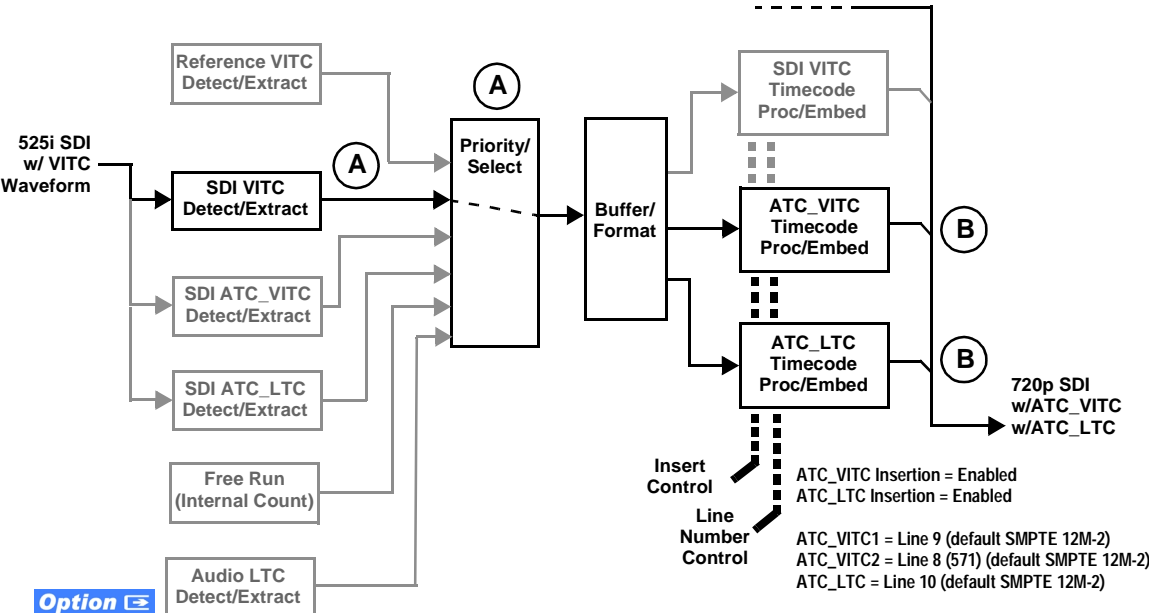

<h2>Timecode</h2>	<p>Provides timecode data extraction from various sources, and provides formatting and re-insertion controls for inserting the timecode into the output video.</p>										
<p>Shown below is an example in which received 525i 5994 SDI video is being up-converted to 720p 5994. To re-format and insert the timecode data, the following can be performed using the Timecode function. Each Timecode control is fully described on the pages that follow.</p>											
	<table border="1"> <tr> <td>Reference VITC Status</td> <td>05:49:08:20.1</td> </tr> <tr> <td>Input VITC Status</td> <td>05:49:08:19.1</td> </tr> <tr> <td>Input ATC_LTC Status</td> <td>Not Present</td> </tr> <tr> <td>Input ATC_VITC Status</td> <td>Not Present</td> </tr> </table>	Reference VITC Status	05:49:08:20.1	Input VITC Status	05:49:08:19.1	Input ATC_LTC Status	Not Present	Input ATC_VITC Status	Not Present		
Reference VITC Status	05:49:08:20.1										
Input VITC Status	05:49:08:19.1										
Input ATC_LTC Status	Not Present										
Input ATC_VITC Status	Not Present										
<p>A Noting that the incoming video contains VITC waveform timecode data (as shown in the status display), set the Source Priority drop-down lists to include VITC Waveform timecode data (Input VITC) as a choice. This extracts VITC Waveform timecode data from the incoming video.</p>	<table border="1"> <tr> <td>Source Priority 1</td> <td>Input VITC</td> </tr> <tr> <td>Source Priority 2</td> <td>Input ATC_VITC</td> </tr> <tr> <td>Source Priority 3</td> <td>Reference VITC</td> </tr> <tr> <td>Source Priority 4</td> <td>Free Run</td> </tr> </table>	Source Priority 1	Input VITC	Source Priority 2	Input ATC_VITC	Source Priority 3	Reference VITC	Source Priority 4	Free Run		
Source Priority 1	Input VITC										
Source Priority 2	Input ATC_VITC										
Source Priority 3	Reference VITC										
Source Priority 4	Free Run										
<p>B In this example, it is desired to provide both SDI ATC_VITC and ATC_LTC timecode data in the converted HD output video. As such, set both HD ATC VITC Insertion and HD ATC LTC Insertion to Enabled.</p>	<table border="1"> <tr> <td colspan="2">HD ATC VITC Insertion Enabled</td> </tr> <tr> <td>HD ATC VITC Insertion Line Field 1</td> <td>9 - SMPTE 12M-2-2008 Recommended</td> </tr> <tr> <td>HD ATC VITC Insertion Line Field 2</td> <td>8 (571) - SMPTE 12M-2-2008 Recommended</td> </tr> <tr> <td colspan="2">HD ATC LTC Insertion Enabled</td> </tr> <tr> <td>HD ATC LTC Insertion Line</td> <td>10 - SMPTE 12M-2-2008 Recommended</td> </tr> </table>	HD ATC VITC Insertion Enabled		HD ATC VITC Insertion Line Field 1	9 - SMPTE 12M-2-2008 Recommended	HD ATC VITC Insertion Line Field 2	8 (571) - SMPTE 12M-2-2008 Recommended	HD ATC LTC Insertion Enabled		HD ATC LTC Insertion Line	10 - SMPTE 12M-2-2008 Recommended
HD ATC VITC Insertion Enabled											
HD ATC VITC Insertion Line Field 1	9 - SMPTE 12M-2-2008 Recommended										
HD ATC VITC Insertion Line Field 2	8 (571) - SMPTE 12M-2-2008 Recommended										
HD ATC LTC Insertion Enabled											
HD ATC LTC Insertion Line	10 - SMPTE 12M-2-2008 Recommended										
<p>In the example here, the line numbers are set to the default SMPTE 12M-2-2008 recommended values.</p>											
 <p>Option </p> <p>Insert Control Line Number Control</p> <p>ATC_VITC Insertion = Enabled ATC_LTC Insertion = Enabled</p> <p>ATC_VITC1 = Line 9 (default SMPTE 12M-2) ATC_VITC2 = Line 8 (571) (default SMPTE 12M-2) ATC_LTC = Line 10 (default SMPTE 12M-2)</p>											

Table 3-2 9903-UDX-ADDA Function Menu List — continued



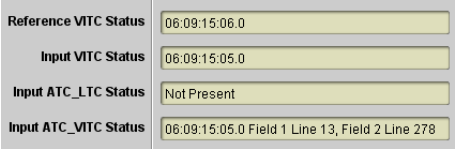
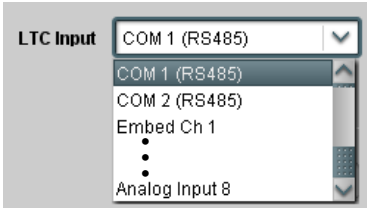


	(continued)
<p>Option  Audio LTC controls described below only appear on cards with +LTC licensed optional feature. This feature allows audio LTC from an audio channel to be used as a timecode source, with conversion to a selected SMPTE 12M format on the output video.</p>	
<p>• Timecode Source Status Displays</p> 	<p>Displays the current status and contents of the four supported external timecode formats shown to the left.</p> <ul style="list-style-type: none"> • If a format is receiving timecode data, the current content (timecode running count and line number) is displayed. • If a format is not receiving timecode data, Not Present is displayed.
<p>• LTC Input Control</p> 	<p>Selects source to be used by card to receive LTC as listed below.</p> <ul style="list-style-type: none"> • RS-485 over COM1 or COM 2 • Audio LTC over Emb Ch 1 thru Ch 16 • Audio LTC over AES Ch 1 thru Ch 16 • Audio LTC over Analog audio Ch 1 thru Ch 8 <p>Note: • Audio LTC Source must be appropriately set for card to receive and process received LTC.</p> <ul style="list-style-type: none"> • If COM 1 or COM 2 is used for LTC receive, the port function must be set for LTC. See COMM Ports Setup Controls (p. 3-46) for more information. • Card audio inputs will not center inputs with DC offset. If input has DC offset, the source may need to be capacitively coupled to remove the offset.
<p>• Mute LTC Control</p> 	<p>Allows LTC audio or RS-485 output to mute upon loss of selected timecode inputs.</p> <ul style="list-style-type: none"> • When set to Enabled and input timecode is lost: <ul style="list-style-type: none"> • RS-485 LTC output goes to frozen state. • Audio LTC output mutes. • When set to Disabled and input timecode is lost: <ul style="list-style-type: none"> • RS-485 LTC output keeps counting, with count value being free-run count. • Audio LTC output is not muted, with count value being free-run count. <p>Note: If muting upon loss of a particular input format is desired, set all Source Priority 1 thru 4 to that particular input format. If this is not done, the card failover timecode selection may substitute another format choice for the format not being received.</p>
<p>• Incoming ATC Packet Removal Control</p> 	<p>Enables or disables removal of existing input video ATC timecode packets from the output. This allows removal of undesired existing timecodes from the output, resulting in a “clean slate” where only desired timecodes are then re-inserted into the output. (For example, if both SDI ATC_VITC and ATC_LTC are present on the input video, and only ATC_LTC is desired, using the Removal control will remove both timecodes from the output. The ATC_LTC timecode by itself can then be re-inserted on the output using the other controls discussed here.)</p> <p>Note: • When the Scaler is enabled, ATC packets are automatically removed. The Timecode function must be used to re-insert the timecode data into the output video.</p> <ul style="list-style-type: none"> • Set this control to Enabled if Free-Run timecode is to be used. If incoming packets are not removed, output embedded SMPTE timecode may alternate between free-run and embedded SMPTE timecode values.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

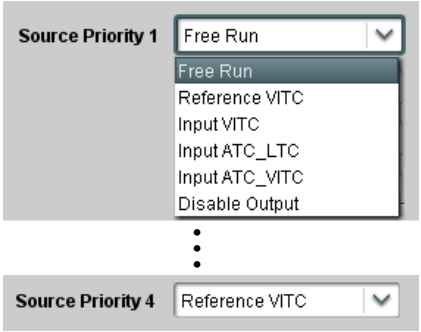
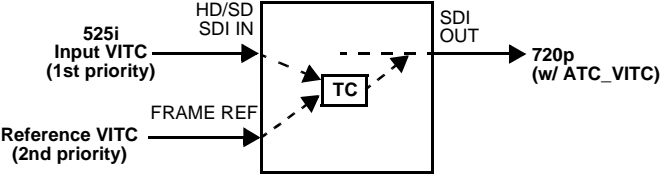
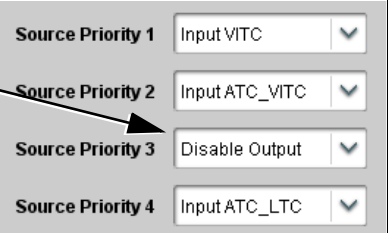
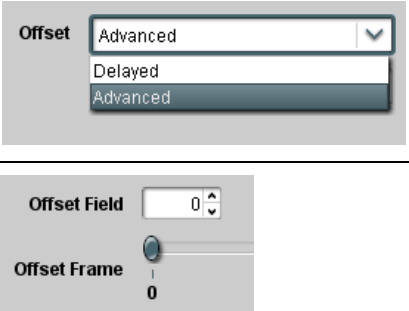
<div style="background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold;">Timecode</div>	(continued)
<p>• Source Priority</p> 	<p>Selects the priority assigned to each of the four supported external formats, and internal Free Run in the event the preferred source is unavailable.</p> <p>Source Priority 1 thru Source Priority 4 select the preferred format to be used in descending order (i.e., Source Priority 2 selects the second-most preferred format, and so on. See example below.)</p>  <p>In this example, Input VITC 1st priority selection selects SDI VITC (received on SDI input) over reference VITC (received on frame reference) regardless of video input material source to be processed by the device.</p> <p>The selected timecode is embedded on the SDI video output (in this example, 720p) using the selected line number. In this example, if the SDI VITC on the SDI input becomes unavailable, the device then uses the reference VITC data received on the frame reference.</p> <p>Note: Set Incoming ATC Packet Removal Control to Enabled if Free-Run timecode is to be used. If incoming packets are not removed, output embedded SMPTE timecode may alternate between free-run and embedded SMPTE timecode values.</p> <p>⚠ Disable Output setting should be used with care. If Disable Output is selected with alternate intended format(s) set as a lower priority, the card will indeed disable all timecode output should the ordinate preferred format(s) become unavailable. Typically, choices other than Disable should be used if a timecode output is always desired, with Disable only being used to remove all timecode data.</p> <div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p>In this example, even though and ATC_LTC could be available to substitute for ATC_VITC not being present, the card will revert to no timecode output since the choice of Disable Output “out-prioritizes” ATC_LTC with these settings.</p> </div> <div style="flex: 2;">  </div> <div style="flex: 1; padding-left: 10px;"> <p>The choices shown here will allow ATC_LTC to “out-prioritize” Disable Output if ATC_VITC is not available.</p> </div> </div>
<p>• Offset Controls</p> 	<p>Allows the current timecode count to be advanced or delayed on the output video.</p> <ul style="list-style-type: none"> • Offset Advance or Delay selects offset advance or delay. • Offset Field delays or advances or delays timecode by one field. • Offset Frame delays or advances or delays timecode by up to 5 frames. <p>Note: Default settings are null, with both controls set at zero as shown.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div>Timecode</div>	(continued)																
<ul style="list-style-type: none"> • Output Status Display <div data-bbox="207 420 669 472"> Output Status 00:04:46:06.1 (Source: SDI VITC) </div>	<p>Displays the current content and source being used for the timecode data as follows:</p> <div data-bbox="734 430 1117 472"> Output Status 00:04:46:06.1 (Source: SDI VITC) </div> <ul style="list-style-type: none"> • Output status OK (in this example, SDI VITC timecode received and outputted). <div data-bbox="734 556 1003 598"> Output Status Insertion Disabled </div> <ul style="list-style-type: none"> • Timecode Insertion button set to Disabled; output insertion disabled. <p>Note: • If timecode is not available from Source Priority selections performed, timecode on output reverts to Free Run (internal count) mode.</p> <ul style="list-style-type: none"> • Because the 1's digit of the display Frames counter goes from 0 to 29, the fractional digit (along with the 1's digit) indicates frame count as follows: <div data-bbox="820 772 966 949"> <table> <tr><td>0.0</td><td>Frame 0</td></tr> <tr><td>0.1</td><td>Frame 1</td></tr> <tr><td>1.0</td><td>Frame 2</td></tr> <tr><td>1.1</td><td>Frame 3</td></tr> <tr><td>•</td><td></td></tr> <tr><td>•</td><td></td></tr> <tr><td>•</td><td></td></tr> <tr><td>29.1</td><td>Frame 59</td></tr> </table> </div>	0.0	Frame 0	0.1	Frame 1	1.0	Frame 2	1.1	Frame 3	•		•		•		29.1	Frame 59
0.0	Frame 0																
0.1	Frame 1																
1.0	Frame 2																
1.1	Frame 3																
•																	
•																	
•																	
29.1	Frame 59																
<ul style="list-style-type: none"> • Audio LTC Output <div data-bbox="259 1024 430 1066"> Option ➞ </div>	<p>Audio LTC output is routed to desired embedded, AES, or analog audio outputs using the Output Audio Routing/Controls (p. 3-28). Whatever timecode is displayed on the Output Status is converted to audio LTC and available as an LTC audio output.</p>																
<p>Note: • Although the output line drop-down on the controls described below will allow a particular range of choices, the actual range is automatically clamped (limited) to certain ranges to prevent inadvertent conflict with active picture area depending on video format. See Ancillary Data Line Number Locations and Ranges (p. 3-9) for more information.</p> <ul style="list-style-type: none"> • The card does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data. 																	
<ul style="list-style-type: none"> • SD VITC Waveform Insertion Controls <div data-bbox="186 1333 695 1470"> <div>SD VITC Waveform Output 1 Line Number <input type="text" value="14"/></div> <div>SD VITC Waveform Output 2 Line Number <input type="text" value="16"/></div> <div>SD VITC Waveform Insertion <input type="button" value="Enabled"/></div> </div>	<p>For SD output, enables or disables SD VITC waveform timecode insertion into the output video, and selects the VITC1 and VITC2 line numbers (6 thru 22) where the VITC waveform is inserted.</p> <p>Note: • If only one output line is to be used, set both controls for the same line number.</p> <ul style="list-style-type: none"> • SD VITC Waveform Insertion control only affects VITC waveforms inserted (or copied to a new line number) by this function. An existing VITC waveform on an unscaled SD SDI stream is not affected by this control and is passed on an SDI output. 																
<ul style="list-style-type: none"> • SD ATC Insertion Control <div data-bbox="186 1617 695 1696"> <div>SD ATC_VITC Insertion <input type="button" value="Enabled"/></div> <div>SD ATC Insertion Line <input type="text" value="13 - SMPTE 12M-2-2008 Recommended"/></div> </div>	<p>For SD output, enables or disables SD ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC.</p>																

Table 3-2 9903-UDX-ADDA Function Menu List — continued


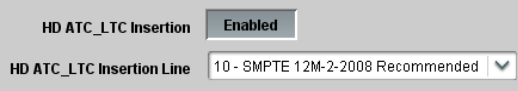
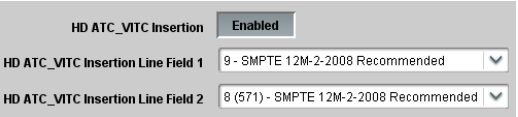

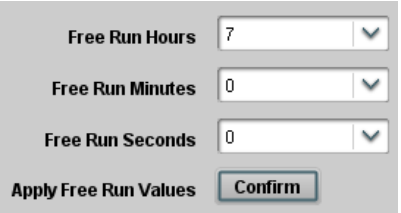
	(continued)
<p>• HD ATC_LTC Insertion Control</p> 	<p>For HD output, enables or disables ATC_LTC timecode insertion into the output video, and selects the line number for ATC_LTC timecode data.</p>
<p>• HD ATC_VITC Insertion Control</p> 	<p>For HD output, enables or disables ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC1 and ATC_VITC2.</p>
<p>• ATC_VITC Legacy Support Control</p> 	<p>When enabled, accommodates equipment requiring ATC_VITC packet in both fields as a “field 1” packet (non-toggling).</p> <p>Note: Non-toggling VITC1 and VITC2 packets do not conform to SMPTE 12M-2-2008 preferences. As such, ATC_VITC Legacy Support should be enabled only if required by downstream equipment.</p>
<p>• Free Run Timecode Controls</p> 	<p>Allows an initial (starting) count to be applied to output video timecode when Free Run insertion is enabled.</p> <p>Note:</p> <ul style="list-style-type: none"> Initialization can only be applied when card is outputting Free Run timecode (as shown by Output Status displaying “Free Run”). If failover to Free Run occurs due to loss of external timecode(s), the Free Run count assumes its initial count from the last valid externally supplied count.

Table 3-2 9903-UDX-ADDA Function Menu List — continued



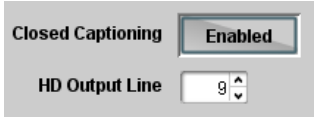
	<p>Provides support for closed captioning setup. Also provides controls for setting closed captioning absence and presence detection thresholds.</p>								
<p>Note: When receiving HD-SDI, both CEA 608 and CEA 708 are supported, with CEA 608 and CEA 708 (containing CEA 608 packets) converted to line 21 closed captioning on outputs down-converted to SD.</p>									
<p>• Closed Captioning Input Status</p> 	<p>Displays incoming Closed Captioning status as follows:</p> <ul style="list-style-type: none"> • If closed captioning is present, a message similar to the example shown left is displayed. Also displayed is the VANC line number of the incoming closed captioning packet (or SD waveform-based VANC line number). • If no closed captioning is present in the video signal, Not Present or Disabled is displayed. <p>Note: • Packet closed captioning status Captioning Rejected Due To message can appear due to the items described below. The closed captioning function assesses <i>cdp_identifier</i>, <i>cdp_frame_rate</i>, <i>ccdata_present</i>, and <i>caption_service_active</i> items contained in the packet header to make the determinations listed below. Refer to CEA-708-B for more information.</p> <table border="1" data-bbox="743 758 1390 1073"> <thead> <tr> <th>Message</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Unsupported Frame Rate</td><td>Film rate closed-captioning (either as pass-through or up/down conversion) is not supported by the card.</td></tr> <tr> <td>Data Not Present</td><td>Packet is marked from closed captioning source external to the card that no data is present.</td></tr> <tr> <td>No Data ID</td><td>Packet from closed captioning source external to the card is not properly identified with 0x9669 as the first word of the header (unidentified packet).</td></tr> </tbody> </table> <ul style="list-style-type: none"> • caption service is marked as inactive display indicates bit in packet from upstream source may inadvertently be set as inactive. In this case, closed captioning data (if present) is still processed and passed by the card as normal. • The closed captioning function does not support PAL closed captioning standards. 	Message	Description	Unsupported Frame Rate	Film rate closed-captioning (either as pass-through or up/down conversion) is not supported by the card.	Data Not Present	Packet is marked from closed captioning source external to the card that no data is present.	No Data ID	Packet from closed captioning source external to the card is not properly identified with 0x9669 as the first word of the header (unidentified packet).
Message	Description								
Unsupported Frame Rate	Film rate closed-captioning (either as pass-through or up/down conversion) is not supported by the card.								
Data Not Present	Packet is marked from closed captioning source external to the card that no data is present.								
No Data ID	Packet from closed captioning source external to the card is not properly identified with 0x9669 as the first word of the header (unidentified packet).								
<p>• Closed Captioning On/Off and HD Insertion Line</p> 	<p>Turns on or turns off Closed Captioning insertion on the output.</p> <p>Note: • Although the output line drop-down will allow any choice within the 9 thru 41 range, the actual range is automatically clamped (limited to) certain ranges to prevent inadvertent conflict with active picture area depending on video format. See Ancillary Data Line Number Locations and Ranges (p. 3-9) for more information.</p> <ul style="list-style-type: none"> • The card does not check for conflicts on a given line number. Make certain selected line is available and carrying no other data. • Closed captioning line may contain active unintended data even if closed captioning is set to Off. 								

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Ancillary Data Processing													
ADP Routing		COM Port Setup		IP Port Set									
Option													
<p>(Option +ANC) Provides controls for VANC/HANC ancillary data de-embedding and embedding to and from program video stream. Data can be extracted and inserted within the card, bypassing the scaler (Bridge mode), or inserted and/or extracted to and from external interfaces via serial or IP interfaces.</p>													
<p>Eight individual Ancillary Data Processors (ADPs) provide for insertion, extraction, or bridging ancillary data to and from the card program video SDI stream.</p>													
<p>Mode controls select the type of ANC processing:</p> <ul style="list-style-type: none"> • Bridge extracts ANC from the deserialized input video and re-inserts in the output video, thereby allowing specialized ANC packets to be retained after the scaler and passed on the card processed output (for example, preserving special payloads such as STCE 104 for a format-converted output) • Insert and Extract modes respectively allow insertion to the output stream or extraction from the input stream between external interfaces 													
<p>Interface controls select either card IP or serial data (COM 1) interface where Mode is set to insertion or extraction Note: COM1 is available for ADP Proc 1 only; all other ADPs use IP only for external import/export insertion/extraction.</p>													
<p>DID and SDID controls select the desired packet to be handled by the corresponding ANC Data Processor</p>													
<p>Line Number controls select the VANC location of packet insertion/extraction</p>													
<p>Insertion controls allow special insertions in HANC or the C-channel, as well as removal of incoming packets</p>													
<p>In the example above, ADP Proc 1 is set to extract ATC timecode at DID60_h / SDID 60_h. Depending on the interface used to carry the extraction (COM or IP), status is displayed as shown below.</p>													
<table border="0"> <tr> <td></td> <td>When set to extract to COM interface, displays rate and dropped data (if any)</td> </tr> <tr> <td></td> <td>When set to extract to IP interface, displays rate and total amount transferred</td> </tr> </table>											When set to extract to COM interface, displays rate and dropped data (if any)		When set to extract to IP interface, displays rate and total amount transferred
	When set to extract to COM interface, displays rate and dropped data (if any)												
	When set to extract to IP interface, displays rate and total amount transferred												
<p>Note: DashBoard versions 4.1 and earlier display DID and SDID numbers in decimal; newer DashBoard versions display DID and SDID numbers in hexadecimal. Hexadecimal notation is denoted by the "0x" preceding the value.</p>													

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div style="background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold;">Ancillary Data Processing</div> <div style="display: flex; justify-content: space-around; background-color: #ccc; padding: 2px; margin-top: 5px;"> COM Port Setup IP Port Setup </div>	
<p>Note:</p> <ul style="list-style-type: none"> • COM 1 and COM 2 are independently available for ANC Tx/Rx and have identical controls. Therefore, only the COM 1 controls are described here. • Controls provided here allow highly detailed setup of serial communications. Control settings must be carefully considered and set appropriately to correspond to both sending and receiving systems. Incorrectly set controls may result in loss of ANC serial comm. • COM 1 and COM 2 are multi-function interfaces and must be set for ANC Data Extractor for port(s) is to be used here. Set the port function as described in COM Routing in COMM Ports Setup Controls (p. 3-46). 	
<p>• Rx/Tx Status Display</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>RX Status ● No data received</p> <p>TX Status ● 15.0 Kbit/s</p> </div>	Shows either no data received/sent, or where transfer is present shows data rate (in kbit/sec).
<p>• Insertion Mode Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Insertion Mode Insert Any Data Received ▼</p> <div style="border: 1px solid #ccc; padding: 2px; margin-top: 2px;"> Insert Any Data Received Fixed Length Packet Break-Defined Packet </div> <p>Insertion Fixed Packet Size 64 ▲▼</p> </div>	<p>Where data is being inserted (received), sets the insertion as follows:</p> <ul style="list-style-type: none"> • Insert Any Data Received: Insert all received data with no regard for packet size. • Fixed Length Packet: Sets receive to wait and accumulate <i>n</i>-number of packet bytes (as set using Insertion Fixed Packet Size control) before inserting data. • Break-Defined Packet: Card receiver looks for character-defined break from source being received to define breaks.
<p>• Insertion Flow Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Insertion Flow Control No Flow Control ▼</p> <div style="border: 1px solid #ccc; padding: 2px; margin-top: 2px;"> No Flow Control XON/XOFF Hold Break </div> </div>	<p>Allows communication between card receive and sending source to regulate data receive as follows:</p> <ul style="list-style-type: none"> • No Flow Control: Data is received without buffering or checking to see if data is being received faster than it can be inserted. • XON / XOFF: The card UART Tx will tell the sending source whether it can or cannot accept data at current bit rate. • Hold Break: Card, if close to not being able to accept new data, tells the sending source to hold, and releases this hold when the card is again able to accept new data.
<p>• Insertion Sync Byte Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Insertion Sync Byte Disabled ▼</p> <div style="border: 1px solid #ccc; padding: 2px; margin-top: 2px;"> Disabled Field Number at SOF Ack on Insertion </div> </div>	<p>Allows use of a sync byte from card receiver back to sending source to synchronize communication between card receive and sending source as follows:</p> <ul style="list-style-type: none"> • Disabled: No special synchronization. • Field Number at SOF: The card sends a single byte telling sending source when start of field 1 or field 2 is occurring. • Ack on Insertion: Card sends a single byte back to sending source when data has been inserted.
<p>• Extraction Mode Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Extraction Mode Payload Only ▼</p> <div style="border: 1px solid #ccc; padding: 2px; margin-top: 2px;"> Payload Only Full Anc Data Packet </div> </div>	<p>Where data is being extracted from input video, sets the data to be sent as follows:</p> <ul style="list-style-type: none"> • Payload Only: Sends payload only (for example, for closed captioning this would be only the ASCII character string representing the CC content). • Full Anc Data Packet: Sends the entire packet, including payload, DID, SDID, and any handling or marking characters.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div style="background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold;">Ancillary Data Processing</div> <div style="display: flex; justify-content: space-around; background-color: #ccc; padding: 2px; margin-top: 5px;"> COM Port Setup IP Port Setup </div>	<p>(continued)</p>
<p>• Extraction Flow Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Extraction Flow Control No Flow Control ▼</p> <div style="background-color: #333; color: white; padding: 2px; margin-top: 2px;">No Flow Control</div> <div style="background-color: #ccc; padding: 2px; margin-top: 2px;">XON/XOFF</div> <div style="background-color: #ccc; padding: 2px; margin-top: 2px;">Hold Break</div> </div>	<p>Allows communication between card transmit and receiving destinations to regulate data receive as follows:</p> <ul style="list-style-type: none"> • No Flow Control: Data is transmitted without buffering or checking to see if data is being transmitted faster than it can be received. • XON / XOFF: The card UART Rx will acknowledge from the receiving system whether it can or cannot accept data at current bit rate. • Hold Break: Card, if receiving notification from the receiving system that it is close to not being able to accept new data, tells the card to hold. Card releases this hold when the receiving system removes the break command, indicating destination is now ready again to accept new data.
<p>• Bit Rate/ Parity Gen Control</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Bit Rate 115200 ▼</p> <p>Parity Disabled ▼</p> <div style="background-color: #333; color: white; padding: 2px; margin-top: 2px;">Disabled</div> <div style="background-color: #ccc; padding: 2px; margin-top: 2px;">Odd</div> <div style="background-color: #ccc; padding: 2px; margin-top: 2px;">Even</div> </div>	<p>For both Rx and Tx, sets UART for bit rate and parity as follows:</p> <ul style="list-style-type: none"> • Bit Rate: Sets Tx/Rx bit rate from 1 of 5 speeds ranging from 9600 to 230400 Baud. • Parity: Sets card Rx to expect odd or even parity from incoming data, and sets card Tx to generate a parity bit to satisfy selected parity. Where parity is set, incoming data not conforming to parity selection is rejected.
<div style="background-color: #333; color: white; padding: 5px; text-align: center; font-weight: bold;">Ancillary Data Processing</div> <div style="display: flex; justify-content: space-around; background-color: #ccc; padding: 2px; margin-top: 5px;"> Config COM Port Setup IP Port Setup </div>	<p>IP Port Setup sub-tab provides IP setup for card UDP IP communications.</p>
<p>• Card IP Receive Setup/Status</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Card Active IP 10.99.16.100</p> <p>Card Port 4000 ▼</p> <p>Insertion 1.2 kb/s</p> <p>RX Status 1.2 kb/s</p> </div>	<p>Shows card receiving IP address/status and sets port as follows:</p> <ul style="list-style-type: none"> • Card Active IP: Shows the card IP address. (IP address is set using Admin tab Networking settings; see Admin (Log Status/ Firmware Update - Card IP Address) on page 3-52). • Card Port: Sets card IP receive port. • Insertion / Rx Status: Shows card IP receive/Rx insertion status. <ul style="list-style-type: none"> - Stopped (with yellow indicator) means no data is being received. - Green indicator means data is being received and inserted. Data rate is also shown.
<p>• Card IP Transmit Setup/Status</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p>Extraction 1.2 kb/s</p> <p>TX Status 1.2 kb/s</p> <p>Destination IP 10.99.16.101</p> <p>Destination Port 4000 ▼</p> <p>Extraction Mode Payload Only ▼</p> <div style="background-color: #333; color: white; padding: 2px; margin-top: 2px;">Payload Only</div> <div style="background-color: #ccc; padding: 2px; margin-top: 2px;">Formatted Packet</div> </div>	<p>Provides setup for destination IP address and shows card transmit status as follows:</p> <ul style="list-style-type: none"> • Extraction / Tx Status: Shows card extraction from stream to Tx status. <ul style="list-style-type: none"> - Stopped (with yellow indicator) means no data is being sent. - Green indicator means data is being extracted and sent. Data rate is also shown. • Destination IP/Port: Allows setting destination IP address and port. • Extraction Mode: Sets the IP data sent to consist of only payload, or send as formatted packets.

Table 3-2 9903-UDX-ADDA Function Menu List — continued


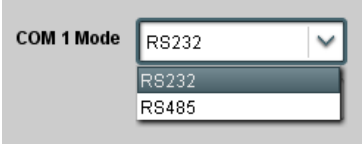
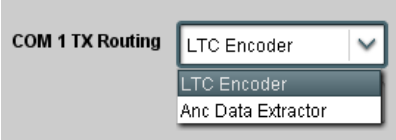
	<p>Provides controls for setting up the two COMM (serial) ports for LTC or ANC functions, and setting comm protocol for each port.</p>
<p>Note: This tab has identical independent controls for COM 1 and COM 2. Therefore, only the COM 1 controls are described here.</p>	
<p>• COM Mode (Protocol)</p> 	<p>Selects serial comm protocol for the respective port as RS-232 or RS-485.</p> <p>Note: Protocol choices should consider the payload to be carried. Typically, LTC is sent or received using only RS-485 serial protocol.</p>
<p>• COM Port Routing Function</p> 	<p>Selects port function for the respective port as LTC Encoder input or output, or ANC Data Extractor input or output.</p>

Table 3-2 9903-UDX-ADDA Function Menu List — continued


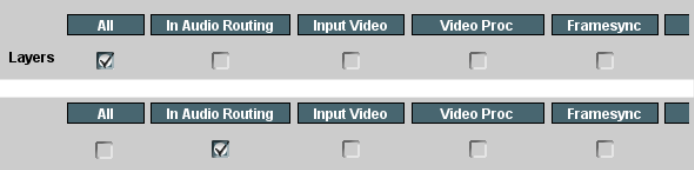

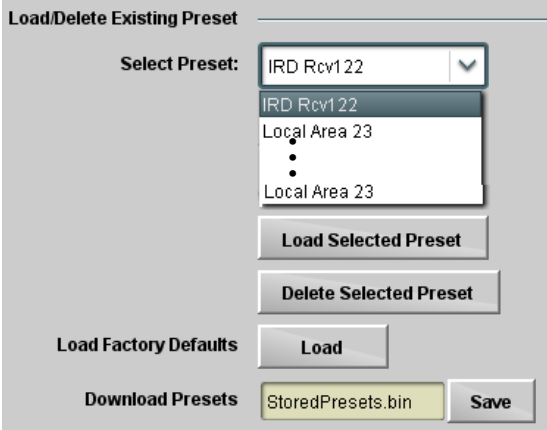
	<p>Allows user control settings to be saved in a Preset and then loaded (recalled) as desired, and provides a one-button restore of factory default settings.</p>
<p>• Preset Layer Select</p> <p>Allows selecting a functional layer (or “area of concern”) that the preset is concerned with. Limiting presets to a layer or area of concern allows for highly specific presets, and masks changing card settings in areas outside of the layer or area of concern.</p>  <p>Example: Since EAS audio routing can be considered independent of scaler settings, if normal audio routing was set up with a particular scaler setting in effect, and at a later time EAS audio routing is desired to be saved as a preset, selecting In Audio Routing here limits preset-invoked changes to only the audio routing layer, “telling” the preset save/load to not concern itself with scaler settings. In this manner, when the EAS audio routing preset is invoked any scaler settings in effect will remain untouched, with only the input audio routing changes invoked.</p>	<p>Default All setting will “look” at all device settings, and save and invoke all settings when the preset is invoked (loaded).</p> <p>Selecting a layer (in this example, “In Audio Routing”) will set the preset to only “look at” and “touch” input audio routing settings and save these settings under the preset. When the preset is invoked (loaded), only the input audio routing layer is “touched”.</p>
<p>• Preset Enter/Save/Delete</p>  <p>Protected state – changes locked out</p> <p>Ready (open) state – changes can be applied</p>	<p>Locks and unlocks editing of presets to prevent accidental overwrite as follows:</p> <ul style="list-style-type: none"> • Protect (ready): This state awaits Protected and allows preset Save/Delete button to save or delete current card settings to the selected preset. Use this setting when writing or editing a preset. • Protected: Toggle to this setting to lock down all presets from being inadvertently re-saved or deleted. Use this setting when all presets are as intended. • Create New Preset: Field for entering user-defined name for the preset being saved (in this example, “IRD Rcv122”). • Save: Saves the current card settings under the preset name defined above.
<p>• Preset Save/Load Controls</p> 	<ul style="list-style-type: none"> • Select Preset: drop-down allows a preset saved above to be selected to be loaded or deleted (in this example, custom preset “IRD Rcv122”). • Load Selected Preset button allows loading (recalling) the selected preset. When this button is pressed, the changes called out in the preset are immediately applied. • Delete Selected Preset button deletes the currently selected preset. • Load Factory Defaults button allows loading (recalling) the factory default preset. When this button is pressed, the changes called out in the preset are immediately applied. <p>Note: Load Factory Defaults functions with no masking. The Preset Layer Select controls have no effect on this control and will reset all layers to factory default.</p> <ul style="list-style-type: none"> • Download Presets saving the preset files to a folder on the connected computer.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

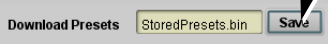

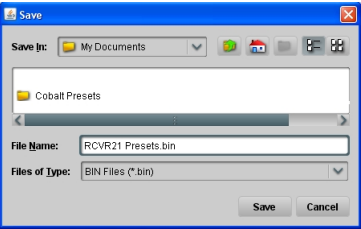
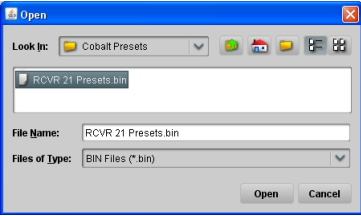
Presets	(continued)
<p>Download (save) card presets to a network computer by clicking Download Presets – Save at the bottom of the Presets page.</p>	<p>Upload (open) card presets from a network computer by clicking Upload at the bottom of DashBoard.</p>
	
<p>Browse to a desired save location (in this example, <i>My Documents\Cobalt Presets</i>). The file can then be renamed if desired (<i>RCVR21 Presets</i> in this example) before committing the save.</p>	<p>Browse to the location where the file was saved on the computer or drive (in this example, <i>My Documents\Cobalt Presets</i>).</p>
	
	<p>Note:</p> <ul style="list-style-type: none"> • Preset transfer between card download and file upload is on a group basis (i.e., individual presets cannot be downloaded or uploaded separately). • After uploading a presets file, engagement of a desired preset is only assured by selecting and loading a desired preset as described on the previous page.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

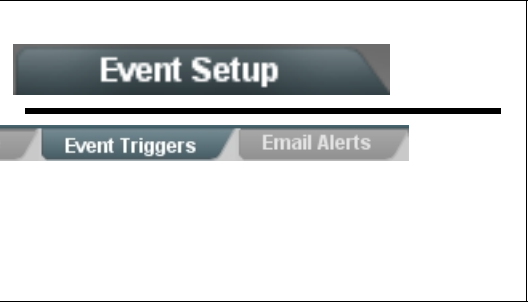

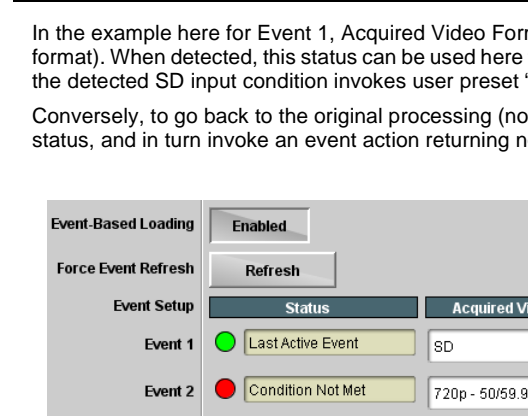
	<p>Provides event-based loading allowing a defined preset to be automatically engaged upon various received signal status. Actions can be “canned” control commands or user-defined by going to a user preset.</p> <p>Event-based loading is particularly useful for automated card setup when transitioning from normal processing to processing supporting an alternate format.</p>
 <ul style="list-style-type: none"> Event based preset loading is not passive and can result in very significant and unexpected control and signal processing changes if not properly used. If event based presets are not to be used, make certain the Event Based Loading button is set to Disabled. Because event based preset loading applies control changes by invoking presets, loading conditions cannot be nested within a called preset (event-based loading settings performed here cannot be saved to presets). <p>Event triggers allow a variety of event screening criteria, and in turn provide an Event Action “go to” in response to the detected event(s). For each screened criteria, categories can be set as “don’t care” or set to specific criteria to broaden or concentrate on various areas of concern.</p> <p>The Event based loading button serves as a master enable/disable for the function.</p> <p>Go-to Event Actions can be user-defined presets, “canned” (hard-coded) selections (such as GPO triggers or routing changes), or automated E-mail alert to a respondent (see Email Alerts (p. 3-51) for setting up e-mail alerts).</p>	<p>In the example here for Event 1, Acquired Video Format is used to screen for an SD input (rather than the normal 720p5994 format). When detected, this status can be used here to invoke a user preset (among numerous other actions). In this example, the detected SD input condition invokes user preset “upconvert to 720p”, which would be a scaler up-convert setting.</p> <p>Conversely, to go back to the original processing (no scaling), an event could be set up here looking for normal 720p input status, and in turn invoke an event action returning normal no-scaling operation (in this example, user preset “no scaling”).</p>
	<p>Note:</p> <ul style="list-style-type: none"> Screened conditions are triggered upon start of event. Any event-based setup must be done in advance of the triggering event in order for event to be detected. Loss of true conditions does not disengage an event-based triggering. A new set of true conditions must be defined and then occur to transition from one event-based trigger to another. Time required to engage an event-based trigger depends upon complexity of the called preset. (For example, a preset that invokes a scaler format change will take longer to engage than a preset involving only an audio routing change.) Make certain all definable event conditions that the device might be expected to “see” are defined in any of the Event 1 thru Event 32 rows. This makes certain that the device will always have a defined “go-to” action if a particular event occurs. For example, if the device is expected to “see” a 720p5994 stream or as an alternate, a 525i5994 stream, make certain both of these conditions are defined (with your desired go-to presets) in any two of the Event 1 thru Event 32 condition definition rows.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Event Setup

Event Triggers

Email Alerts

(continued)

User States is a special column which allows a logic state to be set (similar to a register or latch) whenever a defined condition is first triggered. A user state (which is latched until cleared by some other definable action) can be sucessively used with other user states, thereby allowing a final action to be invoked only when subordinate user states have been sequentially satisfied as true.

In the example here, two independent units are used for an EAS alert input (one box supplies alert key video, and the other supplies automated alert audio). Both communicate their ready signal each using edge-trigger GPO's which are fed to the respective GPI 1 and GPI 2 on the card. Because these two boxes are independent and cannot be relied upon to provide coinciding triggers, a chain of user state definers are used here to engage a preset routing key video and EAS audio routing when both states from both boxes are true in the order of GPI 1 first and then GPI 2 second for this example.

9903-UDX-ADDA

GPI 1

GPI 2

From EAS Keyer Box

From EAS Audio Box

Set User State 1

Clear User State 1 or 2

GPI 1

GPI 2

Set User State 2

Event Setup	Status	GPI	User States	Event Action:	
Event 1	Condition Met	GPI 1 Open->Closed	Don't Care	Set User State 1	GPI 1 (key) cue falling-edge sets user state 1
Event 2	Condition Met	GPI 2 Open->Closed	User State 1 Set	Set User State 2	GPI 2 (audio) cue falling-edge sets user state 2
Event 3	Condition Met	Don't Care	User State 2 Set	Set User State 3	User state 2 (which requires user state 1 being true first) sets state 3, which then invokes a preset to load settings to route EAS key and audio
Event 4	Last Active Event	Don't Care	User State 3 Set	Preset Load: EAS Key+Audio	
Event 5	Condition Not Met	Don't Care	User State 1 Cleared	Preset Load: Revert to Normal	When either GPI 1 or GPI 2 has a rising-edge trigger (cease EAS), user states 1 or 2 are cleared, thereby clearing user state 3. Either state change calls a preset to revert to normal operation.
Event 6	Condition Not Met	Don't Care	User State 2 Cleared	Preset Load: Revert to Normal	
Event 7	Condition Not Met	GPI 1 Closed->Open	Don't Care	Clear User State 1	
Event 8	Condition Not Met	GPI 2 Closed->Open	Don't Care	Clear User State 2	

Table 3-2 9903-UDX-ADDA Function Menu List — continued

<div>Event Setup</div> <div>Event TriggersEmail Alerts</div>	<p>Provides setup for automated Email alerts when an event has occurred.</p>
<p>As an Event Action choice on the Events Triggers sub-tab, an Email alert can be sent as a response. Set up email fields as shown in the example below.</p> <p>Note: Frame hosting the card must be accessible to email recipient's network. It is recommended to set up and generate a test event to test the email send.</p>	
<div>User Log</div>	<p>Automatically maintains a log of user actions and input lock status.</p>
<p>User Log shows input lock and other user conditions (with most recent event at top of list).</p> <p>Clear User Log clears all entries.</p> <p>Download Log File opens a browser allowing the log file to be saved on the host machine.</p>	

Last Event: Frozen video detected

To: joe.doe@xyzmedia.com

From: 9902slot8frame1A21@xyzmedia.com

SMTP User: frame1A21

SMTP Password: ●●●●●●●●

SMTP Server: smtp.gmail.com

SMTP Port: 25

When fields are filled-in to specify recipient and sender, and email alert is selected for Event Action on Event Triggers sub-tab page, recipient receives an email alert upon event, with the triggering event shown (in this example, "frozen video detected").

Time	Type	Event
22:40:36 12/02/15	Info	SDI Input sdi_in_c Locked to 720p 59.94
22:40:34 12/02/15	Info	SDI Input sdi_in_d Locked to 1080i 59.94
21:17:36 12/02/15	Info	SDI Input sdi_in_b Locked to 1080i 59.94
21:17:18 12/02/15	Info	Log file cleared
Clear User Log		Confirm
Download Log File		9922-FS.tar.gz Save

Table 3-2 9903-UDX-ADDA Function Menu List — continued

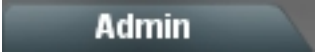
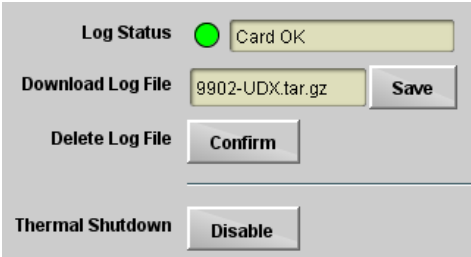
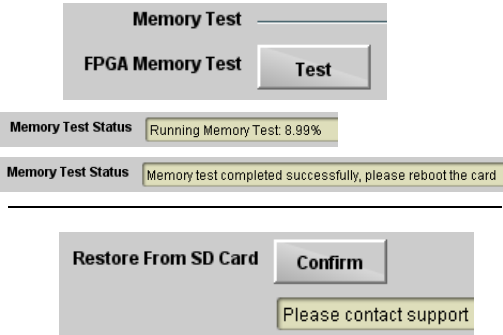


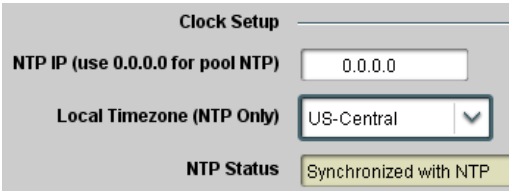
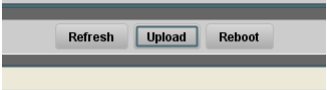
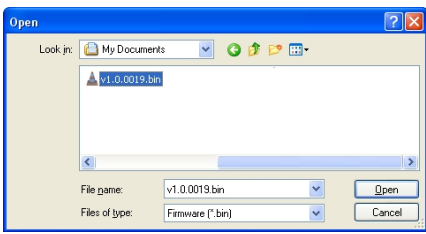
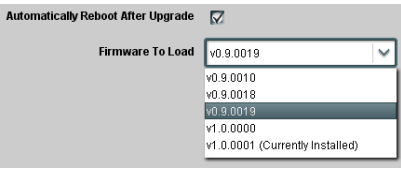
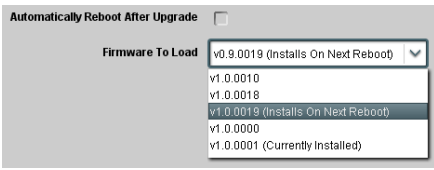
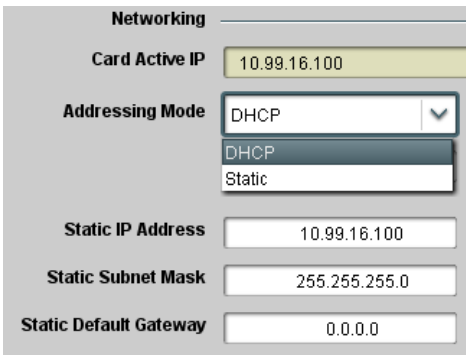
	<p>Provides a global card operating status and allows a log download for factory engineering support.</p> <p>Also provides controls for selecting and loading card firmware upgrade files, and for setting the card comm IP address.</p>
<p>• Log Status and Download Controls</p> 	<ul style="list-style-type: none"> • Log Status indicates overall card internal operating status. • Download Log File allows a card operational log file to be saved to a host computer. This log file can be useful in case of a card error or in the case of an operational error or condition. The file can be submitted to Cobalt engineering for further analysis. • Delete Log File deletes the currently displayed log file. A second confirmation dialog is displayed to back out of the delete if desired. • Thermal Shutdown enable/disable allows the built-in thermal failover to be defeated. (Thermal shutdown is enabled by default). <div style="border: 1px solid black; background-color: black; color: white; padding: 5px; text-align: center;">CAUTION</div> <p>The 9903-UDX-ADDA FPGA is designed for a normal-range operating temperature around 85° C core temperature. Operation in severe conditions exceeding this limit for non-sustained usage are within device operating safe parameters, and can be allowed by setting this control to Disable. However, the disable (override) setting should be avoided under normal conditions to ensure maximum card protection.</p>
<p>• Card Check and Restore Utilities</p> 	<p>Memory Test allows all cells of the card FPGA memory to be tested.</p>  <p>This control should only be activated under direction of product support. Exercising the memory test is not part of normal card maintenance.</p> <p>Restore from SD Card allows card rendered inoperable to be restored using an SD memory card fitted to the card internal SD slot.</p>  <p>Product support must be contacted prior to performing this operation. Use of any SD card not supplied by support can corrupt the card.</p>
<p>• NTP Clock Setup</p> 	<p>Allows device NTP clock IP source and localization. This is the clock/time device will use for logs and other recorded actions.</p> <ul style="list-style-type: none"> • NTP IP sets the IP address where NTP is to be obtained. • Local Timezone sets the recorded time to the localized time. • NTP Status shows if time is synced with NTP or if an error exists.

Table 3-2 9903-UDX-ADDA Function Menu List — continued

Admin	(continued)
<ul style="list-style-type: none"> • Firmware Upgrade Controls 	<p>Firmware upgrade controls allow a selected firmware version (where multiple versions can be uploaded to the card's internal memory) to invoke an upgrade to a selected version either instantly, or set to install on the next card reboot (thereby allowing card upgrade downtime to be controlled at a scheduled point in time).</p>
<p>Note: The page/tab here allows managing multiple firmware versions saved on the card. New upgrade firmware from our web site can always be directly uploaded to the card without using this page. Instructions for firmware downloading to your computer and uploading to the card can be found at the Support>Firmware Downloads link at www.cobaltdigital.com.</p>	
<ol style="list-style-type: none"> 1. Access a firmware upgrade file from a network computer by clicking Upload at the bottom of DashBoard. 2. Browse to the location of the firmware upgrade file (in this example, <i>My Documents\lv1.0.0019.bin</i>). 3. Select the desired file and click Open to upload the file to the card. 	 
<ul style="list-style-type: none"> • Immediate firmware upload. The card default setting of Automatically Reboot After Upgrade checked allow a selected firmware version to be immediately uploaded as follows: <ol style="list-style-type: none"> 1. Click Firmware To Load and select the desired upgrade file to be loaded (in this example, "v1.0.0019"). 2. Click Load Selected Firmware. The card now reboots and the selected firmware is loaded. <ul style="list-style-type: none"> • Deferred firmware upload. With Automatically Reboot After Upgrade unchecked, firmware upgrade loading is held off until the card is manually rebooted. This allows scheduling a firmware upgrade downtime event until when it is convenient to experience to downtime (uploads typically take about 60 seconds). <ol style="list-style-type: none"> 1. Click Firmware To Load and select the desired upgrade file to be loaded (in this example, "v1.0.0019"). Note now how the display shows "Installs on Next Reboot". 2. Click Load Selected Firmware. The card holds directions to proceed with the upload, and performs the upload only when the card is manually rebooted (by pressing the Reboot button). 3. To cancel a deferred upload, press Cancel Pending Upgrade. The card reverts to the default settings that allow an immediate upload/upgrade. 	 
<ul style="list-style-type: none"> • Card Network Setup Controls 	<p>Note:</p> <ul style="list-style-type: none"> • The IP address setting here is independent of a frame IP typically used for DashBoard or other frame/card remote control. • The IP address setting here is required if the card Ancillary Data Proc Controls function is to send or receive data via IP. If IP comm with Ancillary Data Proc Controls is not required, setting these fields can be ignored. See Ancillary Data Proc Controls (p. 3-43) for more information. • Addressing Mode allows setting address to static (user) address or via DHCP (where a DHCP server is available for the connection). • Static IP Address, Static Subnet Mask, and Static Default Gateway fields allow setting IP parameters when Static mode is selected. • Card Active IP shows the currently configured IP address (whether static or DHCP).

Troubleshooting

This section provides general troubleshooting information and specific symptom/corrective action for the 9903-UDX-ADDA card and its remote control interface. The 9903-UDX-ADDA card requires no periodic maintenance in its normal operation; if any error indication (as described in this section) occurs, use this section to correct the condition.

Error and Failure Indicator Overview

The 9903-UDX-ADDA card itself and its remote control systems all (to varying degrees) provide error and failure indications. Depending on how the 9903-UDX-ADDA card is being used (i.e, standalone or network controlled through DashBoard™ or a Remote Control Panel), check all available indications in the event of an error or failure condition.

The various 9903-UDX-ADDA card and remote control error and failure indicators are individually described below.

Note: The descriptions below provide general information for the various status and error indicators. For specific failures, also use the appropriate subsection listed below.

- Basic Troubleshooting Checks (p. 3-58)
- 9903-UDX-ADDA Processing Error Troubleshooting (p. 3-59)
- Troubleshooting Network/Remote Control Errors (p. 3-60)

9903-UDX-ADDA Card Edge Status/Error Indicators and Display

Figure 3-7 shows and describes the 9903-UDX-ADDA card edge status indicators and display. These indicators and the display show status and error conditions relating to the card itself and remote (network) communications (where applicable). Because these indicators are part of the card itself and require no external interface, the indicators are particularly useful in the event of communications problems with external devices such as network remote control devices.

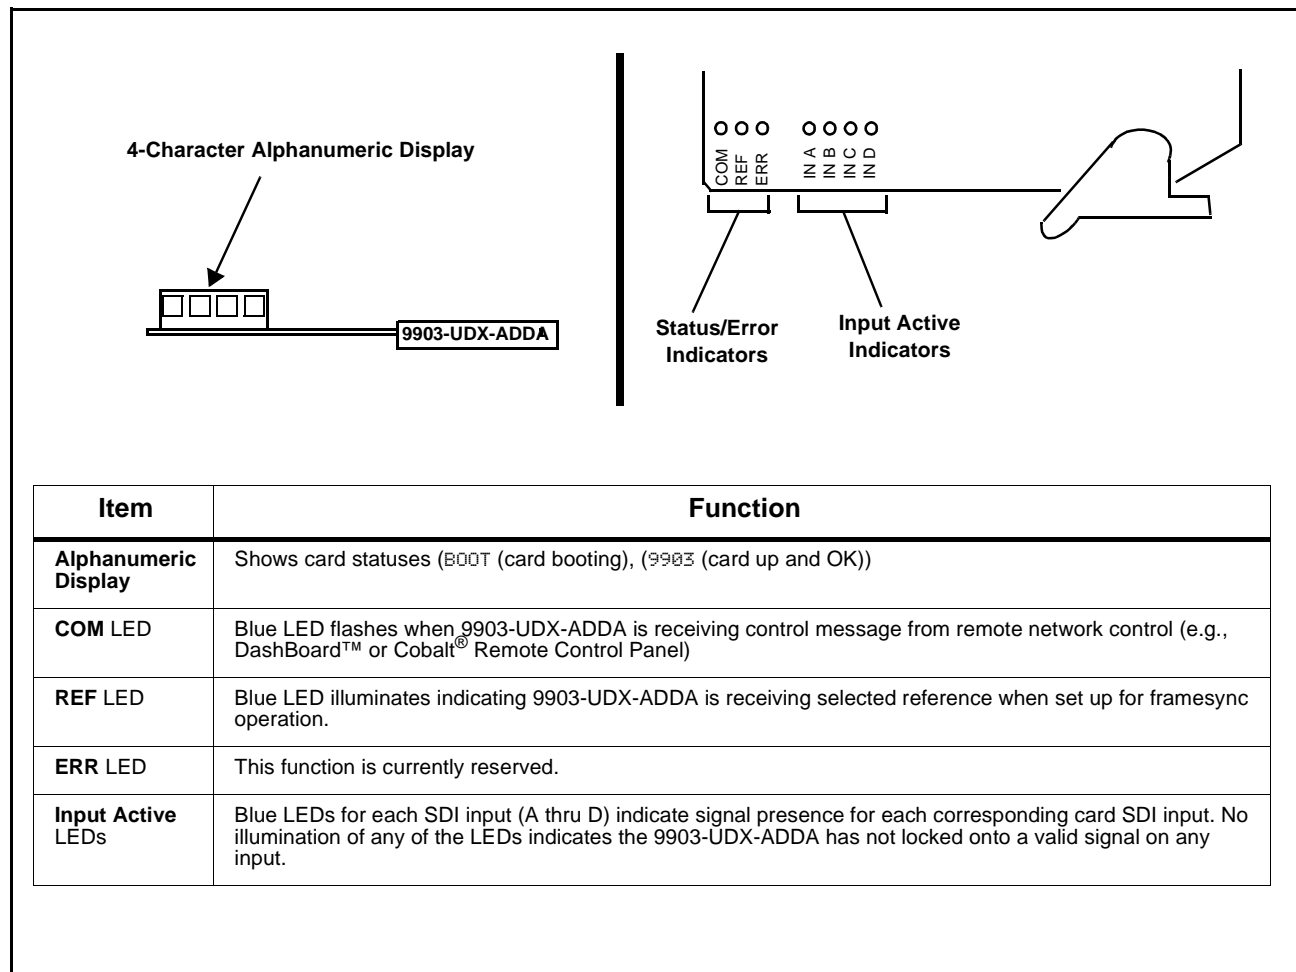


Figure 3-7 9903-UDX-ADDA Card Edge Status Indicators and Display

DashBoard™ Status/Error Indicators and Displays

Figure 3-8 shows and describes the DashBoard™ status indicators and displays. These indicator icons and displays show status and error conditions relating to the 9903-UDX-ADDA card itself and remote (network) communications.

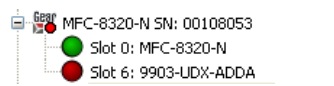
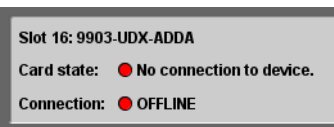
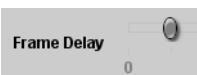
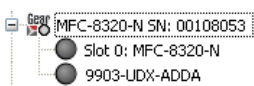
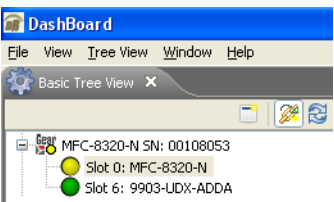

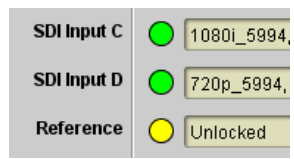
Indicator Icon or Display	Error Description
 <p>MFC-8320-N SN: 00108053 Slot 0: MFC-8320-N Slot 6: 9903-UDX-ADDA</p>  <p>Slot 16: 9903-UDX-ADDA Card state: ● No connection to device. Connection: ● OFFLINE</p>  <p>Frame Delay 0 </p>	<p>Red indicator icon in Card Access/Navigation Tree pane shows card with Error condition (in this example, the Card Access/Navigation Tree pane shows a general error issued by the 9903-UDX-ADDA card in slot 6).</p> <p>Specific errors are displayed in the Card Info pane (in this example “No connection to device” indicating 9903-UDX-ADDA card is not connecting to frame/LAN).</p> <p>If the 9903-UDX-ADDA card is not connecting to the frame or LAN, all controls are grayed-out (as shown in the example here).</p>
 <p>MFC-8320-N SN: 00108053 Slot 0: MFC-8320-N 9903-UDX-ADDA</p>	<p>Gray indicator icon in Card Access/Navigation Tree pane shows card(s) are not being seen by DashBoard™ due to lack of connection to frame LAN (in this example, both a 9903-UDX-ADDA card in slot 6 and the MFC-8320-N Network Controller Card for its frame in slot 0 are not being seen).</p>
 <p>DashBoard File View Tree View Window Help Basic Tree View X MFC-8320-N SN: 00108053 Slot 0: MFC-8320-N Slot 6: 9903-UDX-ADDA</p>  <p>MFC-8320-N SN: 00108053 MFC-8320-N Card state: ● Fan Door Open Connection: ● ONLINE</p>	<p>Yellow indicator icon in Card Access/Navigation Tree pane shows card with Alert condition (in this example, the Card Access/Navigation Tree pane shows a general alert issued by the MFC-8320-N Network Controller Card).</p> <p>Clicking the card slot position in the Card Access/Navigation Tree (in this example Network Controller Card “Slot 0: MFC-8320-N”) opens the Card Info pane for the selected card. In this example, a “Fan Door Open” specific error is displayed.</p>
 <p>SDI Input C ● 1080i_5994, SDI Input D ● 720p_5994, Reference ● Unlocked</p>	<p>Yellow indicator icon in 9903-UDX-ADDA Card Info pane shows error alert, along with cause for alert (in this example, the 9903-UDX-ADDA is not receiving an enabled framesync source).</p>

Figure 3-8 DashBoard™ Status Indicator Icons and Displays

Access Card Info panes for specific cards by clicking the card slot position in the Card Access/Navigation Tree pane (as shown in the example in Figure 3-9).

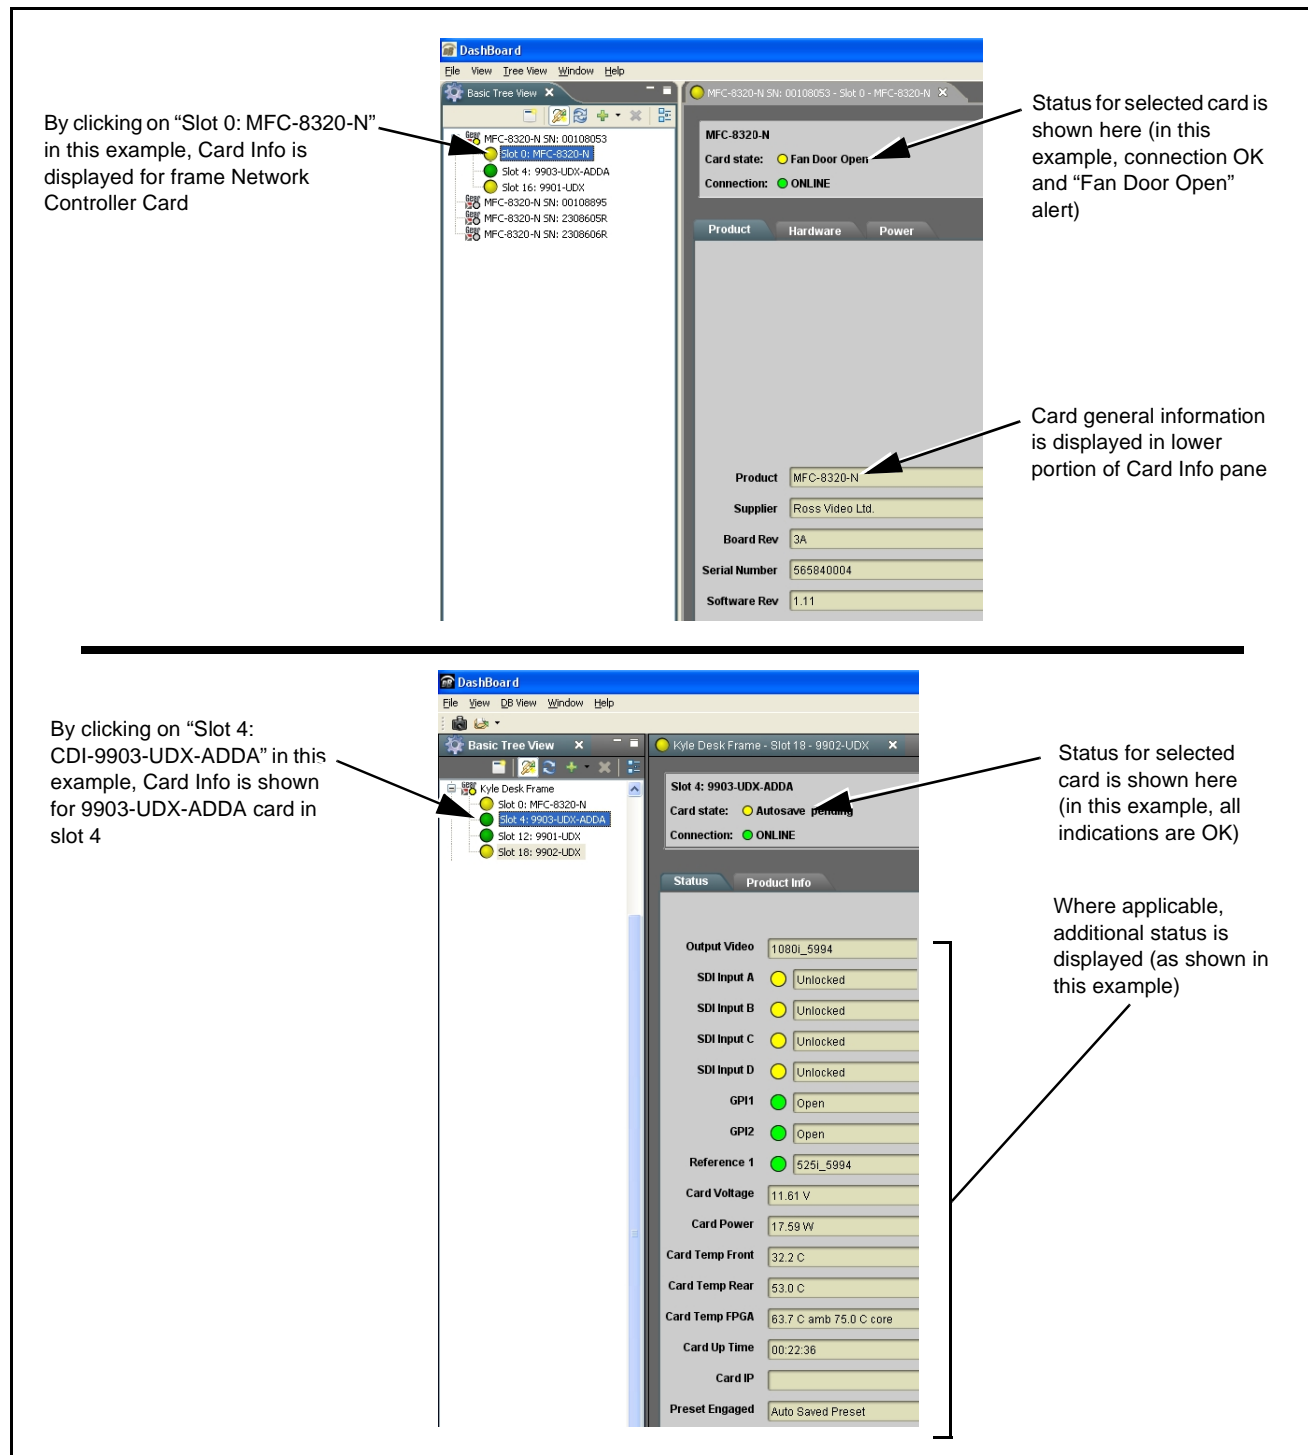


Figure 3-9 Selecting Specific Cards for Card Info Status Display

Basic Troubleshooting Checks

Failures of a general nature (affecting many cards and/or functions simultaneously), or gross inoperability errors are best addressed first by performing basic checks before proceeding further. Table 3-3 provides basic system checks that typically locate the source of most general problems. If required and applicable, perform further troubleshooting in accordance with the other troubleshooting tables in this section.

Table 3-3 Basic Troubleshooting Checks

Item	Checks
Verify power presence and characteristics	<ul style="list-style-type: none"> On both the frame Network Controller Card and the 9903-UDX-ADDA, in all cases when power is being properly supplied there is always at least one indicator illuminated. Any card showing no illuminated indicators should be cause for concern. Check the Power Consumed indication for the 9903-UDX-ADDA card. This can be observed using the DashBoard™ Card Info pane. <ul style="list-style-type: none"> If display shows no power being consumed, either the frame power supply, connections, or the 9903-UDX-ADDA card itself is defective. If display shows excessive power being consumed (see Technical Specifications (p. 1-12) in Chapter 1, "Introduction"), the 9903-UDX-ADDA card may be defective.
Check Cable connection secureness and connecting points	Make certain all cable connections are fully secure (including coaxial cable attachment to cable ferrules on BNC connectors). Also, make certain all connecting points are as intended. Make certain the selected connecting points correlate to the intended card inputs and/or outputs. Cabling mistakes are especially easy to make when working with large I/O modules.
Card seating within slots	Make certain all cards are properly seated within its frame slot. (It is best to assure proper seating by ejecting the card and reseating it again.)
Check status indicators and displays	On both DashBoard™ and the 9903-UDX-ADDA card edge indicators, red indications signify an error condition. If a status indicator signifies an error, proceed to the following tables in this section for further action.
Troubleshoot by substitution	All cards within the frame can be hot-swapped, replacing a suspect card or module with a known-good item.

9903-UDX-ADDA Processing Error Troubleshooting

Table 3-4 provides 9903-UDX-ADDA processing troubleshooting information. If the 9903-UDX-ADDA card exhibits any of the symptoms listed in Table 3-4, follow the troubleshooting instructions provided.

In the majority of cases, most errors are caused by simple errors where the 9903-UDX-ADDA is not appropriately set for the type of signal being received by the card.

Note: The error indications shown below are typical for the corresponding error conditions listed. Other error indications not specified here may also be displayed on DashBoard™ and/or the 9903-UDX-ADDA card edge status indicators.

Note: Where errors are displayed on both the 9903-UDX-ADDA card and network remote controls, the respective indicators and displays are individually described in this section.

Table 3-4 Troubleshooting Processing Errors by Symptom


Symptom	Error/Condition	Corrective Action
<ul style="list-style-type: none"> DashBoard™ shows Unlocked message in 9903-UDX-ADDA Card Info pane  <ul style="list-style-type: none"> Card edge Input LED corresponding to input is not illuminated 	No video input present	Make certain intended video source is connected to appropriate 9903-UDX-ADDA card video input. Make certain BNC cable connections between frame Rear I/O Module for the card and signal source are OK.
Ancillary data (closed captioning, timecode) not transferred through 9903-UDX-ADDA	<ul style="list-style-type: none"> Control(s) not enabled 	<ul style="list-style-type: none"> Make certain respective control is set to On or Enabled (as appropriate).
	<ul style="list-style-type: none"> VANC line number conflict between two or more ancillary data items 	<ul style="list-style-type: none"> Make certain each ancillary data item to be passed is assigned a unique line number (see Ancillary Data Line Number Locations and Ranges on page 3-9).
Audio not processed or passed through card	Enable control not turned on	On Output Audio Routing/Controls tab, Audio Group Enable control for group 1 thru 4 must be turned on for sources to be embedded into respective embedded channel groups.
Selected upgrade firmware will not upload	Automatic reboot after upgrade turned off	Card Presets > Automatically Reboot After Upgrade box unchecked. Either reboot the card manually, or leave this box checked to allow automatic reboot to engage an upgrade upon selecting the upgrade.

Table 3-4 Troubleshooting Processing Errors by Symptom — continued

Symptom	Error/Condition	Corrective Action
Card does not pass video or audio as expected. Control settings spontaneously changed from expected settings.	Event-based preset inadvertently invoked	Event-based preset loading (Presets tab > Event Triggers sub-tab) should be set to Disabled if this function is not to be used. Read and understand this control description before using these controls to make sure engagement for all expected conditions is considered. See Presets (p. 3-47) for more information.
Card will not retain user settings, or setting changes or presets spontaneously invoke.	Event Based Loading sub-tab inadvertently set to trigger on event	If event based loading is not to be used, make certain Event Based Presets is disabled (either using master Enable/Disable control or through events settings. See Presets (p. 3-47) for more information.

Troubleshooting Network/Remote Control Errors

Refer to Cobalt® reference guide “Remote Control User Guide” (PN 9000RCS-RM) for network/remote control troubleshooting information.

In Case of Problems

Recovering Card From SD Memory Card

New production cards come equipped with an SD card installed in a slot receptacle on the underside of the card. The data on this SD card can be used to restore a card should the card become unresponsive (can’t communicate with DashBoard or other remote control). Recovering a card using the procedure here will restore the card to any installed option licenses and the most recent firmware installed.

1. (See Figure 3-10.) Make certain the card has the proper SD card installed in the under-card slot. If SD card is **not** installed, contact Product Support to obtain an SD card.

- Note:**
- (Option +TTS only) Cards shipped with option +TTS use an SD card for the TTS library in addition to recovery files. If your +TTS-equipped device was received **earlier than December 2015**, your SD may not contain the recovery files. Contact Product Support to obtain the updated SD card containing both TTS library and SD recovery files.
 - If unit is a BBG-1000 Series device, remove the top cover before proceeding.

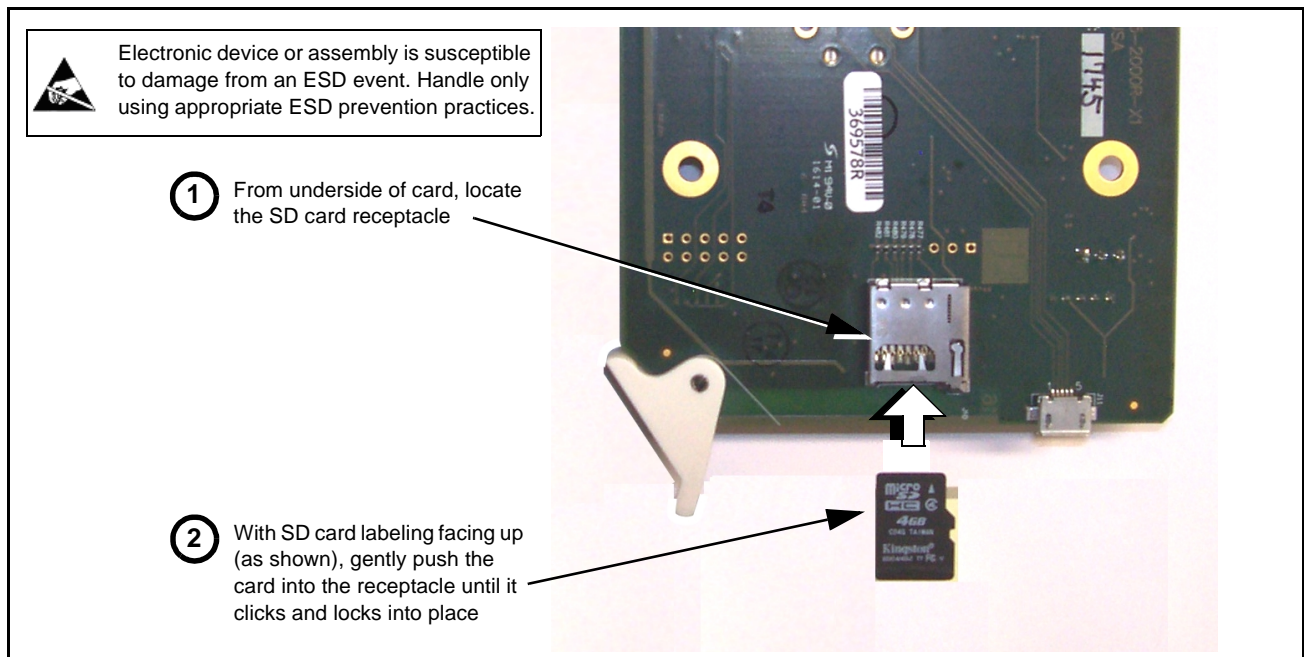


Figure 3-10 SD Card Installation

2. (See Figure 3-11.) With card powered-down, locate the **MMC BOOT** button on the card. Proceed as shown in picture.

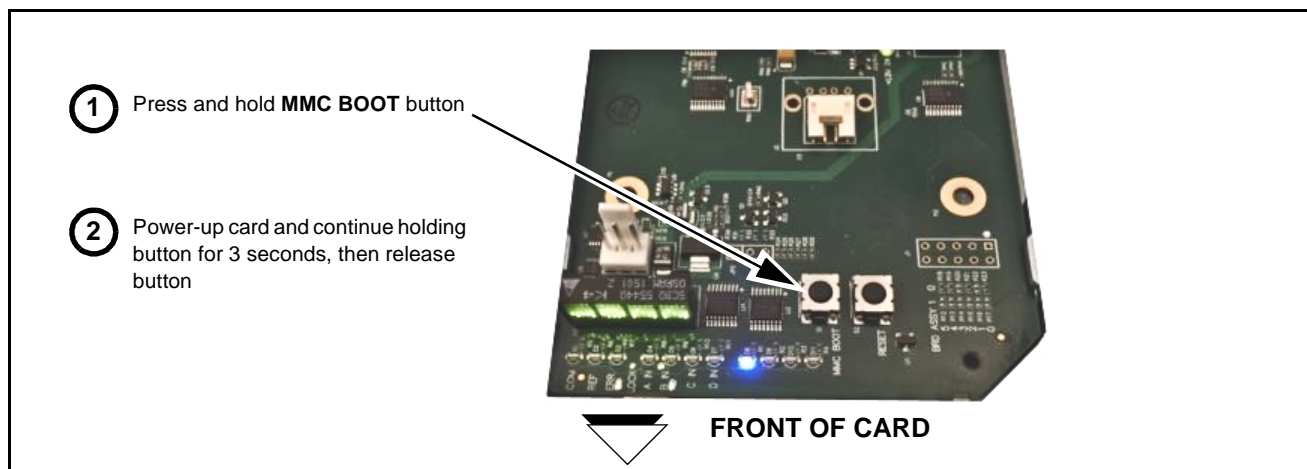


Figure 3-11 MMC Boot Button

3. With button now released, the card will begin reprogramming:
- **COM** LED illuminates and remains illuminated.
 - When reprogram is complete, **COM** LED turns off, on, and then off again (entire process takes about 1-1/2 minute).
4. Remove power from the card (remove card from slot or power-down BBG-1000 Series unit).

5. Re-apply power to the card. The card/device will display as “**UNLICENSED**” in DashBoard/remote control.
6. In Dashboard or web remote control, go to **Admin** tab and click **Restore from SD Card**. After about 1/2-minute, the card license(s) will be restored and card will be using its most recently installed firmware.
7. Card/device can now be used as normal. On BBG-1000 Series unit, re-install top cover.

Contact and Return Authorization

Should any problem arise with this product that was not solved by the information in this section, please contact the Cobalt Digital Inc. Technical Support Department.

If required, a Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions. If required, a temporary replacement item will be made available at a nominal charge. Any shipping costs incurred are the customer's responsibility. All products shipped to you from Cobalt Digital Inc. will be shipped collect.

The Cobalt Digital Inc. Technical Support Department will continue to provide advice on any product manufactured by Cobalt Digital Inc., beyond the warranty period without charge, for the life of the product.

See Contact Cobalt Digital Inc. (p. 1-20) in Chapter 1, “Introduction“ for contact information.



Cobalt Digital Inc.

2506 Galen Drive
Champaign, IL 61821
Voice 217.344.1243 • Fax 217.344.1245
www.cobaltdigital.com